





Ref No	Part No	Description
1	11100-44A20	Head Assy, Cylinder
2	11115-05270	• . Guide, Valve
3	09381-10004	• . Snap Ring
4	09206-08001	• . Pin
5	01550-06353	• . Bolt
6	01550-06603	• . Bolt
7	11141-05201	Gasket, Cylinder Head
7	11141-05202	Gasket, Cylinder Head
8	04211-11169	Knock Pin
9	09168-06023	Gasket (5.8x13x1.2)
10	08316-10083	Nut
11	09159-08074	Nut
12	09160-08053	Gasket (8.5x19x2.3)
13	09168-08021	Gasket (8.5x17x2.3)
14	09482-00223	Spark Plug (denso,x24esr-u)
14	09482-00399	Spark Plug (ngk,dr8ea)
15	11175-18900	Cap, Inspection
16	09280-30001	O Ring (d:3,id:29.5)
17	09241-22002	Plug
18	11151-45000	Pad, Cylinder Head Rubber
19	13101-44A20	Pipe, Intake
19a	13118-44A20	• . O Ring
20	02112-36163	Screw
21	09402-48208	Clamp
22	09103-08082	Bolt (8x50)
23	08319-31083	Nut
24	11401-05884	Gasket Set

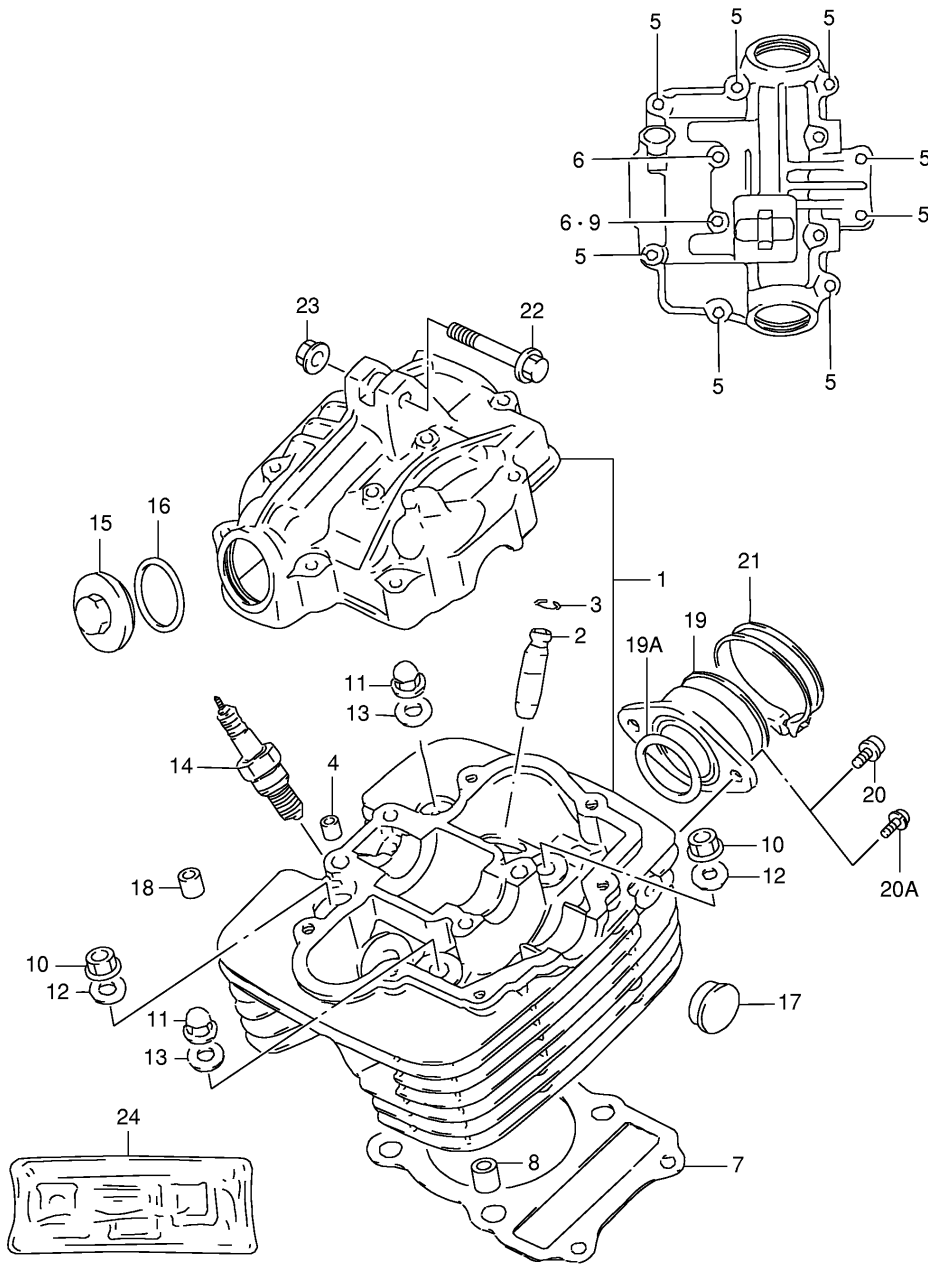




Ref No	Part No	Description
1	11210-44A10	Cylinder
2	09108-08062	Stud Bolt (8x150)
3	09108-08089	Stud Bolt (8x155)
4	01421-06253	Stud Bolt
5	08316-10063	Nut
6	11241-05311	Gasket, Cylinder
7	04211-11149	Knock Pin

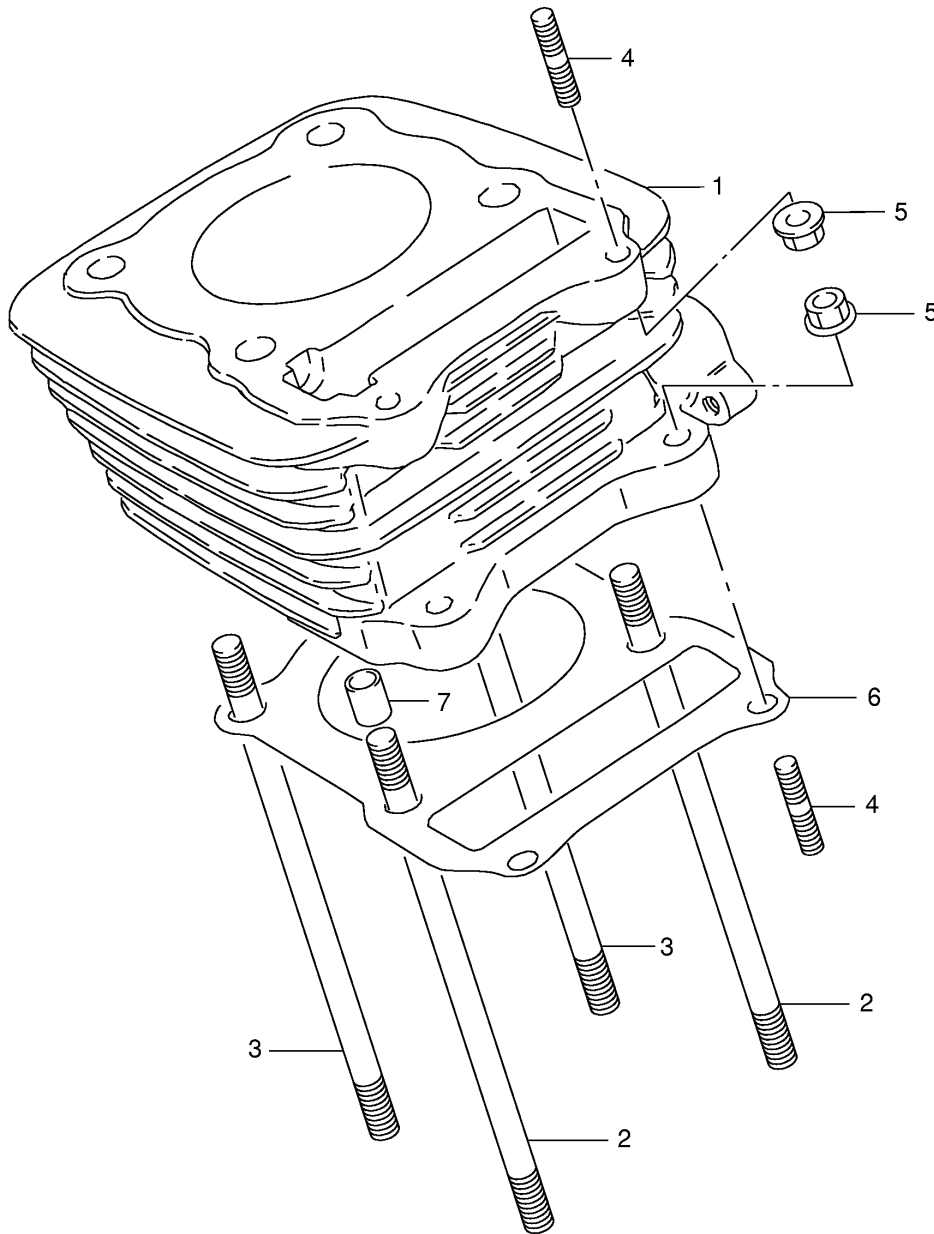

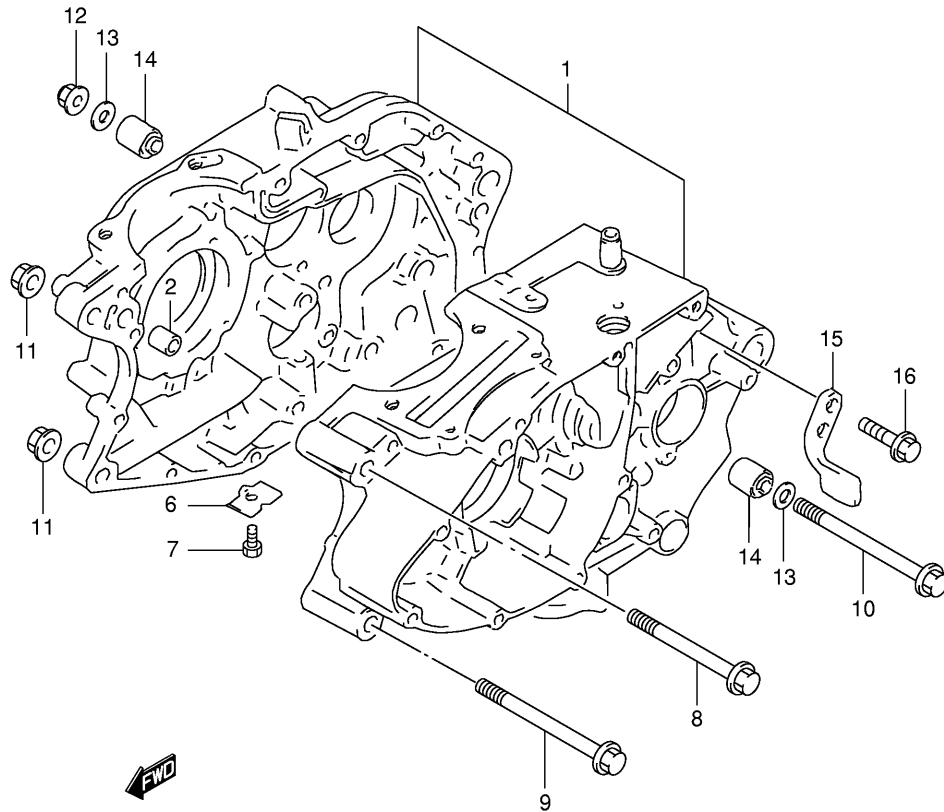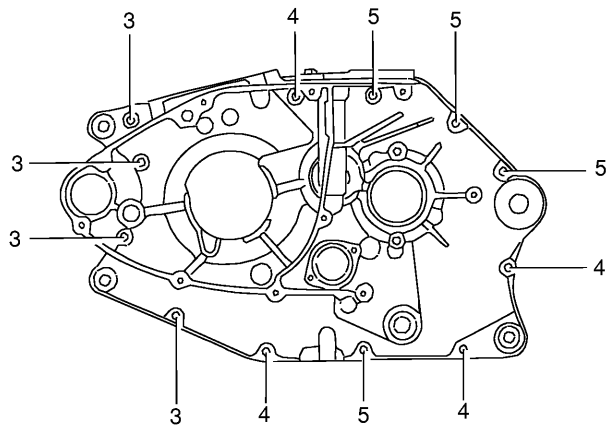


Ref No	Part No	Description
1	11300-42A20	Crankcase Assy
1	11300-42A21	Crankcase Assy
1	11300-42A30	Crankcase Assy
1	11300-42A31	Crankcase Assy
2	04211-13189	• . Knock Pin
3	01547-06553	• . Bolt
4	01547-06603	• . Bolt
5	01547-06753	• . Bolt
6	11319-05200	• . Plate, Oil Gallery Plug
7	01500-06103	• . Bolt
8	09103-10240	Bolt (10x80)
9	09103-10061	Bolt (10x90)
10	09103-08138	Bolt (8x115)
11	08319-31105	Nut (black)
11	08319-31103	Nut (green)
12	08319-31083	Nut
13	08212-08182	Washer
14	09319-08032	Bush



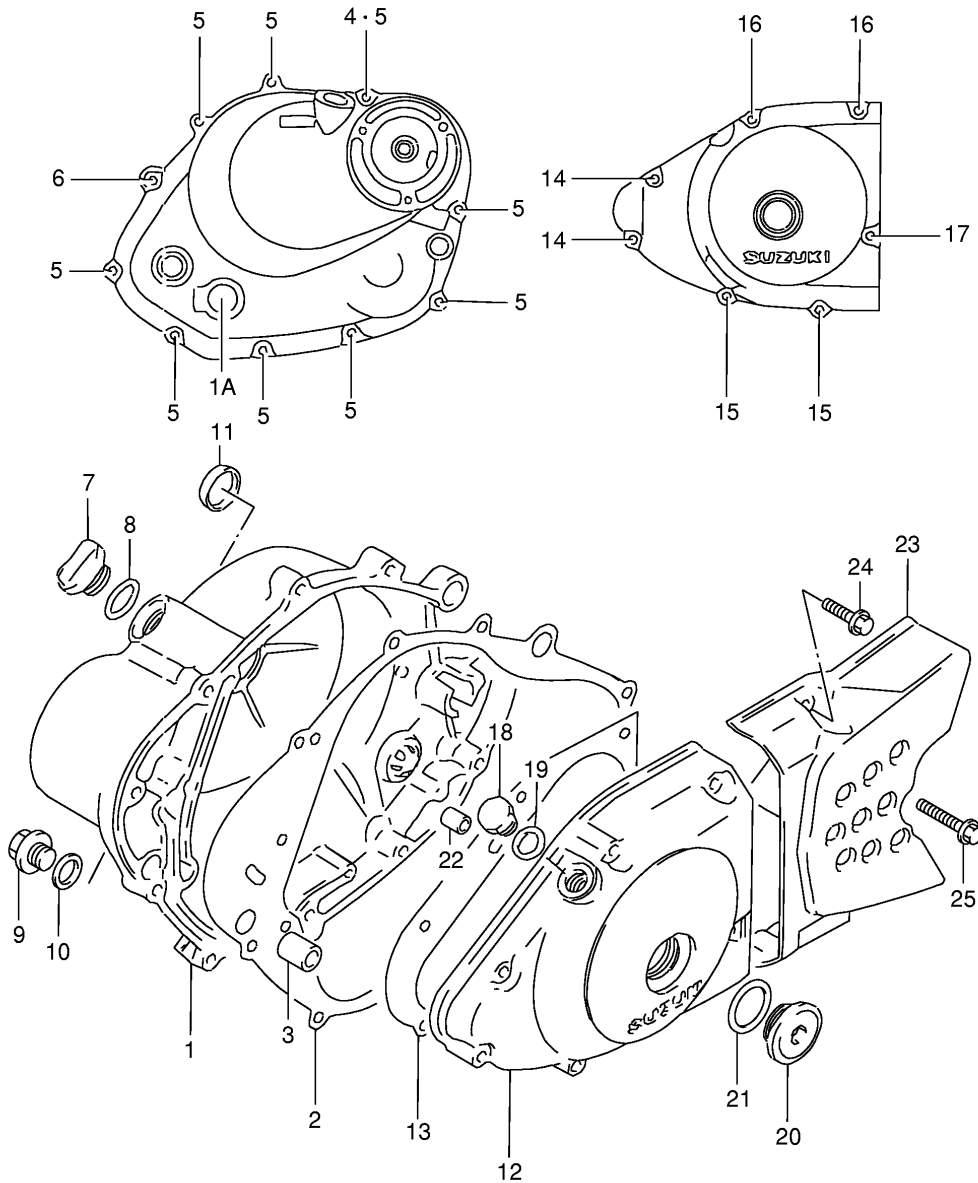


Ref No	Part No	Description
1	11340-42A20	Cover, Clutch
1a	11971-45010	• Lens, Oil Level
2	11482-05211	Gasket, Clutch Cover
3	04211-13189	Knock Pin
4	09168-06024	Gasket (5.8x11x1.2)
4	09168-06023	Gasket (5.8x13x1.2)
5	01547-06303	Bolt
6	01547-06453	Bolt
7	09259-20019	Plug (20x10)
8	09280-17003	O Ring (d:3.1,id:16.8)
9	09247-14026	Plug
10	09168-14002	Gasket (13.8x18.8x0.4)
11	11342-12C51	Plug, Clutch Cover Kick
12	11351-42A20	Cover, Magneto
13	11483-05312	Gasket, Magneto Cover
14	01547-06303	Bolt
15	01547-06353	Bolt
16	01547-06403	Bolt
17	01547-06503	Bolt
18	09247-12104	Plug
19	09168-12002	Gasket (12x16x2)
20	09259-26011	Plug
21	09280-22008	O Ring (d:3.1,id:22.7)
22	04211-09129	Knock Pin
23	11360-44A20	Cover, Engine Sprocket
24	01547-06253	Bolt
25	01547-06353	Bolt




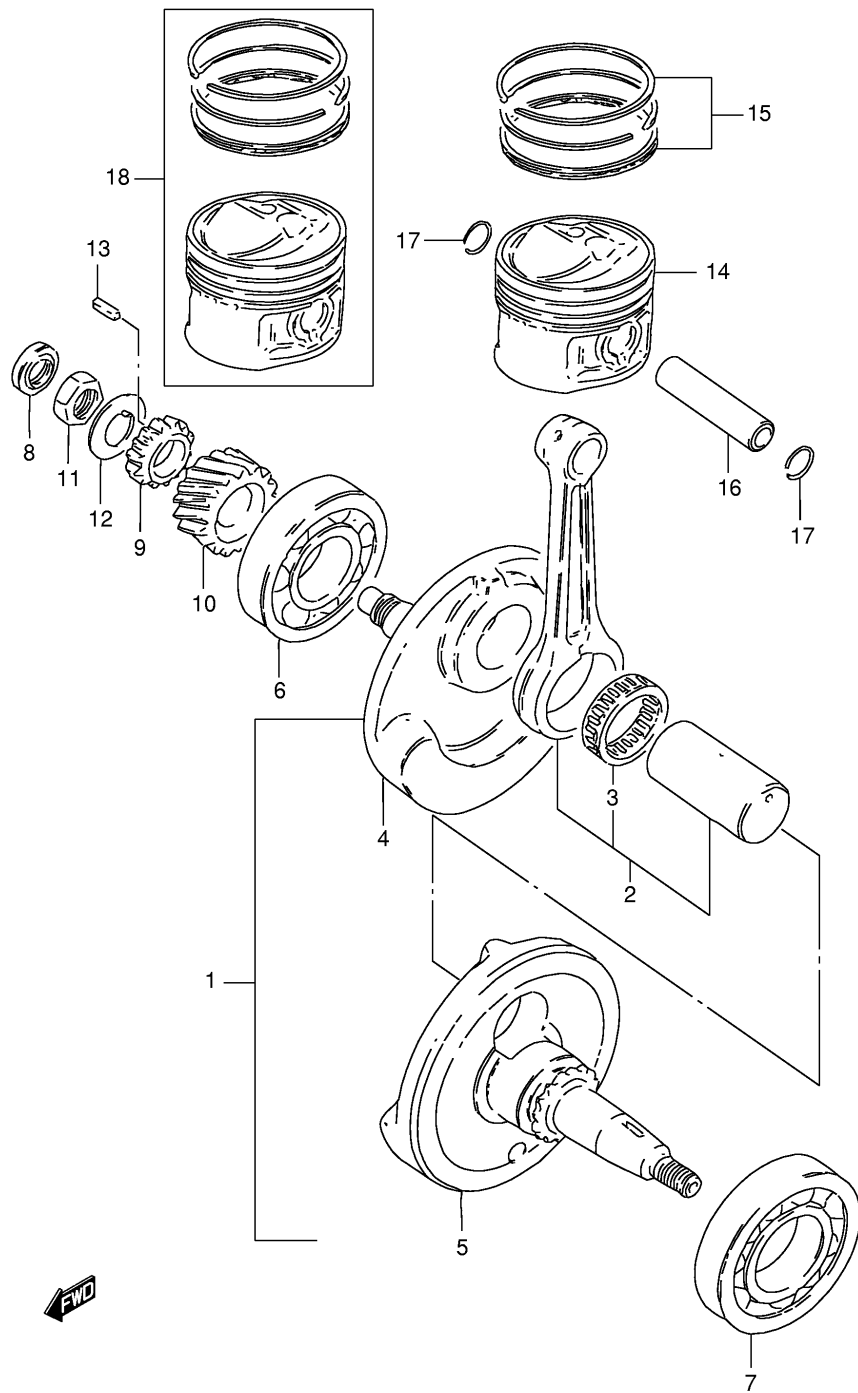

Ref No	Part No	Description
1	12200-05340	Crankshaft Assy
2	12105-05821	• . Rod Set, Connecting
3	09263-28027-0B0	•• .. Bearing (28x36x15.8)
4	12221-05210	• . Crankshaft, Rh
5	12261-05301	• . Crankshaft, Lh
6	09262-28014	Bearing, Rh (28x68x18)
7	09262-35038	Bearing, Lh (35x72x17)
8	09282-12009	Oil Seal (12x21x7)
9	16321-05201	Gear, Oil Pump Drive
10	21111-05200	Gear, Primary Drive (nt:17)
11	09140-16019	Nut
12	09166-16012	Washer
13	09421-04004	Key
14	12111-05202-0F0	Piston
15	12140-01410	Ring Set, Piston
16	12151-05220	Pin, Piston
17	09381-14001	Snap Ring
18	12100-05200-050	Piston Set (os:0.5)
18	12100-05200-100	Piston Set (os:1.0)


Ref No	Part No	Description
1	12611-05300	Gear, Starter Idler
2	09206-13003	Pin
3	09180-13006	Spacer
4	12600-05872	Clutch Set, Starter
5	09263-22031	. Bearing
6	09261-10003	. Roller
7	09440-03004	. Spring
8	12633-05300	. Piece, Push
9	07130-06163	Bolt
10	12649-05300	Shim, Starter Clutch Hub

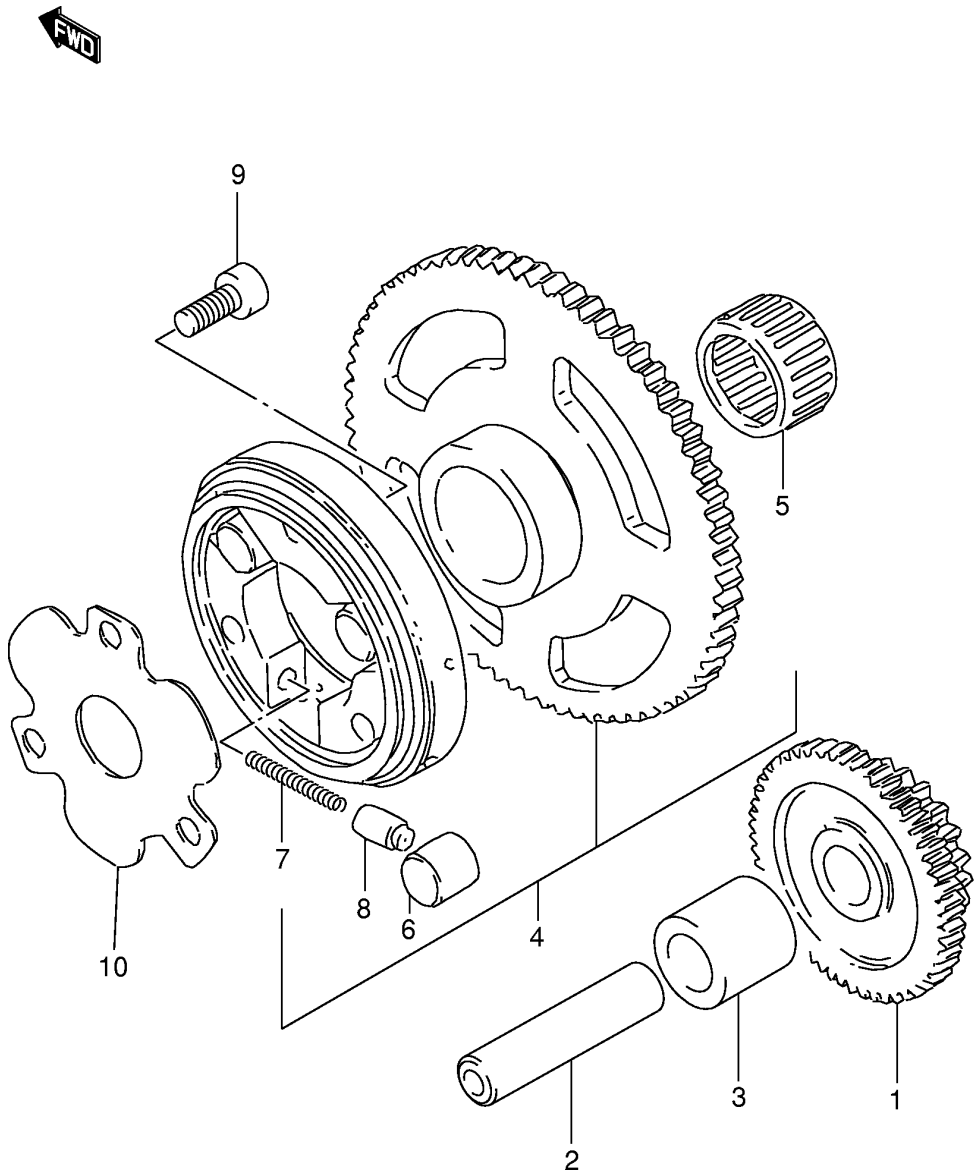

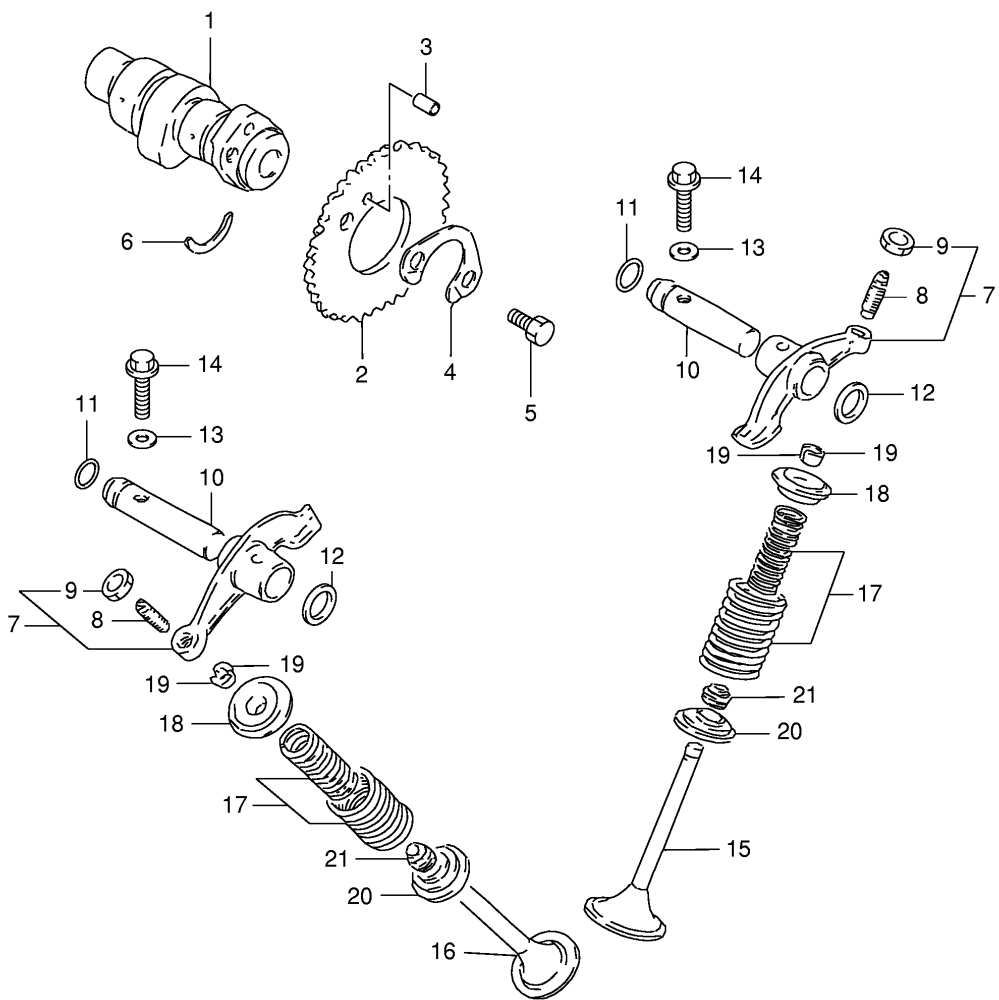


Ref No	Part No	Description
1	12711-44A02	Cam Shaft
2	12741-05201	Sprocket, Cam Shaft (nt:32)
3	09261-05005	Roller
4	12747-05201	Washer, Sprocket
5	09111-06032	Bolt
6	09390-22002	C Ring
7	12850-25C00	Arm, Valve Rocker
8	12842-32411	• . Screw, Adjusting
9	12843-32400	• . Nut
10	12861-05201	Shaft, Valve Rocker Arm
11	09280-09005	O Ring (d:1.9,id:8.6)
12	09164-12021	Washer
13	09168-06023	Gasket (5.8x13x1.2)
14	01550-06253	Bolt
15	12911-04B00	Valve, Intake
16	12912-24400	Valve, Exhaust
17	12920-05240	Spring Set, Valve
18	12931-49200	Retainer, Valve Spring
19	12932-24400	Cotter, Valve
20	12933-49201	Seat, Valve Spring
21	09289-05015	Oil Seal



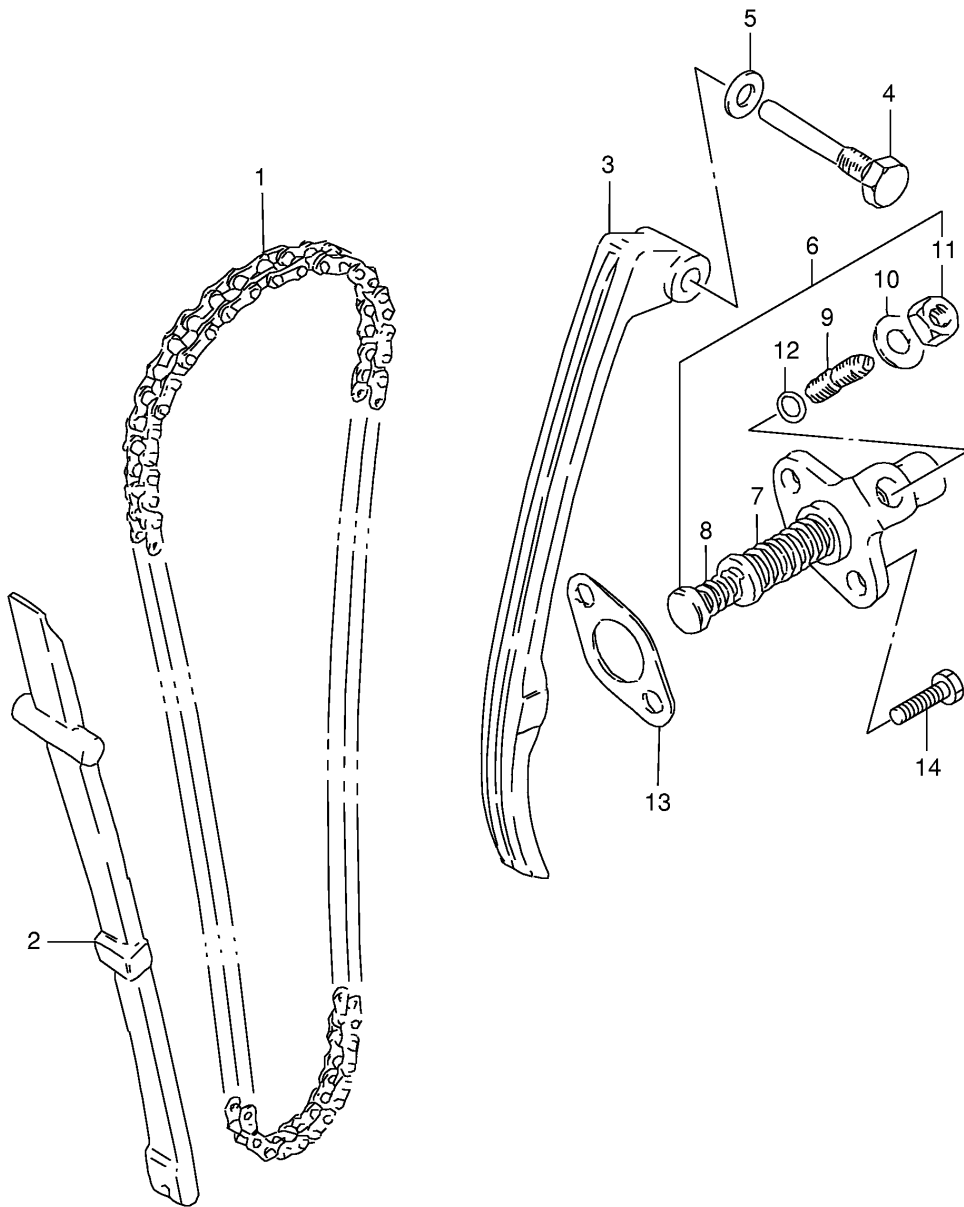


Ref No	Part No	Description
1	12760-44A00	Chain, Cam Shaft Drive
2	12771-05200	Guide, Cam Chain
3	12811-05220	Tensioner, Cam Chain
4	12812-32410	Bolt, Cam Chain Tensioner
5	09168-08008	Gasket (8.2x14x1)
6	12830-05200	Adjuster Assy, Tensioner
6	12830-05202	Adjuster Assy, Tensioner
7	09440-12030	• Spring
8	09440-09018	• Spring
8	09440-08035	• Spring
9	12838-45001	• Screw
10	08322-01083	• Washer
11	08310-00083	• Nut
11	08316-10083	• Nut
12	09280-06005	• O Ring (d:1.9,id:5.7)
13	12837-32410	Gasket, Tensioner Adjuster
14	01500-06203	Bolt



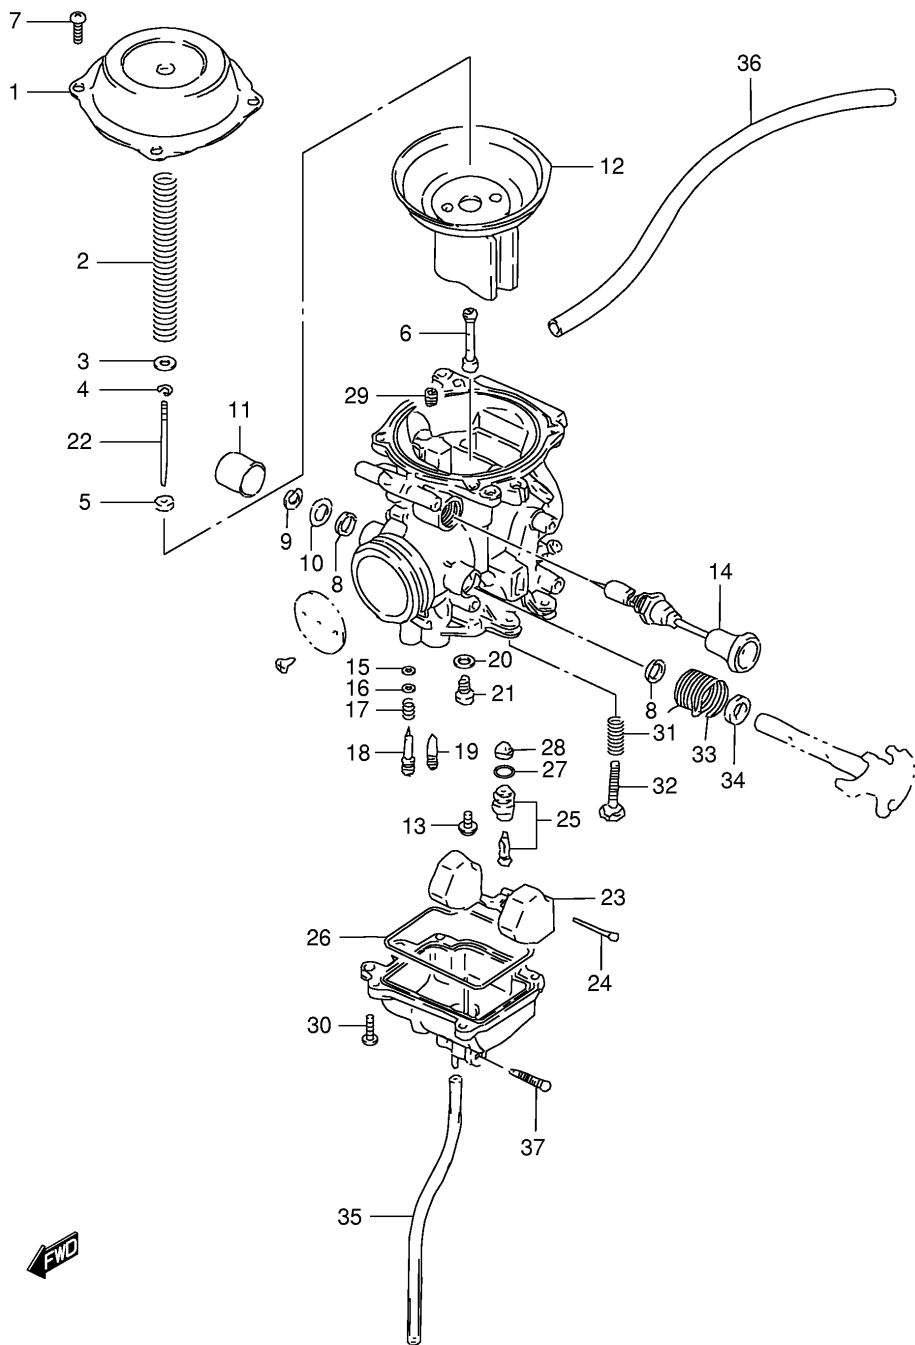


Ref No	Part No	Description
	13200-44AA1	Carburetor Assy
	13200-44AE1	Carburetor Assy
1	13502-42A00	• Cover
2	13417-42A00	• Spring
3	13382-42A00	• Ring
4	13394-10010	• Clip, Needle
5	13387-47010	• Ring
6	09494-00606	• Jet, Needle (p-5)
6	09494-00825	• Jet, Needle (p-5)
7	02112-04083	• Screw
8	13556-05A10	• Seal
9	13617-44080	• E Ring
10	13557-47070	• Gasket
11	13578-47070	• Cap
12	13500-42A00	• Diaphragm Assy
13	13602-43410	• Screw
14	13411-42A20	• Plunger Assy
15	13295-29900	• O Ring
16	13291-29900	• Washer
17	13268-47070	• Spring
18	13279-47070	• Screw, Pilot
18	13279-47070	• Screw, Pilot
19	09492-40014	• Jet, Pilot (40)
20	13332-44080	• Washer
21	09491-22016	• Jet, Main (110)
22	13383-42A00	• Needle, Jet
23	13250-42A00	• Float
24	13254-92311	• Pin, Float
25	13370-44500	• Valve Assy, Needle
26	13251-42A00	• O Ring, Float Chamber
27	13374-44080	• O Ring
28	13376-84110	• Filter
29	09493-28005	• Jet, Air (140)
30	02112-04123	• Screw
31	13268-37420	• Spring
32	13267-37100	• Adjuster
33	13573-42A10	• Spring
34	13574-45120	• Ring
35	13684-40A00	• Hose (3x5x650)
36	09352-50823-600	• Hose (5x8x600)
37	13247-13A00	• Screw, Drain




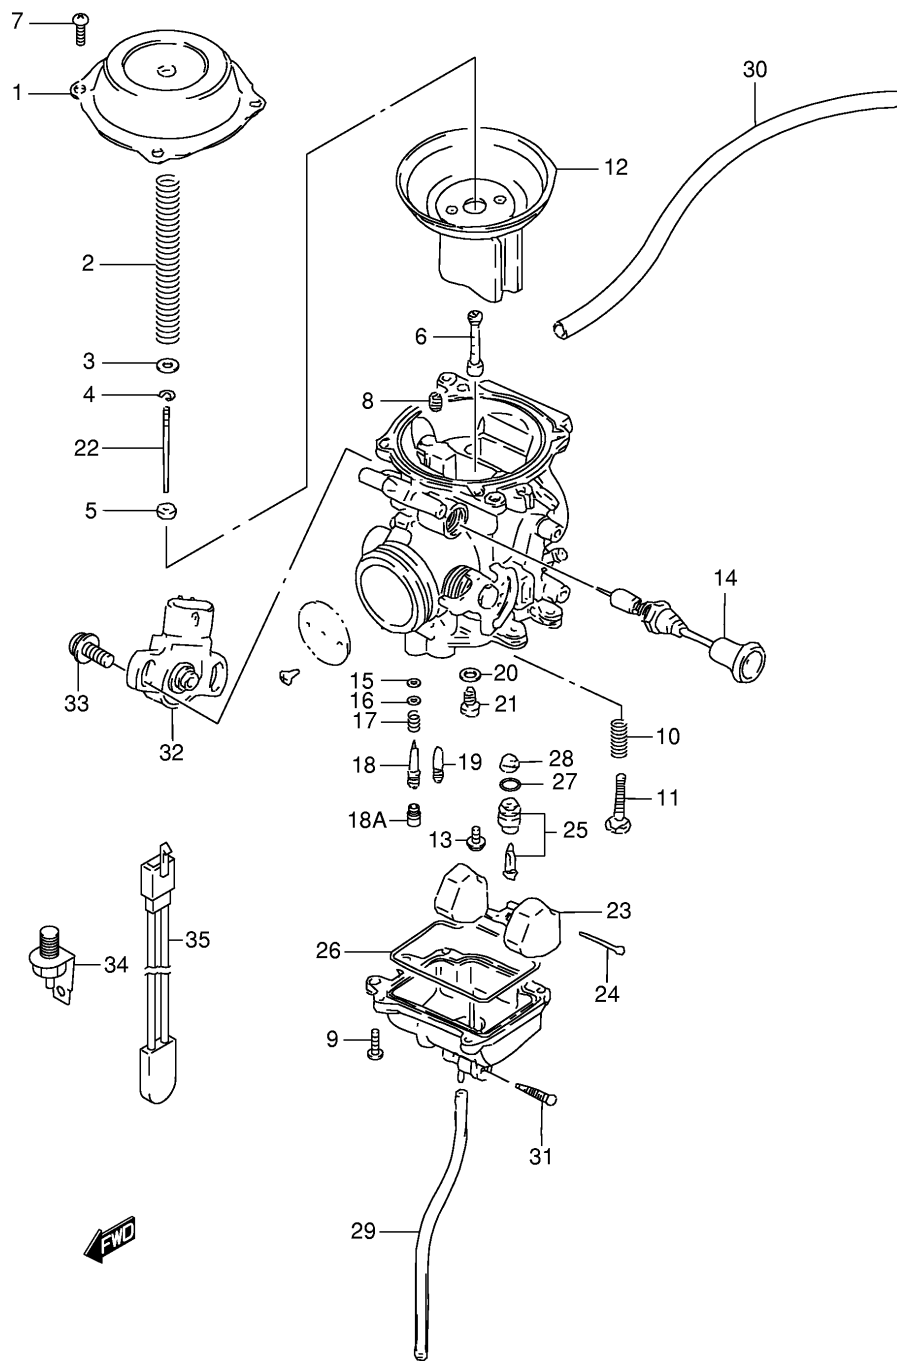


Ref No	Part No	Description
	13200-44AF0	Carburetor Assy
1	13502-42A00	. Cover
2	13417-42A00	. Spring
3	13382-42A00	. Ring
4	13394-10010	. Clip, Needle
5	13387-47010	. Ring
6	09494-00908	. Jet, Needle (p-5)
7	02112-04083	. Screw
8	09493-30003	. Jet, Air (150)
8	09493-35001	. Jet, Air (175)
9	02112-04123	. Screw
10	13268-37420	. Spring
11	13267-25D00	. Adjuster
12	13500-28A00	. Diaphragm Assy
13	13602-43410	. Screw
14	13411-44AF0	. Plunger Assy
15	13295-29900	. O Ring
16	13291-29900	. Washer
17	13268-47070	. Spring
18	13279-47070	. Screw, Pilot (1)
18	13279-47070	. Screw, Pilot (7/8)
18a	13281-05A00	. Plug
19	09492-22016	. Jet, Pilot (22.5)
20	13382-03110	. Washer
21	09491-22016	. Jet, Main (110)
22	13383-42A00	. Needle, Jet (5d26-2)
22	13383-42A00	. Needle, Jet (5d26-1)
23	13250-42A00	. Float
24	13254-92311	. Pin, Float
25	13370-44500	. Valve Assy, Needle
26	13251-42A00	. O Ring, Float Chamber
27	13374-35C00	. O Ring
28	13376-19F00	. Filter
29	13684-40A00	. Hose (3x5x650)
30	09352-50823-600	. Hose (5x8x600)
31	13247-02340	. Screw, Drain
32	13550-13D60	. Sensor Assy
33	13602-55A00	. Screw
34	13650-20E00	Heater, Carburetor
35	13655-16F00	Thermo Switch, Carb Heater

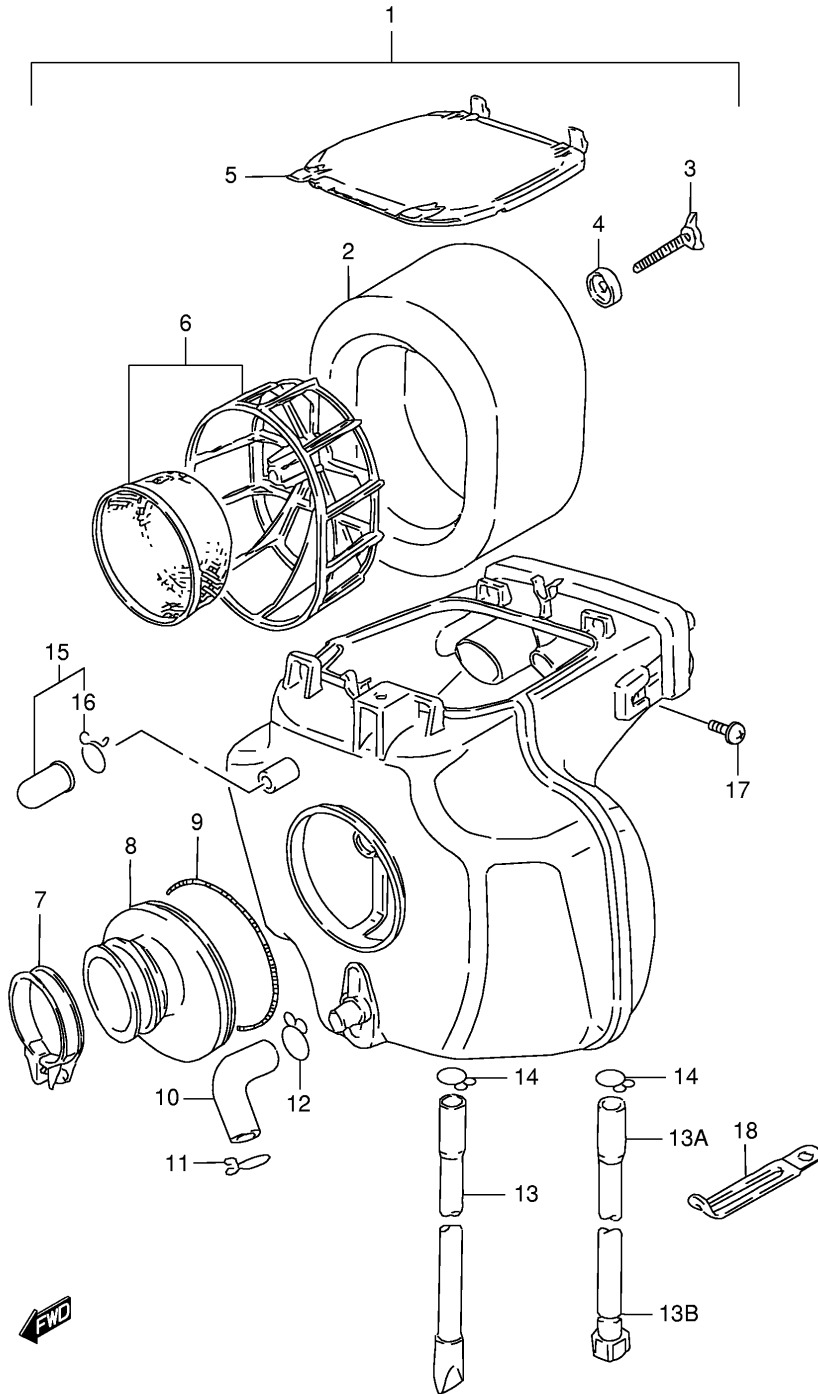


Ref No	Part No	Description
1	13700-44A20	Cleaner Assy, Air
1	13700-44A21	Cleaner Assy, Air
1	13700-44A30	Cleaner Assy, Air
1	13700-44A31	Cleaner Assy, Air
2	13780-42A01	• . Filter
3	13831-42A00	• . Bolt, Wing
4	13796-16700	• . Washer
5	13740-42A00	• . Cap
6	13790-42A00	• . Holder
7	09402-56208	• . Clamp
8	13881-44A20	• . Tube, Outlet
9	13826-38300	• . Clamp, Air Cleaner Side
10	13853-42A00	• . Tube, Breather
10	13850-44A30	• . Tube, Breather
11	09401-14301	• . Clip
12	09401-14301	• . Clip
13a	13870-11458	• . Tube, Drain
13b	09401-11101	•• . Clip
14	09401-13409	• . Clip
15	13870-14F00	• . Plug, Drain
16	09401-16401	•• . Clip
17	02112-36163	Screw

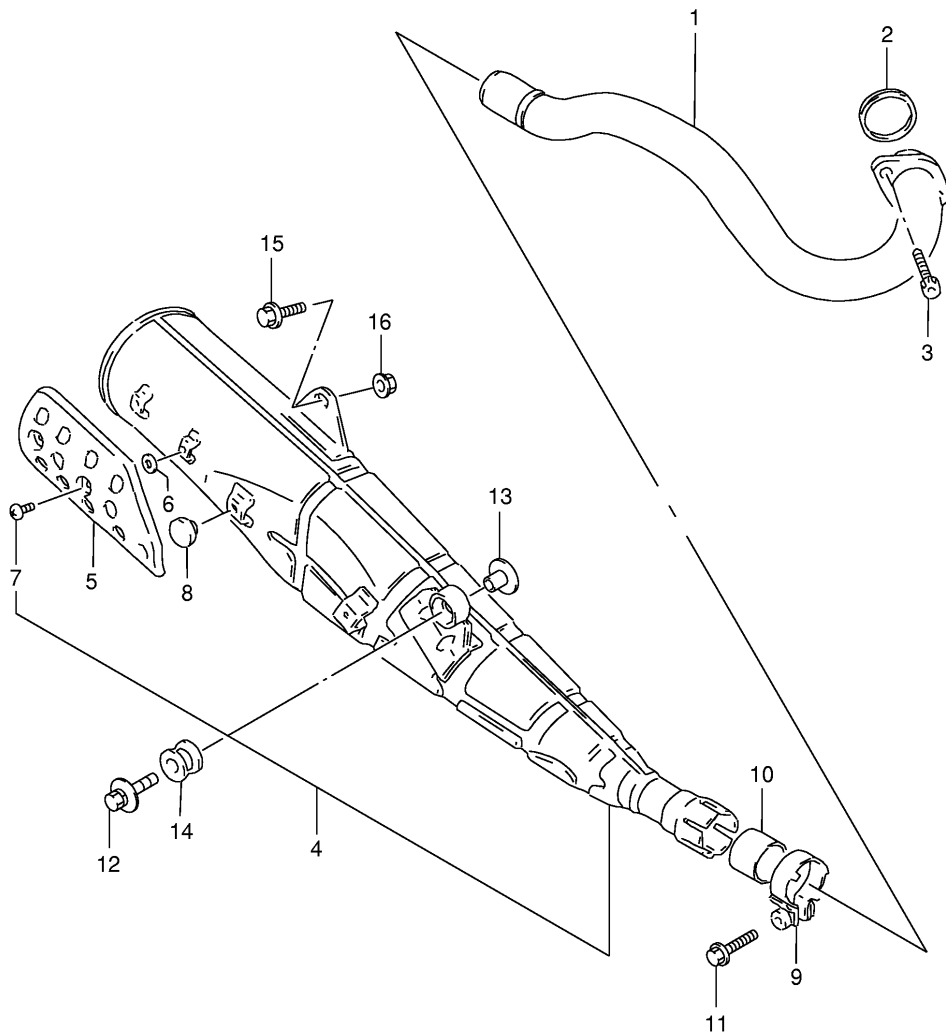


Ref No	Part No	Description
1	14150-44A10	Pipe, Exhaust
2	14181-18C00	Gasket, Exhaust Pipe
3	07120-08253	Bolt
4	14301-44A70	Muffler Assy
4	14301-44A80	Muffler Assy
5	14781-42A20	• . Cover, Muffler
6	09168-06120	• . Gasket (5.8x13x1.4)
7	09139-06076	• . Screw
8	09321-10007	• . Cushion
9	14459-07A11	Clamp, Muffler Connector
10	14773-09301	Connector, Muffler
10	14771-13E00	Connector, Muffler
11	07120-08353	Bolt
12	09118-08080	Bolt (8x35)
13	09180-08151	Spacer (8.6x12x17.5)
14	09320-12033	Cushion
15	09103-08287	Bolt (8x35)
16	08361-25083	Nut

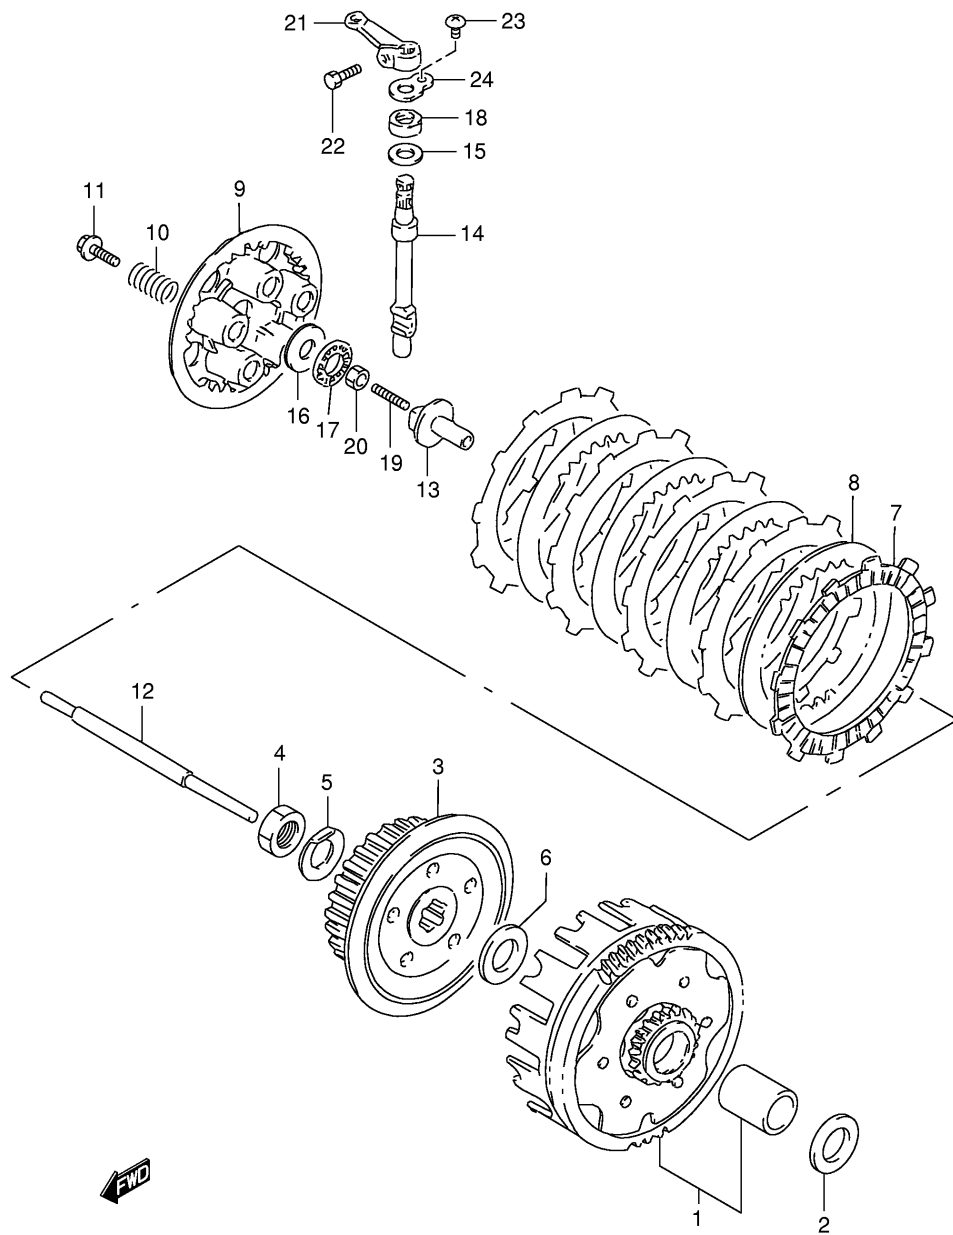


Ref No	Part No	Description
1	21200-44812	Gear Assy, Primary (nt:59)
1	21200-44840	Gear Assy, Primary (nt:59)
2	08211-20353	Thrust Washer
3	21411-05200	Hub, Clutch Sleeve
4	09140-16005	Nut
5	09169-16003	Washer
6	08211-20352	Thrust Washer
7	21441-42A00	Plate, Clutch Drive
8	21451-19A00	Plate, Clutch Driven
9	21462-14102	Disc, Clutch Pressure
10	09440-15021	Spring
11	09116-05020	Bolt (5x16)
12	23110-05202	Rod, Clutch Push
13	23121-38201	Piece, Clutch Push
14	23122-05200	Cam Shaft, Clutch Release
15	09181-10195	Thrust Washer (10x20x1.0)
16	09160-15045	Washer (15.5x28x1.0)
17	09263-15003	Bearing (15x28x2)
18	09282-10012	Oil Seal (10x20x6)
19	09134-06010	Screw
20	09140-06023	Nut (6x3.6)
21	23271-46010	Arm, Clutch Release
22	01500-06163	Bolt
23	02142-06103	Screw

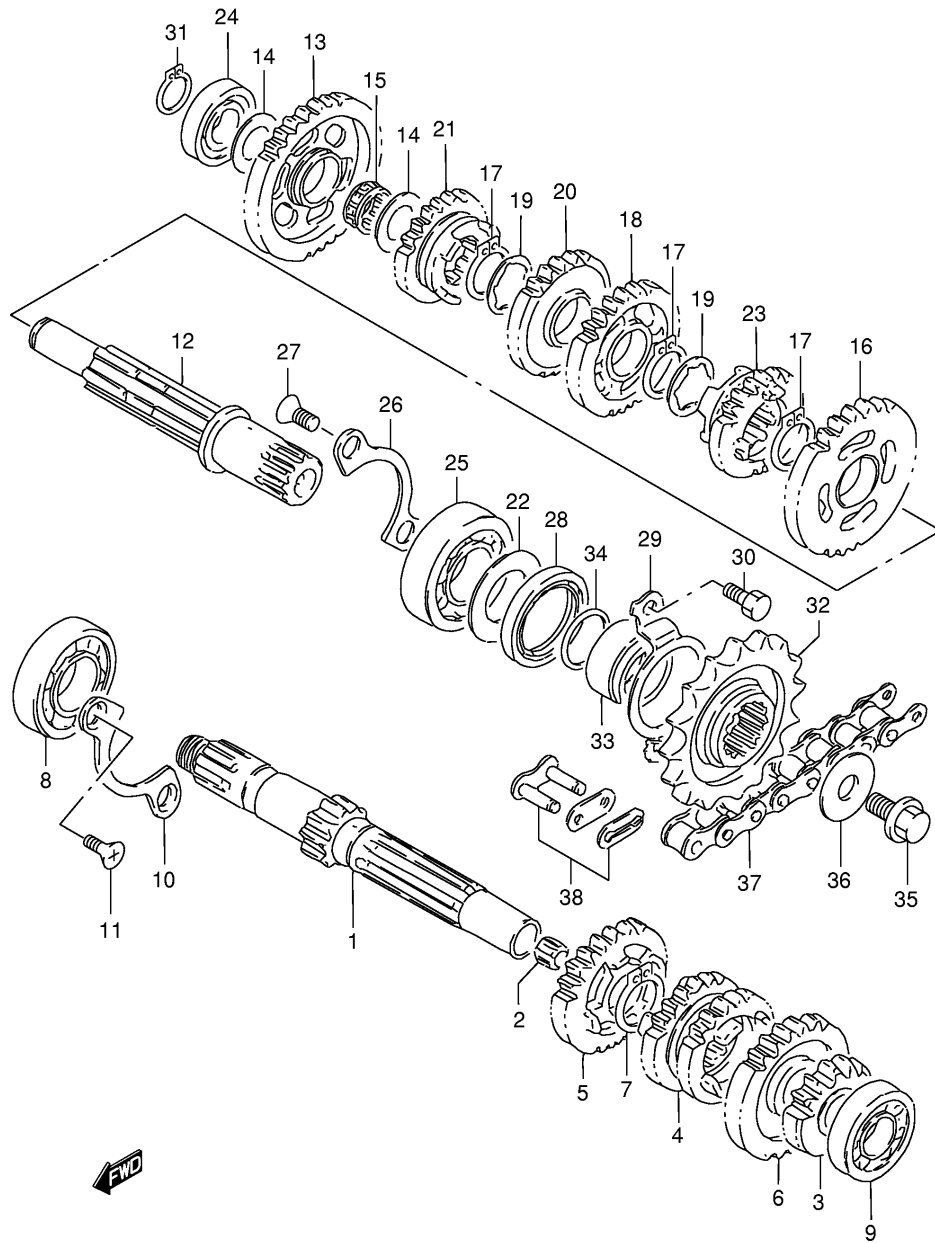

Ref No	Part No	Description
1	24120-05810	Shaft, Counter (nt:11)
2	24125-38201	Bush
3	24221-05202	Gear, 2nd Drive (nt:14)
4	24231-05203	Gear, 3rd/4th Dr (nt:19/21)
5	24251-05212	Gear, 5th Drive (nt:26)
6	24260-44A01	Gear, 6th Drive (nt:24)
7	09380-20009	Circlip
8	09262-20069	Bearing (20x47x14)
9	08123-60027	Bearing
10	24741-05200	Retainer, Drive Shaft Bearing
11	02122-06123	Screw
12	24130-44A20	Shaft, Drive
13	24311-05201	Gear, 1st Driven (nt:33)
14	08211-15251	Thrust Washer
15	09263-15023	Bearing (15x19x7.8)
16	24320-05202	Gear, 2nd Driven (nt:26)
17	09380-20009	Circlip
18	24331-05203	Gear, 3rd Driven (nt:26)
19	09167-20011	Lock Washer
20	24341-05203	Gear, 4th Driven (nt:23)
21	24351-05211	Gear, 5th Driven (nt:24)
22	24359-42A00	Washer, Oil Sealing
23	24361-05211	Gear, 6th Driven (nt:20)
24	09264-15001	Bearing (15x36x12)
25	09262-22018	Bearing (22x50x14)
26	24741-05200	Retainer, Driveshaft Bearing
27	01500-06103	Bolt
28	09283-30053	Oil Seal (30x40x6)
29	24751-42A01	Retainer, Driveshaft Oil Seal
30	02122-06123	Screw
31	08331-31156	Circlip
32	27510-44A10	Sprocket, Engine (16t)
33	27531-42A00	Spacer, Engine Sprocket
34	09280-21008	O Ring (d:2.5,id:21)
35	01550-08123	Bolt
36	08211-08283	Washer
37	27600-46911-134	Chain Assy (did,428hgx134l)
38	27620-46911	• . Joint (did,428hg)
38	27620-40220	Joint, Chain (rk)

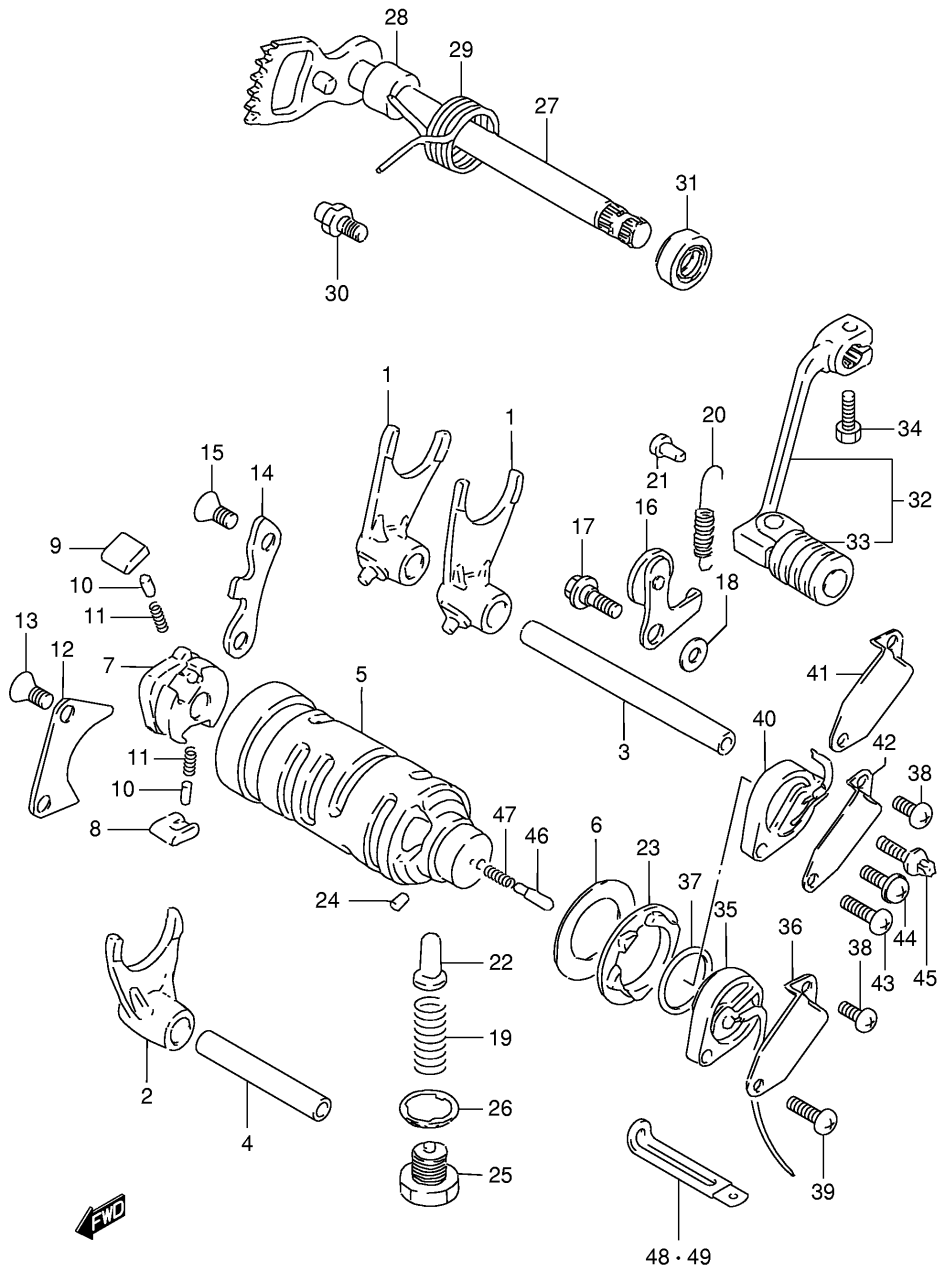


Ref No	Part No	Description
1	25221-08300	Fork, Gear Shift No.2
2	25231-05201	Fork, Gear Shift No.3
3	25411-16701	Shaft, Gear Shift Fork (l:109)
4	25421-35410	Shaft, Gear Shift Fork (l:60)
5	25310-44A00	Cam, Gear Shift
6	09181-25251	Thrust Washer (25x40x1.0)
7	25322-31310	Gear, Gear Shift Cam Driven
8	25323-34201	Pole, Gear Shift No.1
9	25324-34201	Pole, Gear Shift No.2
10	09261-05003	Roller (5x8)
11	09440-04003	Spring
12	25331-30001	Lifter, Gear Shift Pole
13	02122-06123	Screw
14	25341-05200	Guide, Gear Shift Cam
15	02122-06123	Screw
16	25350-44A00	Stopper, Gear Shift Cam
17	09111-06054	Bolt (6x14.6)
18	08211-06141	Washer
19	09440-11014	Spring
20	09443-08044	Spring
21	09223-04001	Hook
22	25351-30010	Stopper, Gear Shift Cam No.2
23	25381-45400	Plate, Gear Shift Cam Stopper
24	04221-04069	Pin
25	09247-14012	Plug
26	09168-14002	Gasket (13.8x18.8x0.4)
27	25510-05201	Shaft, Gear Shifting
28	09180-12068	Spacer (12x20x15.3)
29	09444-26001	Spring
30	25671-01000	Stopper, Gear Shift Arm
31	09285-12002	Oil Seal (12x22x9)
32	25600-42A00	Lever Assy, Gear Shift
33	25652-03D00	• . Rubber, Gear Shift Pedal
34	01500-06203	Bolt
35	37720-42A30	Base Assy, Neutral Switch
36	37721-42A00	Protector, Neut Switch
37	09280-22001	O Ring (d:2.4,id:21.8)
38	02112-05083	Screw, No.1
39	02112-05163	Screw, No.2
46	09209-05011	Contact
47	09440-04010	Spring
48	09404-06432	Clamp (l:80)
49	09404-06432	Clamp (l:80)

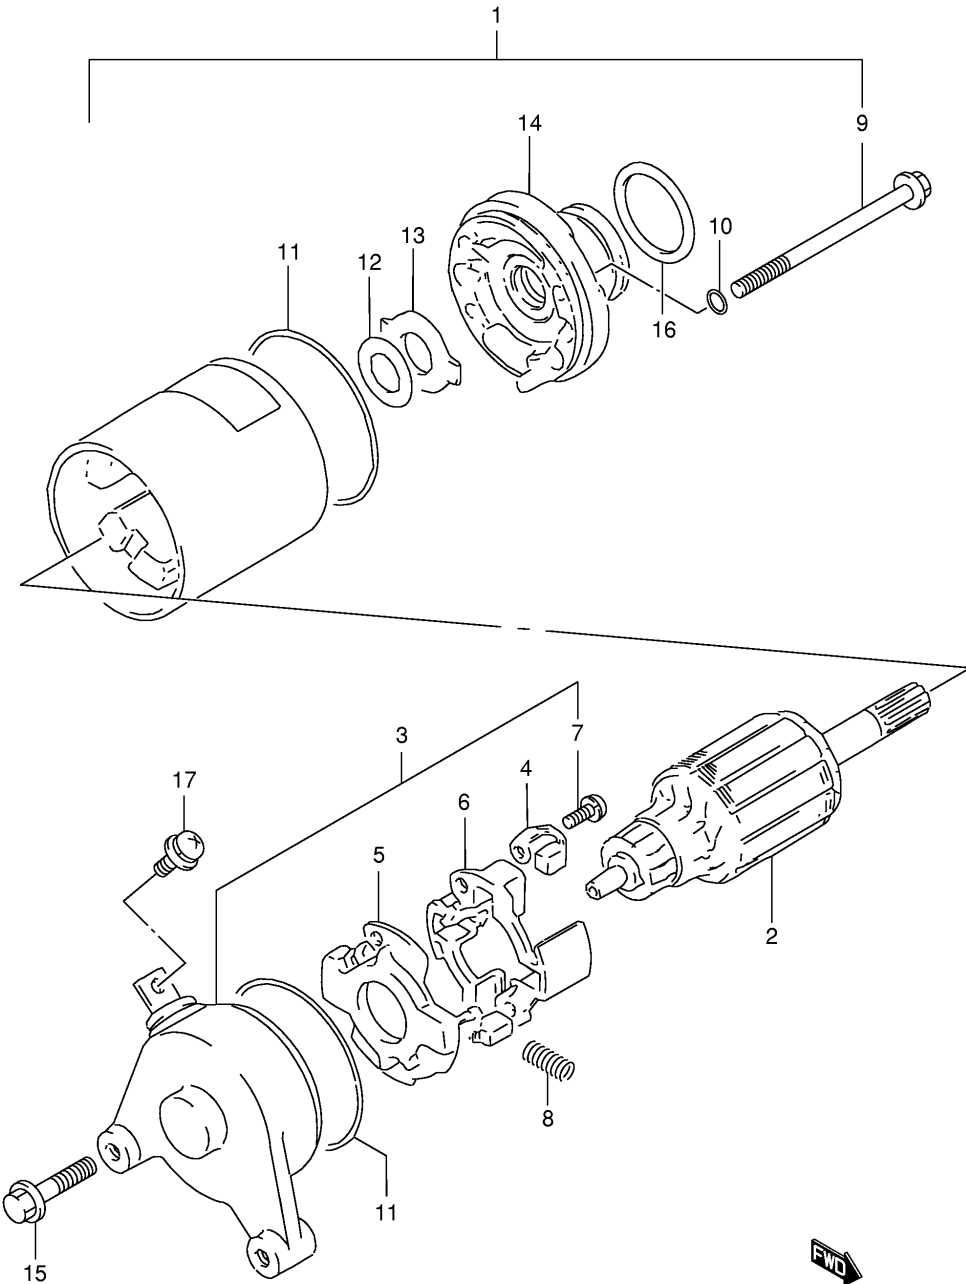



Ref No	Part No	Description
1	31100-05501	Motor Assy, Starting
2	31310-11D00	. . Armature
3	31175-42A01	. . Frame Assy, Commutator, End
4	31132-32C10	•• .. Brush
5	31130-32C20	•• .. Brush Sub Assy
6	31133-32C10	•• .. Holder, Brush
7	02112-34123	•• .. Screw
8	31135-32C10	. . Spring
9	31281-32C10	. . Bolt
10	31156-38300	. . O Ring
11	31264-32C10	. . O Ring
12	31361-38300	. . Shim, No.3
13	31361-32C10	. . Plate, Lock
14	31150-06C00	. . Bracket
15	01547-06303	Bolt
16	09280-24003	O Ring (d:3,id:24.5)
17	09137-05004	Screw (5x8)

Ref No	Part No	Description
1	31100-05510	Motor Assy, Starting
2	31175-26F00	. Frame Assy, Commutato End
3	31281-08F00	. Bolt
4	31156-38300	. O Ring
5	31264-32C10	. O Ring
6	31361-38300	. Shim
7	31361-32C10	. Plate, Lock
8	31150-08F00	. Bracket
9	09280-24003	. O Ring (d:3,id:24.5)
10	01547-06303	Bolt
11	09137-05004	Screw (5x8)

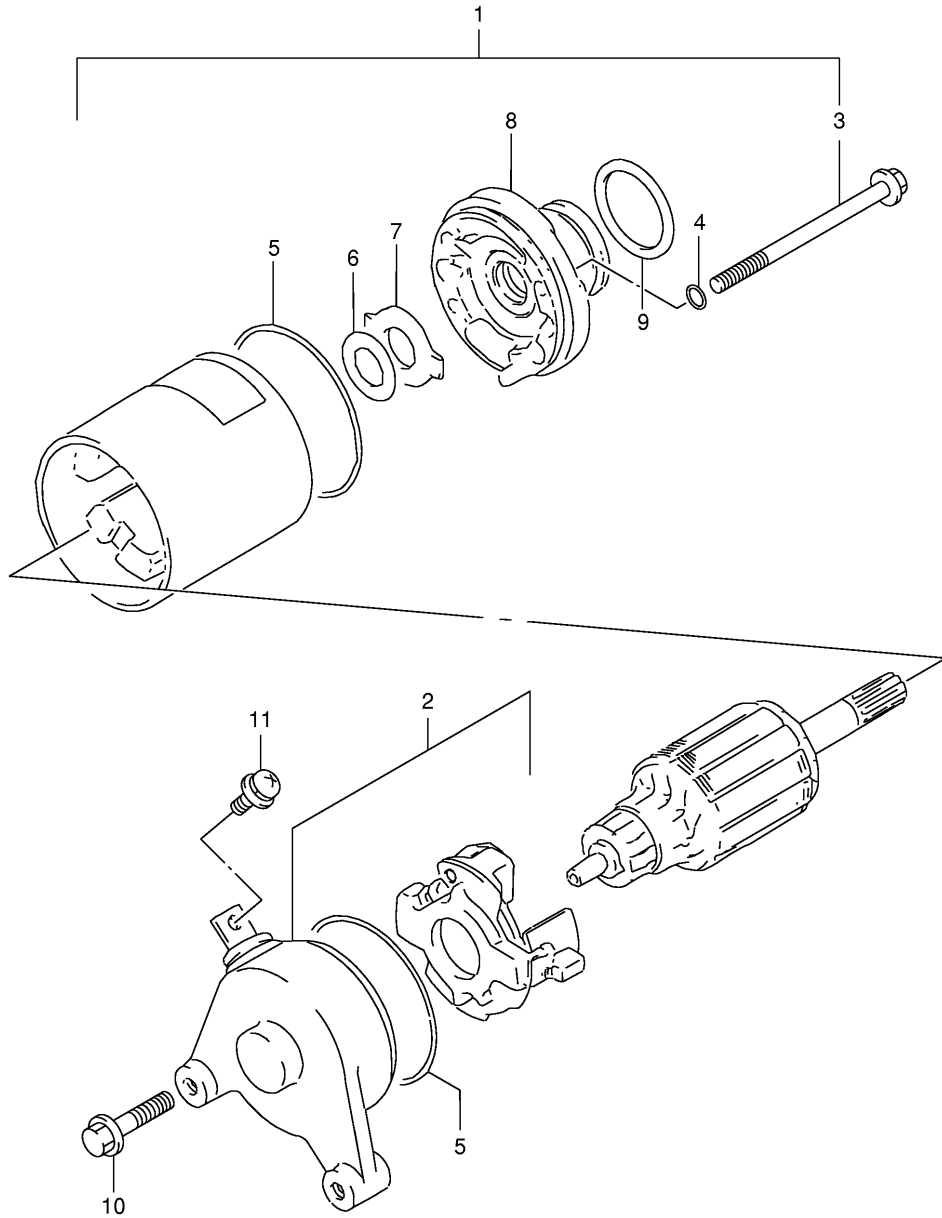


Ref No	Part No	Description
1	32101-42A30	Stator Assy
2	32102-44A30	Rotor Assy
3	02112-05253	Screw
4	08316-10103	Nut
5	02112-05123	Screw
6	08341-31039	Key
7	09404-06434	Clamp (I:95)

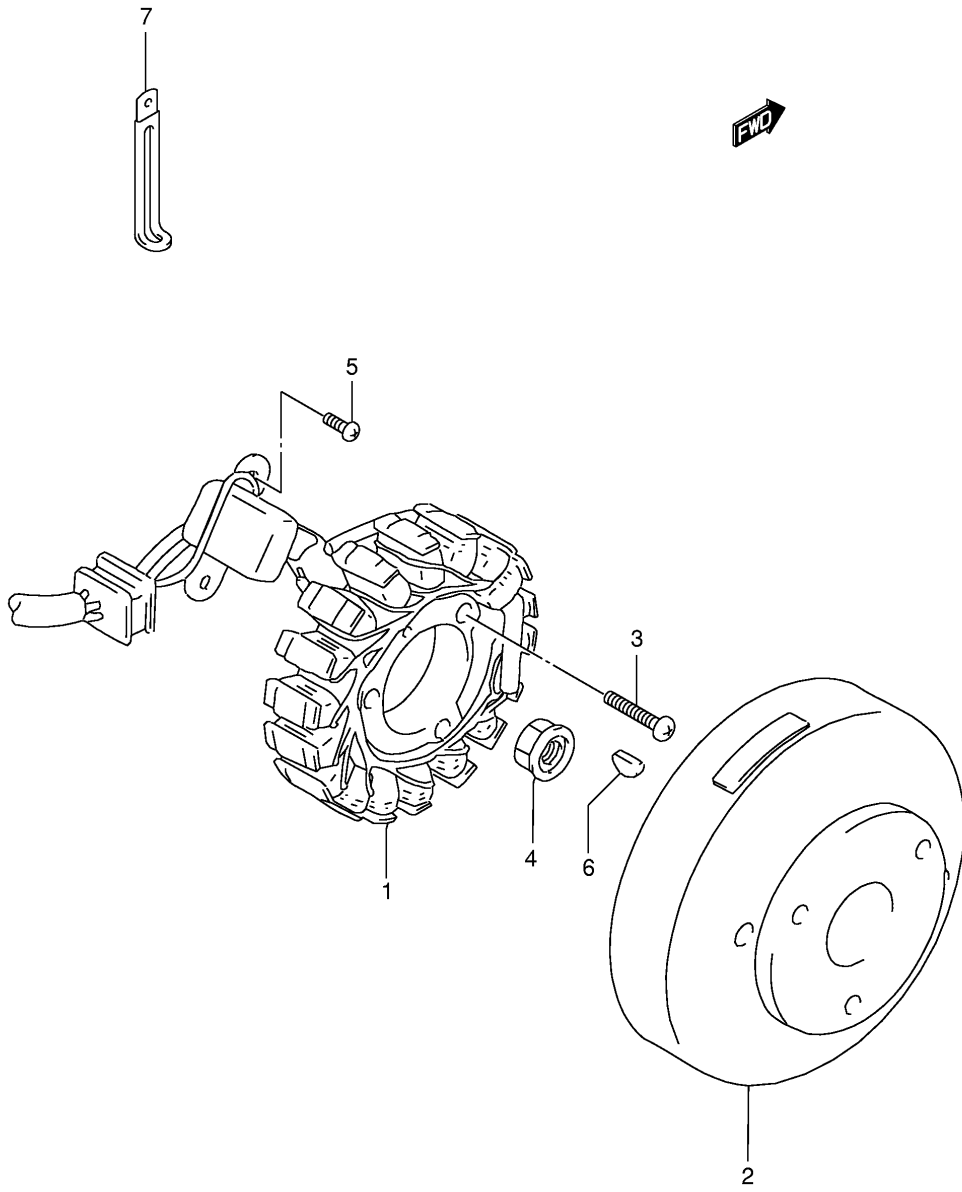


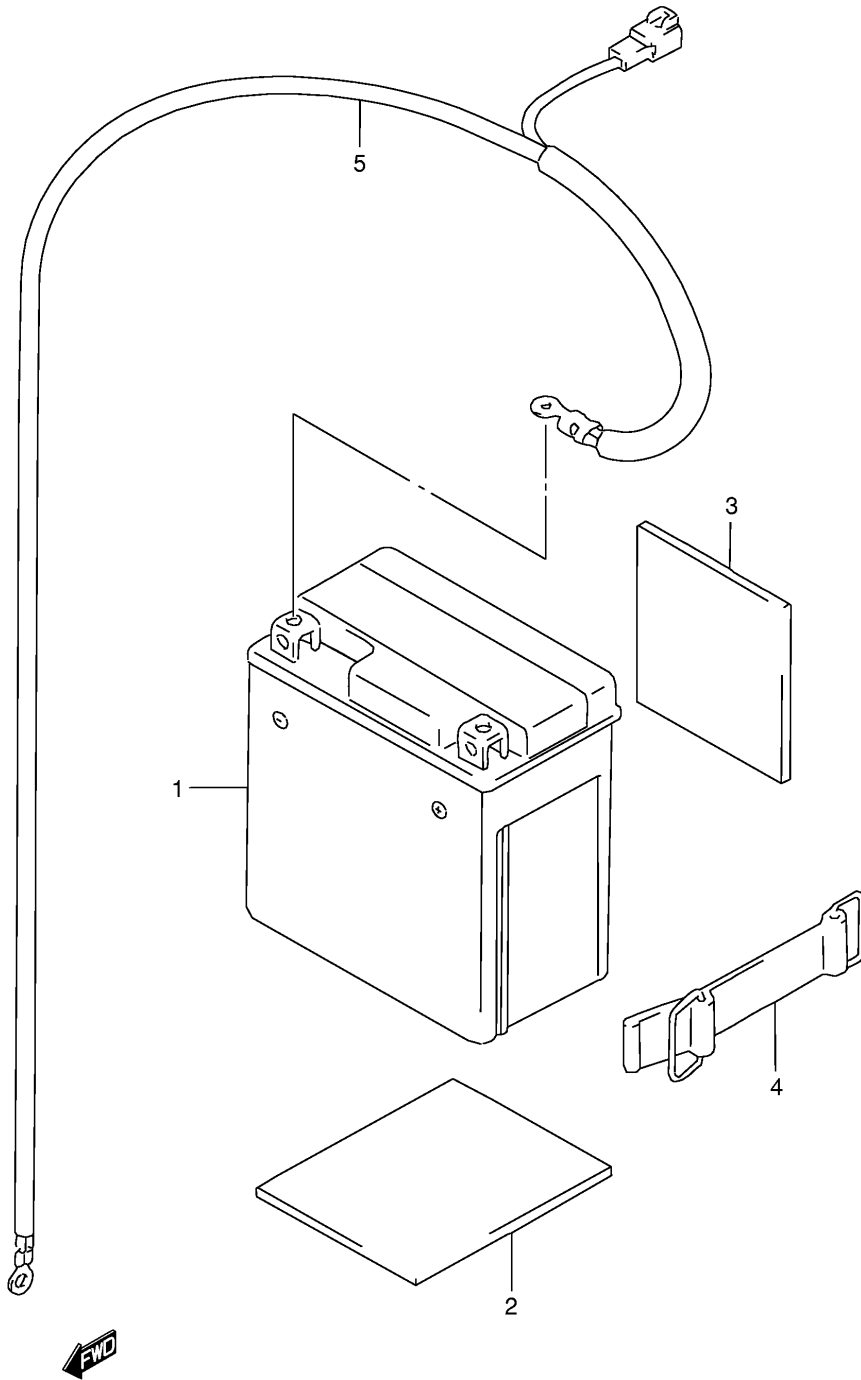


Ref No	Part No	Description
1	33610-15D20	Battery Assy (ytx7l-bs,12v6ah)
2	33651-37000	Cushion (170x95x3.0)
3	33651-37000	Cushion (170x95x3.0)
4	09462-00093	Band
5	33860-44A00	Wire, Battery (-)

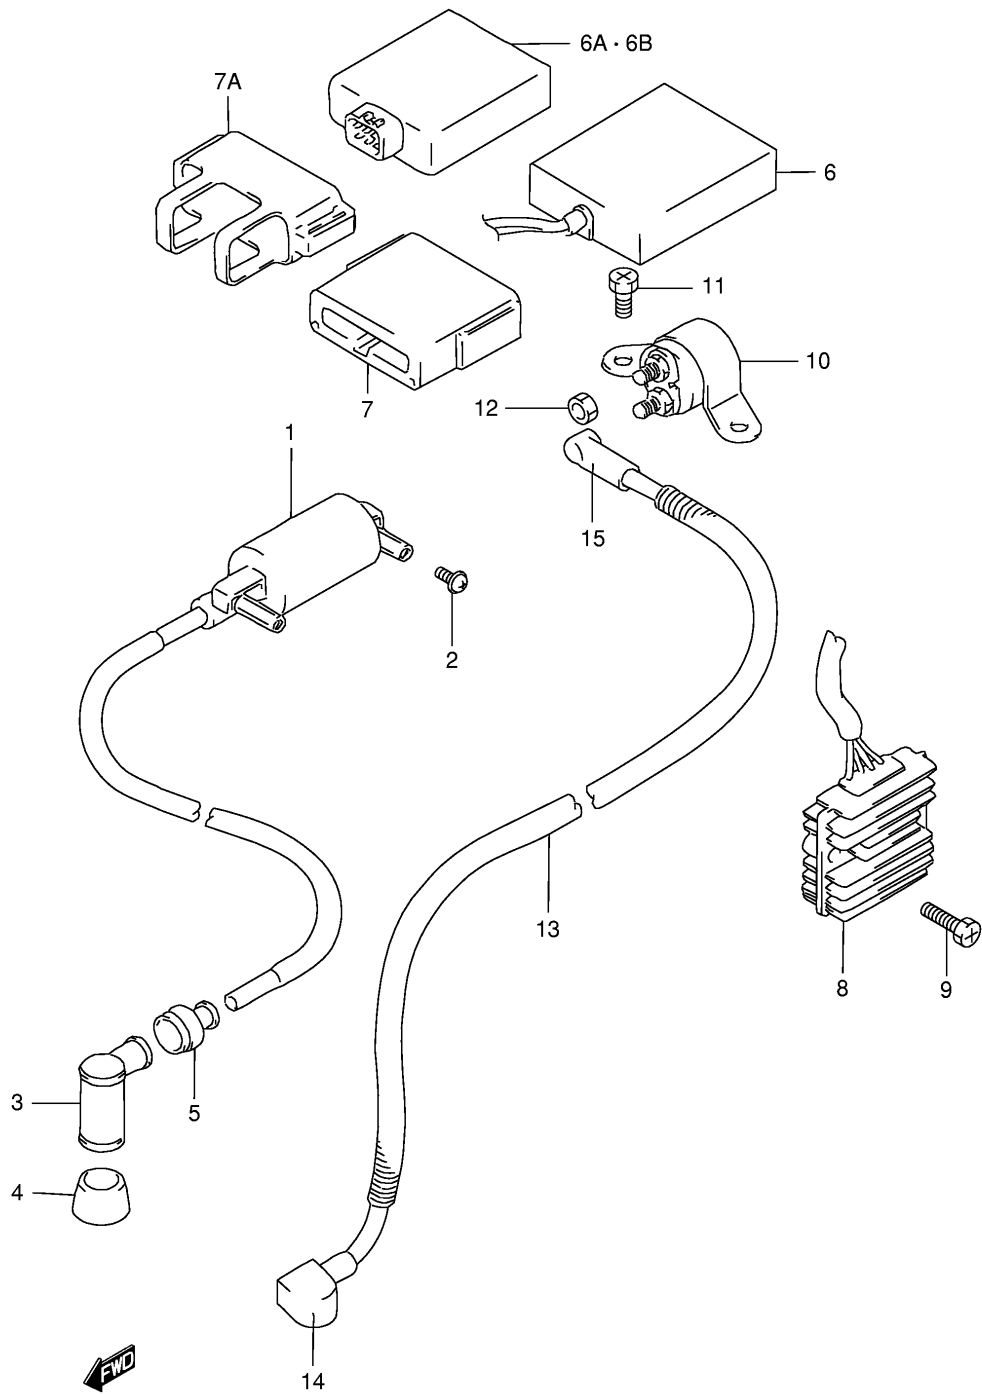

Ref No	Part No	Description
1	33410-05350	Coil Assy, Ignition
2	02142-05103	Screw
3	33510-22010	Cap, Spark Plug
4	33541-24510	Seal, Spark Plug Cap
5	33542-38B00	Seal, Hightension
6	32900-44A30	Cdi Unit
7	32980-44A00	Cushion, Cdi Unit
8	32800-08D10	Rectifier
9	09128-06024	Screw (6x25)
10	31800-15501	Relay Assy, Starting Motor
11	09128-06004	Screw (6x10)
12	08361-35068	Nut
13	33810-44A00	Wire, Starter Motor Lead
14	31861-06C00	• . Cap, Starter Motor Terminal
15	31861-10D00	• . Cap, Terminal

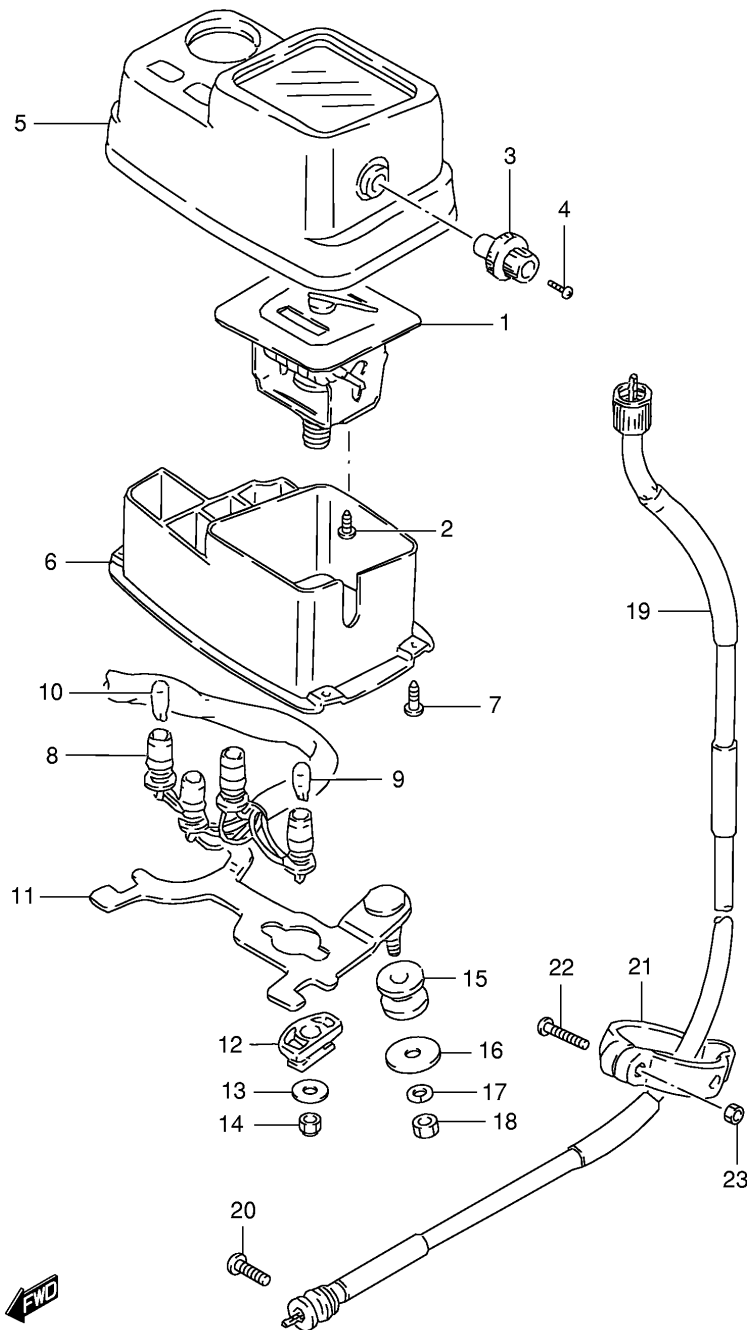


Ref No	Part No	Description
1	34120-44A90	Speedometer (kilo)
1	34120-44AB0	Speedometer (mile/kilo)
2	02112-74123	Screw
3	34124-14A10	Knob, Trip
4	09139-02003	Screw
5	34150-44AD0	Hood, Meter
6	34111-14A10	Case, Meter
7	34184-12B00	Screw
8	34173-44A90	Socket Assy
9	09471-12028	Bulb (12v,3.4w)
10	09471-12077	Bulb (12v,1.7w)
11	34950-44A00	Bracket, Meter
12	34189-14A10	Cushion
13	09160-05043	Washer (5.5x16x1.2)
14	08310-00057	Nut
15	34956-15100	Cushion
16	09160-06084	Washer (6.5x18x1.6)
17	08321-01063	Washer
18	08310-00063	Nut
19	34910-44A20	Cable Assy, Speedometer
20	02112-05163	Screw
21	34938-01A00	Clamp, Speedometer Cable
22	02112-05163	Screw
23	08310-00053	Nut

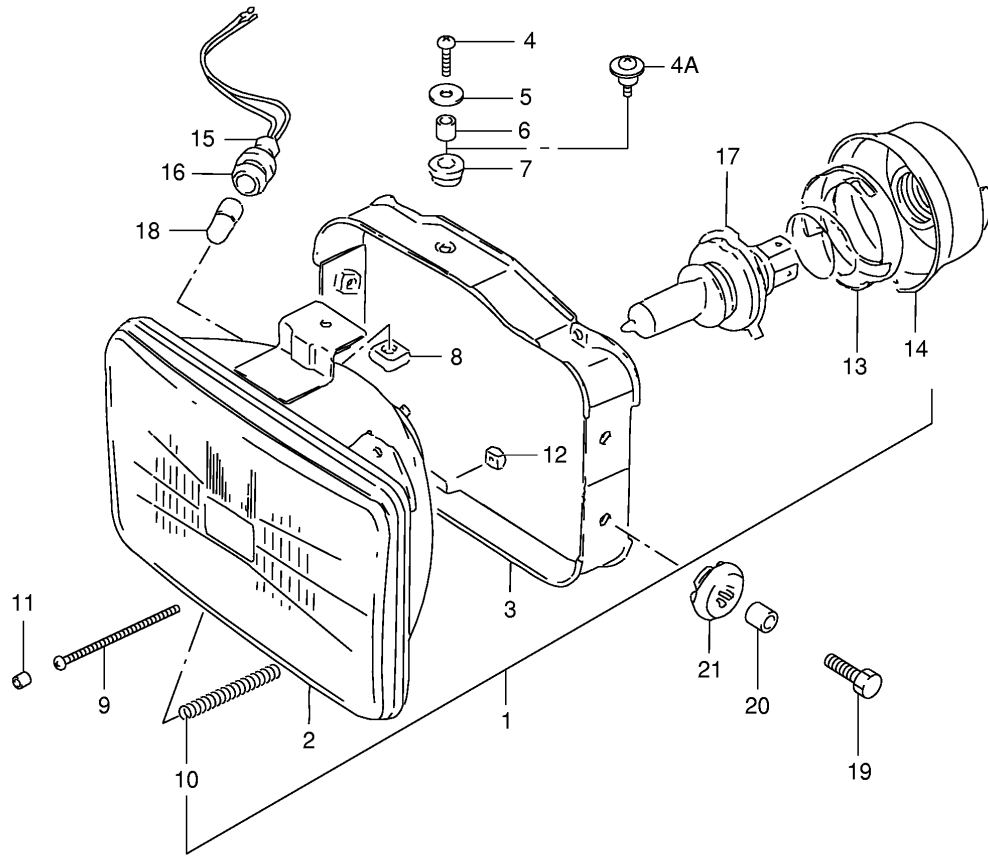


Ref No	Part No	Description
1	35100-42A60-999	Headlamp Assy
1	35100-42A50-999	Headlamp Assy
2	35121-42A60	• Lamp Unit
2	35121-14A51	• Lamp Unit
3	35141-14A00	• Ring, Mounting
4a	35136-38A00	• Screw
7	35139-45230	• Cushion
8	35135-45900	• Nut
9	35151-45900	• Screw
10	35154-49200	• Spring
11	35158-43400	• Cover, Spring
12	35135-45600	• Nut
13	35136-01A00	• Holder, Valve
14	35173-01440	• Cover, Socket
15	36118-42A60	• Socket
15	36118-12E20	• Socket
16	36116-22630	• Rubber, Joint
17	09471-12060	Bulb (12v,60/55w)
18	09471-12063	Bulb (12v,4w)
19	09116-06167	Bolt (6x20)
20	09180-06263	Spacer (6.5x9x9)
21	09320-09018	Cushion




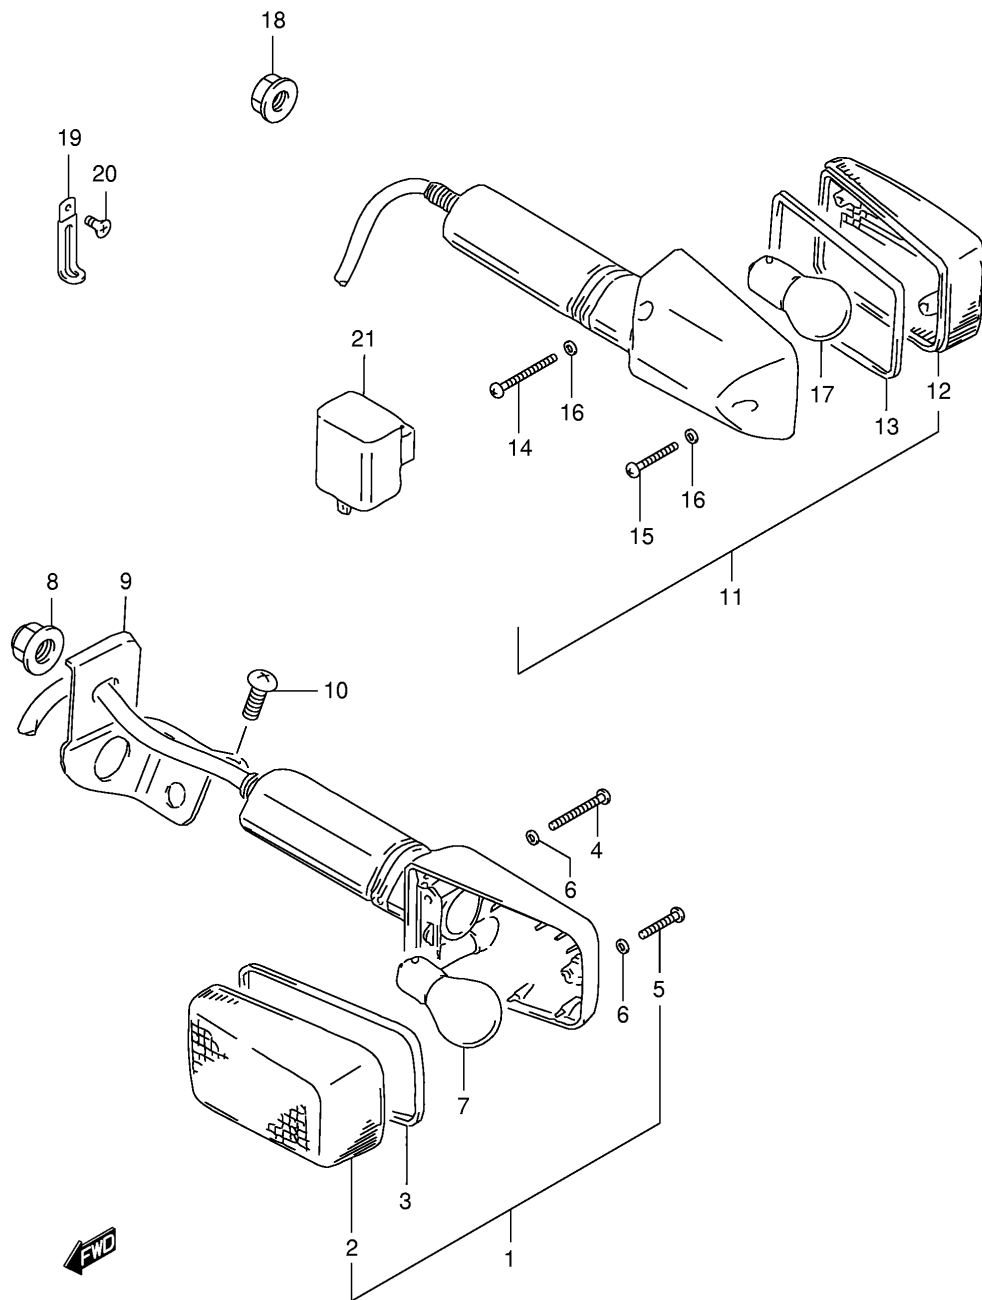

Ref No	Part No	Description
1	35601-29E30	Lamp Assy, Front Turn Signal
1	35601-29EC0	Lamp Assy, Front Turn Signal
2	35612-17C20	. Lens, Front Turn Signal
3	35613-27A00	. Gasket
4	35623-27A00	. Screw
5	35725-40511	. Screw
6	35627-27A02	. Gasket
7	09471-12045	. Bulb (12v,21w)
8	08316-10103	Nut
9	35670-44A01	Bracket, Front Turn Rh
9	35680-44A01	Bracket, Front Turn Lh
10	02142-05083	Screw
11	35603-29E90	Lamp Assy, Rear Turn Signal
12	35652-17C20	. Lens
13	35613-27A00	. Gasket
14	35623-27A00	. Screw
15	35725-40511	. Screw
16	35627-27A02	. Gasket
17	09471-12045	. Bulb (12v,21w)
18	08316-10103	Nut
19	09404-06432	Clamp
20	03541-04103	Screw
21	38610-31X50	Relay, Turn Signal
21	38610-06F00	Relay, Turn Signal

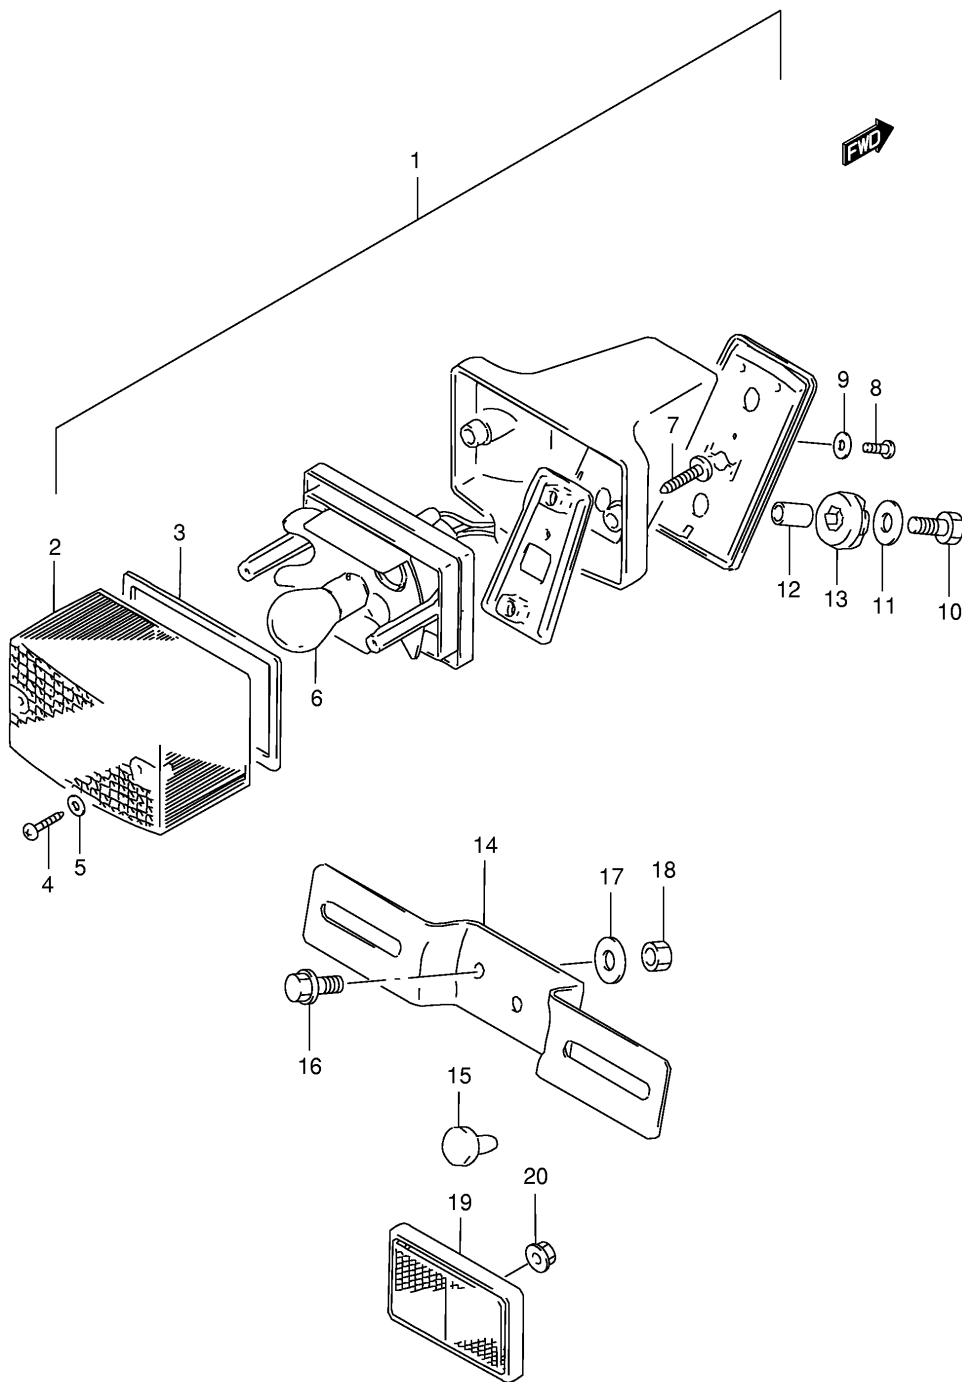



Ref No	Part No	Description
1	35710-42A10	Lamp Assy, Rear Combination
2	35712-36A70	. Lens
3	35713-13600	. Gasket
4	03211-04207	. Screw
5	35627-43010	. Gasket
6	09471-12128	. Bulb (12v,21/5w)
6	09471-12083	. Bulb (12v,21/5w)
7	03212-05253	. Tapping Screw
8	02112-03107	. Screw
9	08322-01037	. Washer
10	01500-06253	Bolt
11	09160-06109	Washer (6.5x18x1.6)
12	09180-06270	Spacer (6.5x9x17.5)
13	09320-09015	Cushion
14	35927-14D30	Bracket, License Plate
15	09321-06026	Cushion, License & Fender
15	09321-06030	Cushion
16	01550-06163	Bolt
17	09160-06109	Washer (6.5x18x1.6)
18	08310-00063	Nut
19	35970-14A00	Reflector Assy, Rear
20	08316-10053	Nut

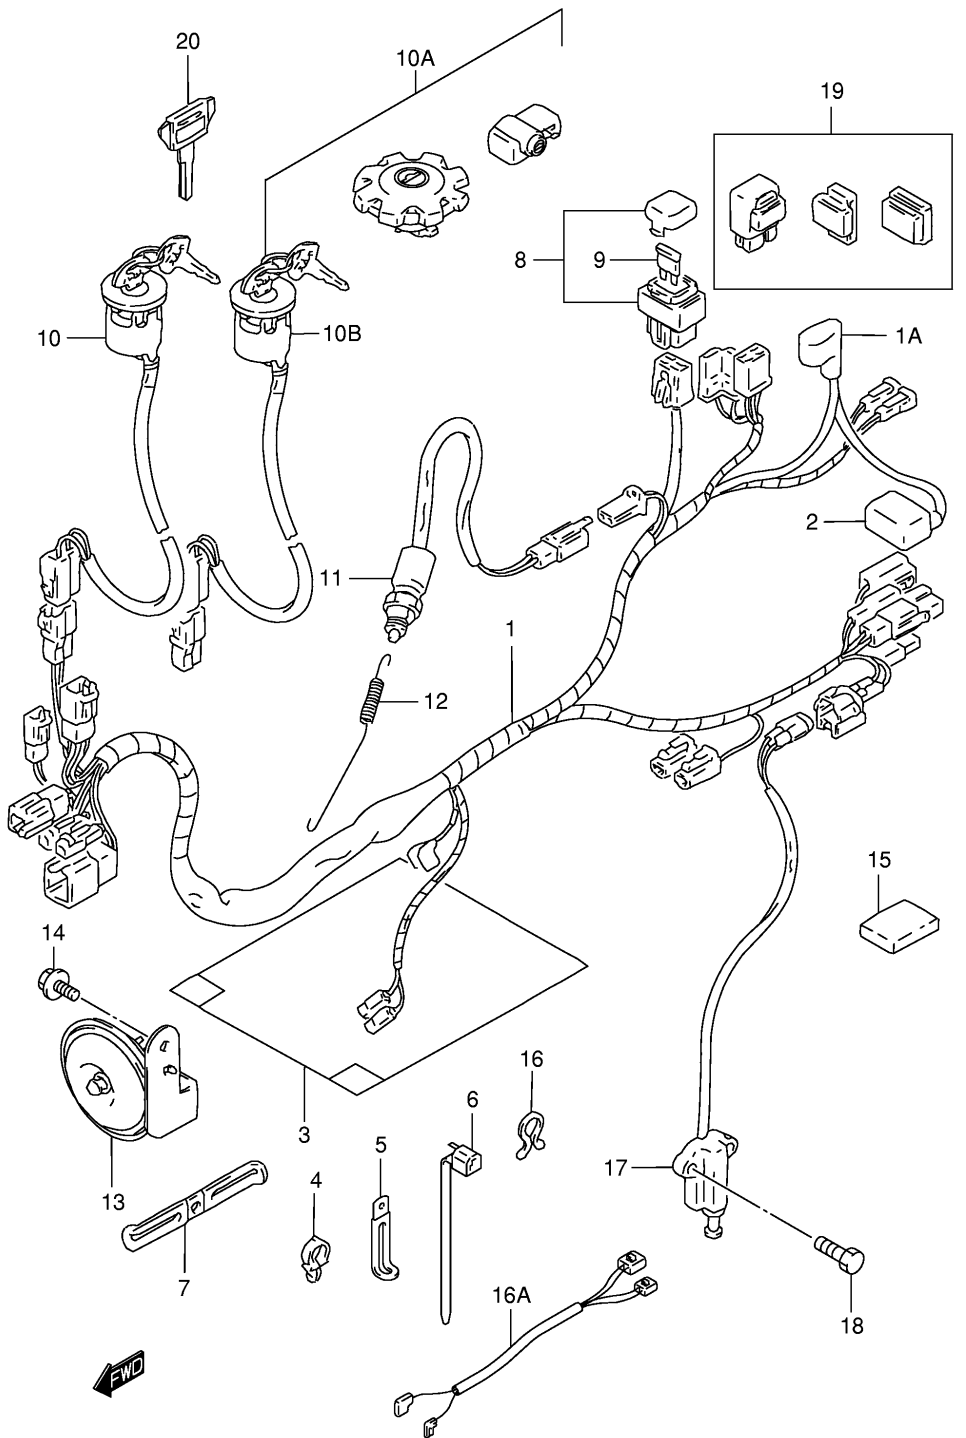


Block Title.
WIRING HARNESS


Ref No	Part No	Description
1	36610-42A01	Harness, Wiring
1	36610-42A50	Harness, Wiring
1a	31861-10D00	• . Cap, Starter Relay
2	33624-10D00	• . Cap, Battery (+)
3	36618-15D20	Cover, Wire Harness
4	09403-12404	Clamp
5	09404-06434	Clamp (l:95)
5	09404-06434	Clamp (l:95)
5	09404-06432	Clamp (l:80)
6	09407-14403	Clamp (l:125)
6	09407-18402	Clamp (l:165)
6	09407-25402	Clamp (l:248)
6	09407-25401	Clamp (l:235)
7	36651-05301	Clamp, Starter Motor Reed
8	36740-24B01	Box Assy, Fuse
9	09481-20101	• . Fuse (20a)
10	37110-44A01	Switch Assy, Ignition
11	37740-31D00	Switch Assy, Stop Lamp
12	09443-06064	Spring
13	38500-44B00	Horn Assy
14	01550-06123	Bolt
15	36920-14D00	Protector, Wire Harness
16	09408-00012	Clip
17	37840-44X50	Switch Assy, Side Stand
18	01550-06203	Screw
19	38740-24X50	Relay, Side Stand
20	37146-03A00	Key, Blank Type C
20	37146-03A10	Key, Blank Type D
20	37146-03A20	Key, Blank Type E
20	37146-03A30	Key, Blank Type F

Ref No	Part No	Description
1	37200-44A00	Switch Assy, Handle Rh
1	37200-44A50	Switch Assy, Handle Rh
2	09125-05066	• Screw (5x25)
3	37400-44A00	Switch Assy, Handle Lh
4	02112-05305	• Screw

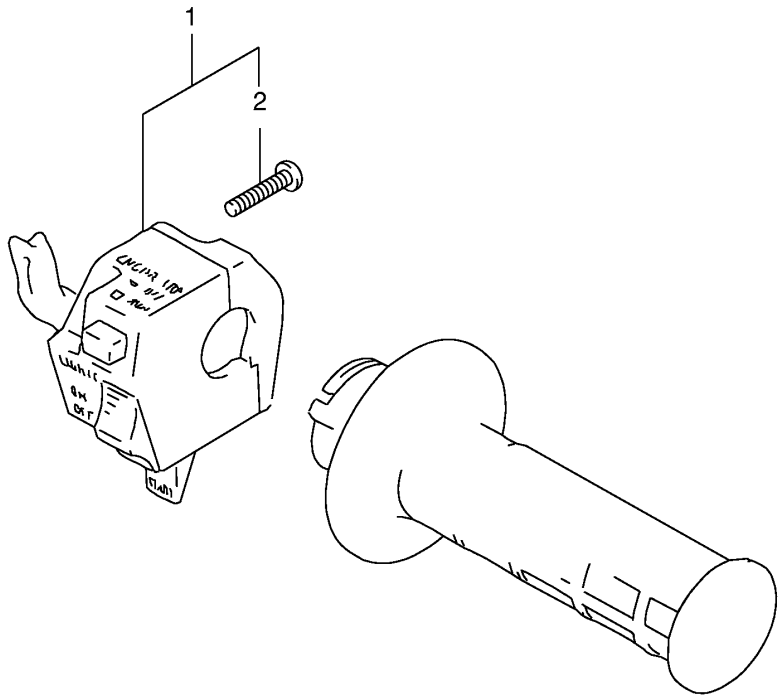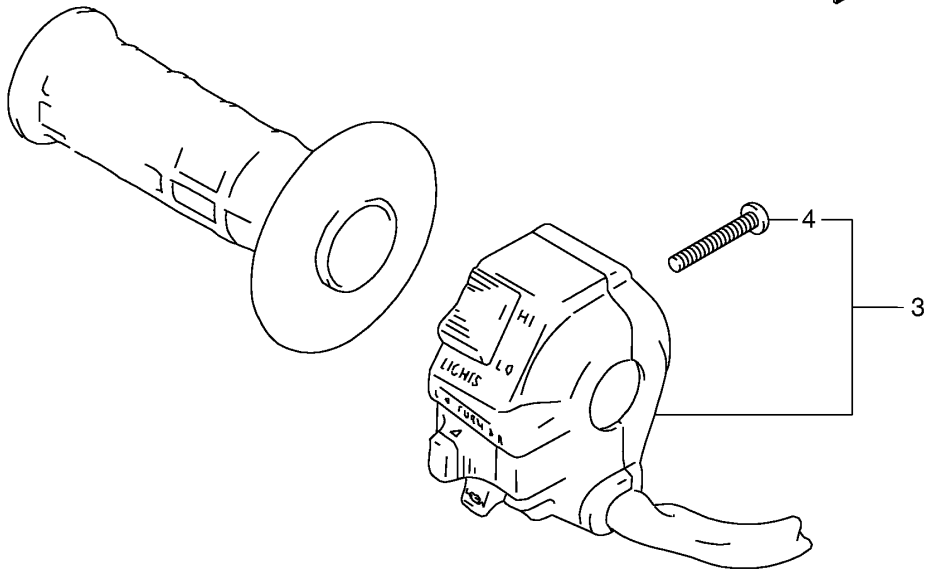


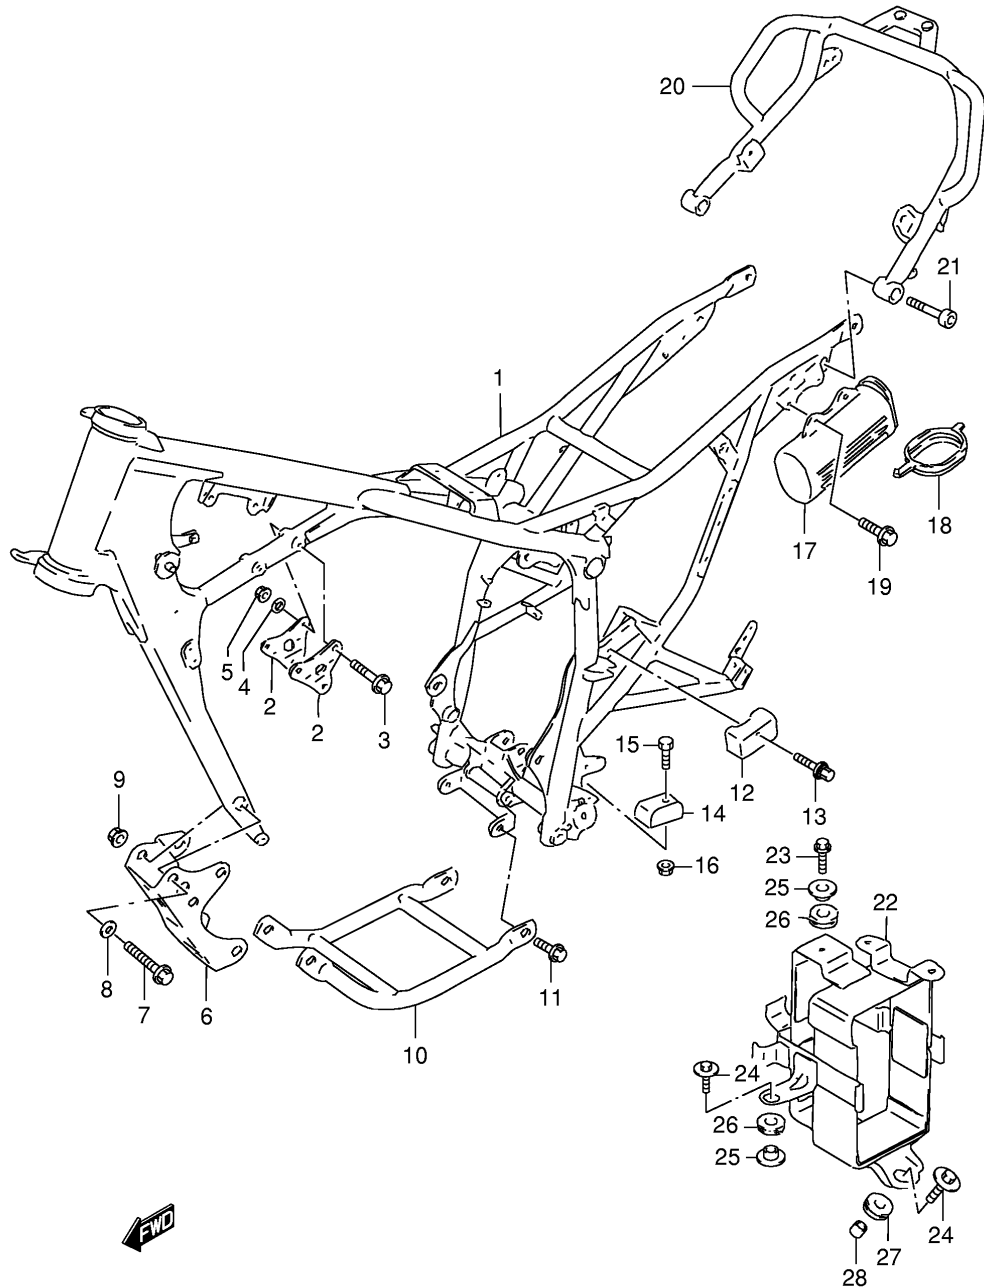


Ref No	Part No	Description
1	41100-44AA0-Z16	Frame (purple)
1	41100-44AE0-Z16	Frame (purple)
2	41991-44A00-291	Plate, Mount Upper (black)
3	09103-08332	Bolt (8x53)
4	08321-01083	Lock Washer
5	08319-31083	Nut
6	41992-44AA0-Z16	Plate, Mount Lower (purple)
7	09103-08328	Bolt (8x65)
8	08321-01083	Lock Washer
9	08319-31083	Nut
10	42510-44AA0-Z16	Protector, Engine (purple)
11	01550-10163	Bolt
12	43911-44A00	Guide, Chain Upper
13	01580-06353	Bolt
14	43912-44A00	Guide, Chain Lower
15	01500-06203	Bolt
16	08319-31063	Nut
17	41551-38200	Holder, Tool
18	41552-37210	Cap, Tool Holder
19	09116-06144	Bolt (6x16)
20	43980-44AB2-1TS	Grip, Rear (white)
21	09106-08105	Bolt (8x30)
22	41540-44AA0	Holder, Battery
23	01550-06203	Bolt, Upper
24	09116-06047	Bolt, Lower
25	41570-47D00	Spacer
26	09320-08021	Cushion
27	09320-10043	Cushion, Lower Lh
28	09180-06210	Spacer, Lower Lh

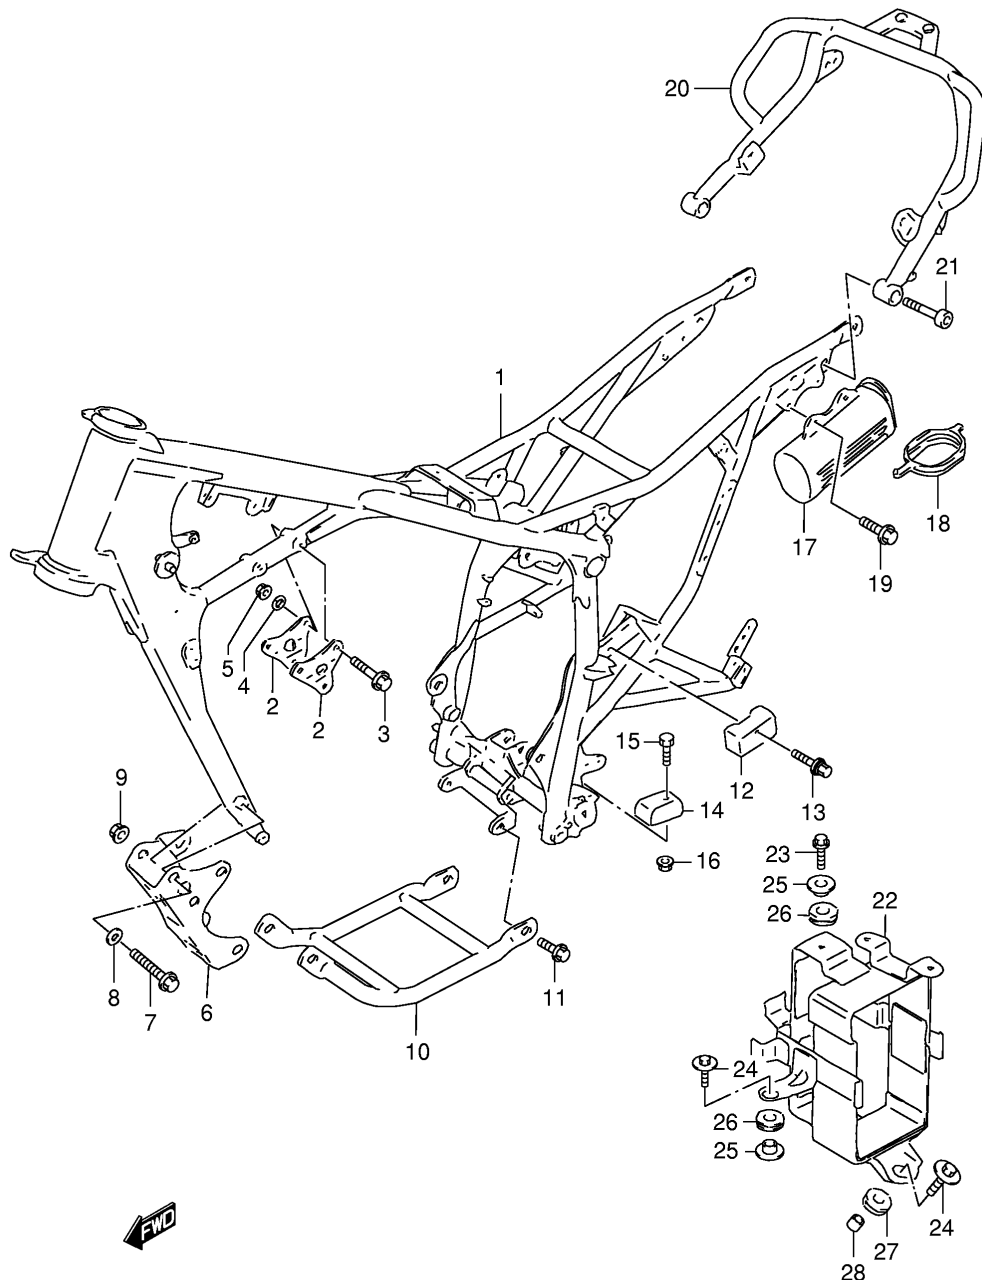

Ref No	Part No	Description
1	41100-44AE0-Z16	Frame (purple)
1	41100-44AE0-24K	Frame (charcoal)
2	41991-44A00-291	Plate, Mount Upper (black)
3	09103-08332	Bolt (8x53)
4	08321-01083	Lock Washer
5	08319-31083	Nut
6	41992-44AA1-Z16	Plate, Mount Lower (purple)
6	41992-44AA1-24K	Plate, Mount Lower (charcoal)
7	09103-08328	Bolt (8x65)
8	08321-01083	Lock Washer
9	08319-31083	Nut
10	42510-44AA0-Z16	Protector, Engine (purple)
10	42510-44AA0-24K	Protector, Engine (charcoal)
11	01550-10163	Bolt
12	43911-44A00	Guide, Chain Upper
13	01580-06353	Bolt
14	43912-44A00	Guide, Chain Lower
15	01500-06203	Bolt
16	08319-31063	Nut
17	41551-38200	Holder, Tool
18	41552-37210	Cap, Tool Holder
19	09116-06144	Bolt (6x16)
20	43980-44AB2-1TS	Grip, Rear (white)
20	43980-44AB2-24K	Grip, Rear (charcoal)
21	09106-08105	Bolt (8x30)
22	41540-44AA0	Holder, Battery
23	01550-06203	Bolt, Upper
24	09116-06047	Bolt, Lower
25	09169-06065	Spacer
26	09320-08021	Cushion
27	09320-10501	Cushion, Lower Lh
28	09180-06285	Spacer, Lower Lh

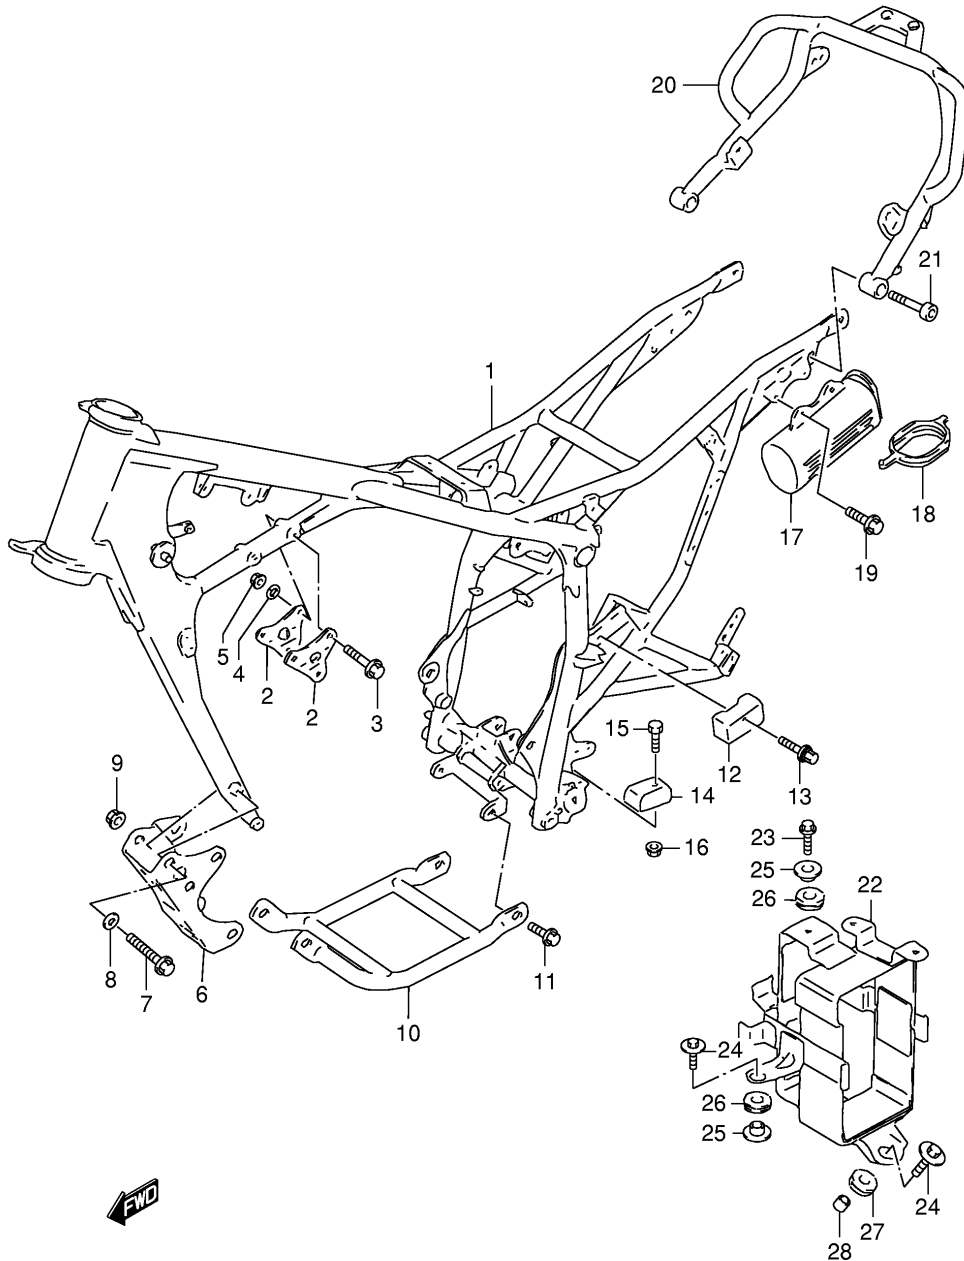


Ref No	Part No	Description
1	41100-44AE0-24K	Frame (charcoal)
2	41991-44A00-291	Plate, Mount Upper (black)
3	09103-08332	Bolt (8x53)
4	08321-01083	Lock Washer
5	08319-31083	Nut
6	41992-44AA1-24K	Plate, Mount Lower (charcoal)
7	09103-08328	Bolt (8x65)
8	08321-01083	Lock Washer
9	08319-31083	Nut
10	42510-44AA0-24K	Protector, Engine (charcoal)
12	43911-44A00	Guide, Chain Upper
13	01580-06353	Bolt
14	43912-44A00	Guide, Chain Lower
16	08319-31063	Nut
17	41551-38200	Holder, Tool
18	41552-37210	Cap, Tool Holder
20	43980-44AB2-1TS	Grip, Rear (white)
20	43980-44AB2-24K	Grip, Rear (charcoal)
21	09106-08105	Bolt (8x30)
22	41540-44AA0	Holder, Battery
23	01550-06203	Bolt, Upper
25	09169-06065	Spacer
26	09320-08021	Cushion
27	09320-10501	Cushion, Lower Lh
28	09180-06285	Spacer, Lower Lh

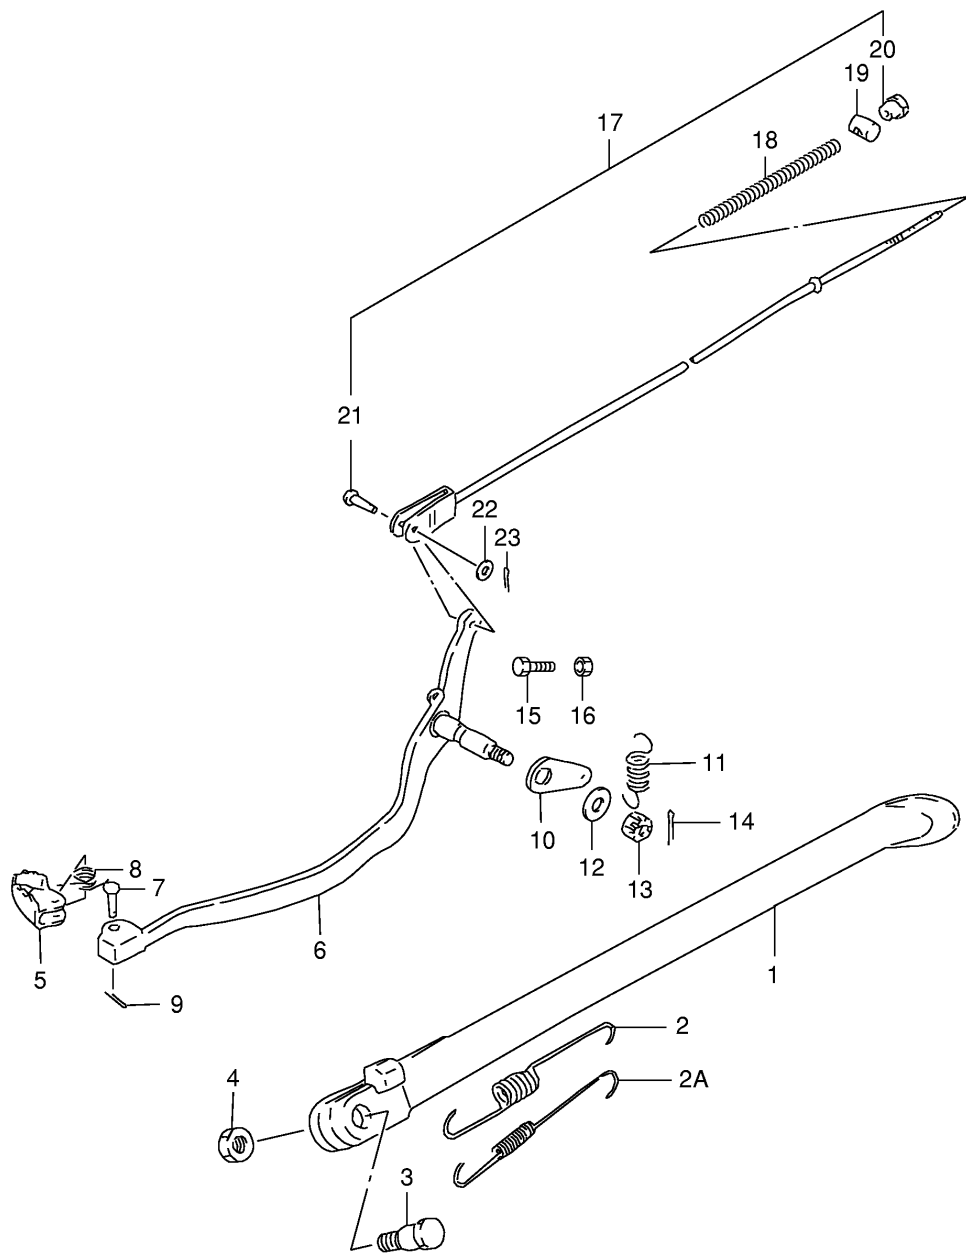

Ref No	Part No	Description
1	42310-44A00-019	Stand, Prop (black)
1	42310-44A32-019	Stand, Prop (black)
2	09443-17007	Spring
2	09443-20003	Spring, Outer
2a	09443-12035	Spring, Inner
3	09111-10019	Bolt
4	09159-10097	Nut
5	43110-14130	Pedal, Brake
6	43120-44A11	Arm, Brake Pedal
7	09200-06038	Pin
8	09444-11005	Spring
9	04111-20158	Cotter Pin
10	43128-38200	Arm, Brake Return Spring
11	09443-14002	Spring
12	08211-08202	Thrust Washer
13	08314-40083	Nut
14	04111-20208	Cotter Pin
15	09100-06009	Bolt (6x23)
16	08310-00063	Nut
17	43300-44A03	Rod Assy, Rear Brake
18	09440-09004	• . Spring
19	09209-13005	• . Pin
20	09150-06009	• . Nut
21	09200-06013	• . Pin
22	08322-01063	• . Washer
23	04111-20208	• . Cotter Pin




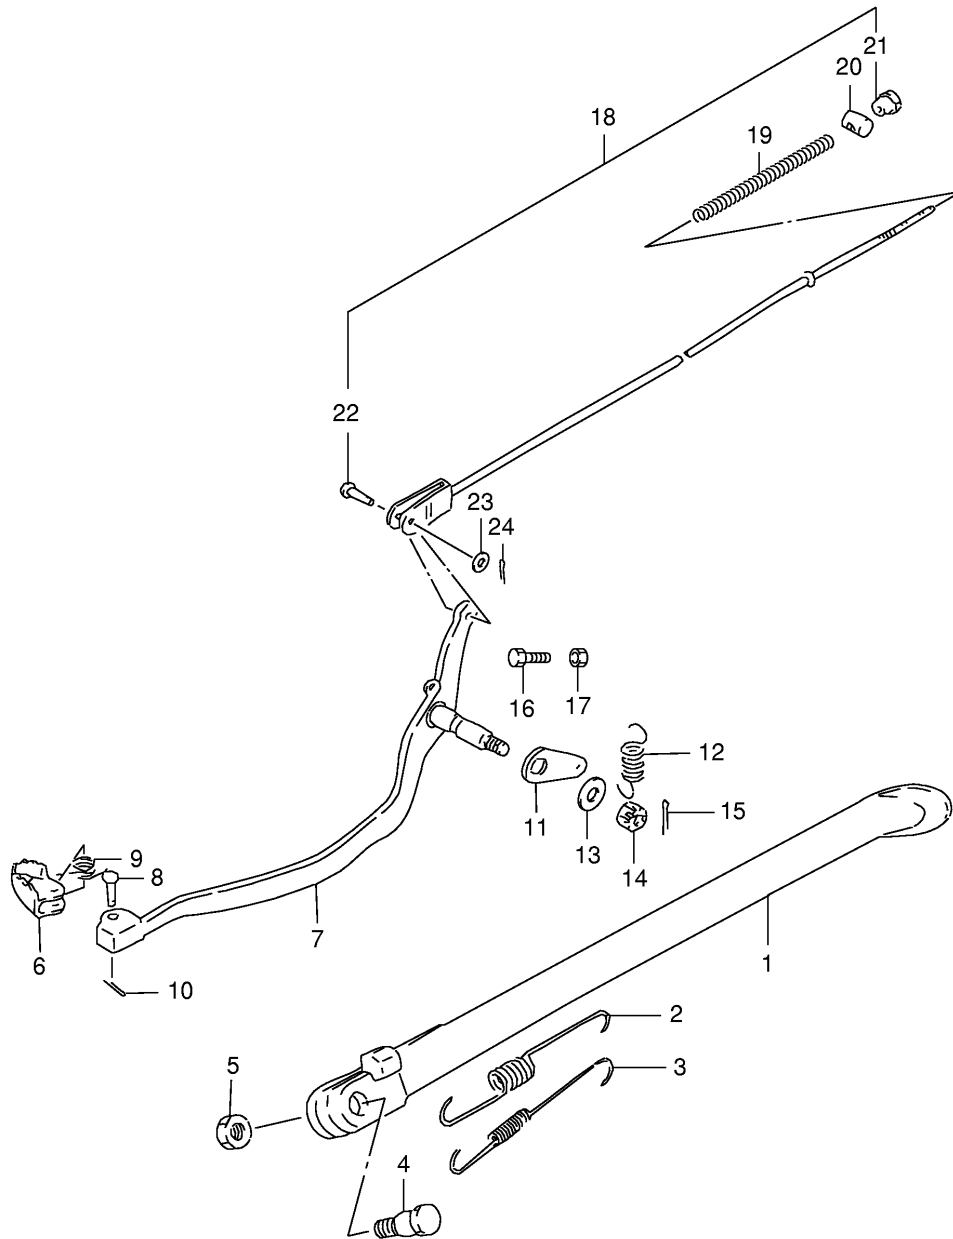


Ref No	Part No	Description
2	09443-20003	Spring, Outer
3	09443-12035	Spring, Inner
4	09111-10019	Bolt
5	09159-10097	Nut
6	43110-14130	Pedal, Brake
7	43120-44A12	Arm, Brake Pedal
8	09200-06038	Pin
9	09444-11005	Spring
10	04111-20158	Cotter Pin
11	43128-38200	Arm, Brake Return Spring
12	09443-14002	Spring
13	08211-08202	Thrust Washer
14	08314-40083	Nut
15	04111-20208	Cotter Pin
16	09100-06009	Bolt (6x23)
17	08310-00063	Nut
18	43300-44A03	Rod Assy, Rear Brake
19	09440-09004	• Spring
20	09209-13018	• Pin
21	09150-06014	• Nut
22	09200-06013	• Pin
23	08322-01063	• Washer
24	04111-20208	• Cotter Pin




Ref No	Part No	Description
1	43510-44A03-019	Bar, Front Footrest Rh (black)
2	43520-44A03-019	Bar, Front Footrest Lh (black)
3	43530-44A02	Bracket, Front Footrest
4	43550-44A01-019	Footrest, Front (black)
5	09103-12047	Bolt (12x25)
6	09319-10053	Bush
7	08319-31103	Nut
8	09200-08002	Pin
9	04111-20158	Cotter Pin
10	09448-14037	Spring
11	43610-03001	Bar, Footrest Rubber
12	43612-33200	Rubber, Pillion Footrest
13	09160-19006	Washer (19.5x32x2)
14	09200-06033	Pin
15	04111-20158	Cotter Pin

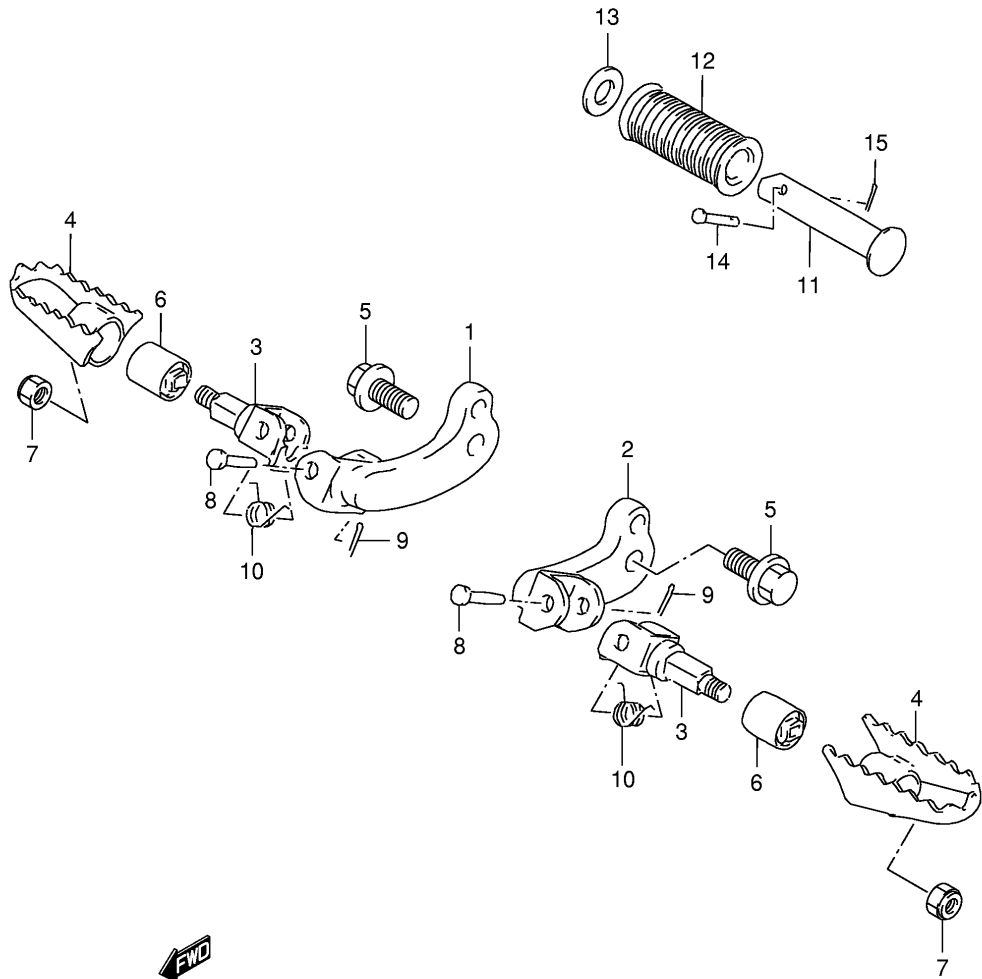

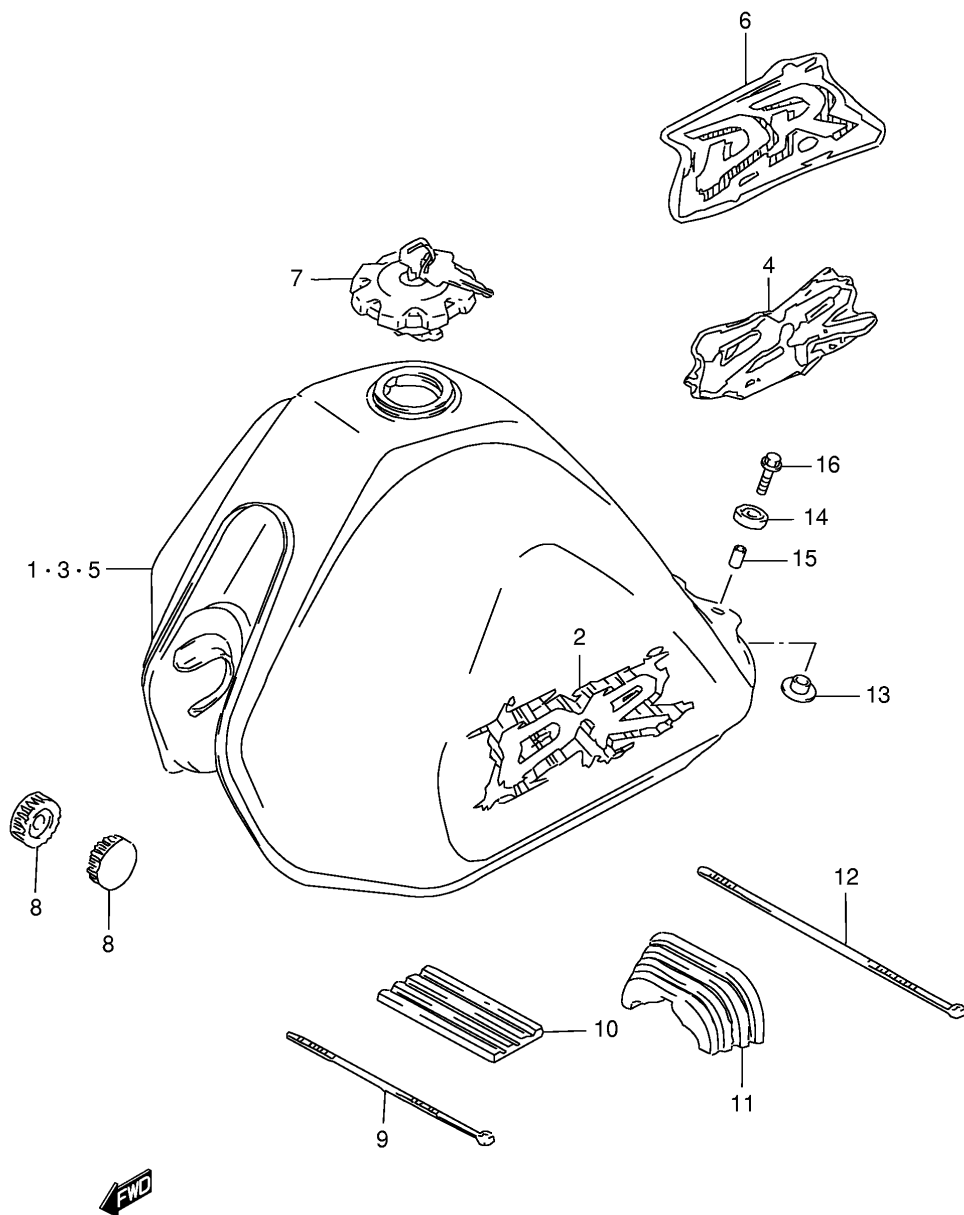


Ref No	Part No	Description
5	44100-44AL0-30H	Tank Assy, Fuel (white)
5	44100-44AM0-30H	Tank Assy, Fuel (white)
6	68120-44A00-Z65	• Emblem Set
7	44200-12851	Cap Set, Fuel Tank
8	09329-10016	Cushion
9	09407-20404	Clamp
10	44541-14500	Cushion, Fuel Tank Upper
11	44542-14A00	Cushion, Fuel Tank Rear
12	09407-30402	Clamp
13	09320-10020	Cushion
14	09320-14013	Cushion
15	09180-06072	Spacer (6.4x9x18)
16	01570-06303	Bolt


Ref No	Part No	Description
5	44200-12851	Cap Set, Fuel Tank
6	09329-10016	Cushion
7	09407-25402	Clamp
8	44541-14500	Cushion, Fuel Tank Upper
9	44542-14A00	Cushion, Fuel Tank Rear
10	09407-30402	Clamp
11	09320-10020	Cushion
12	09320-14013	Cushion
13	09180-06271	Spacer (6.5x9x18)
14	01570-06303	Bolt

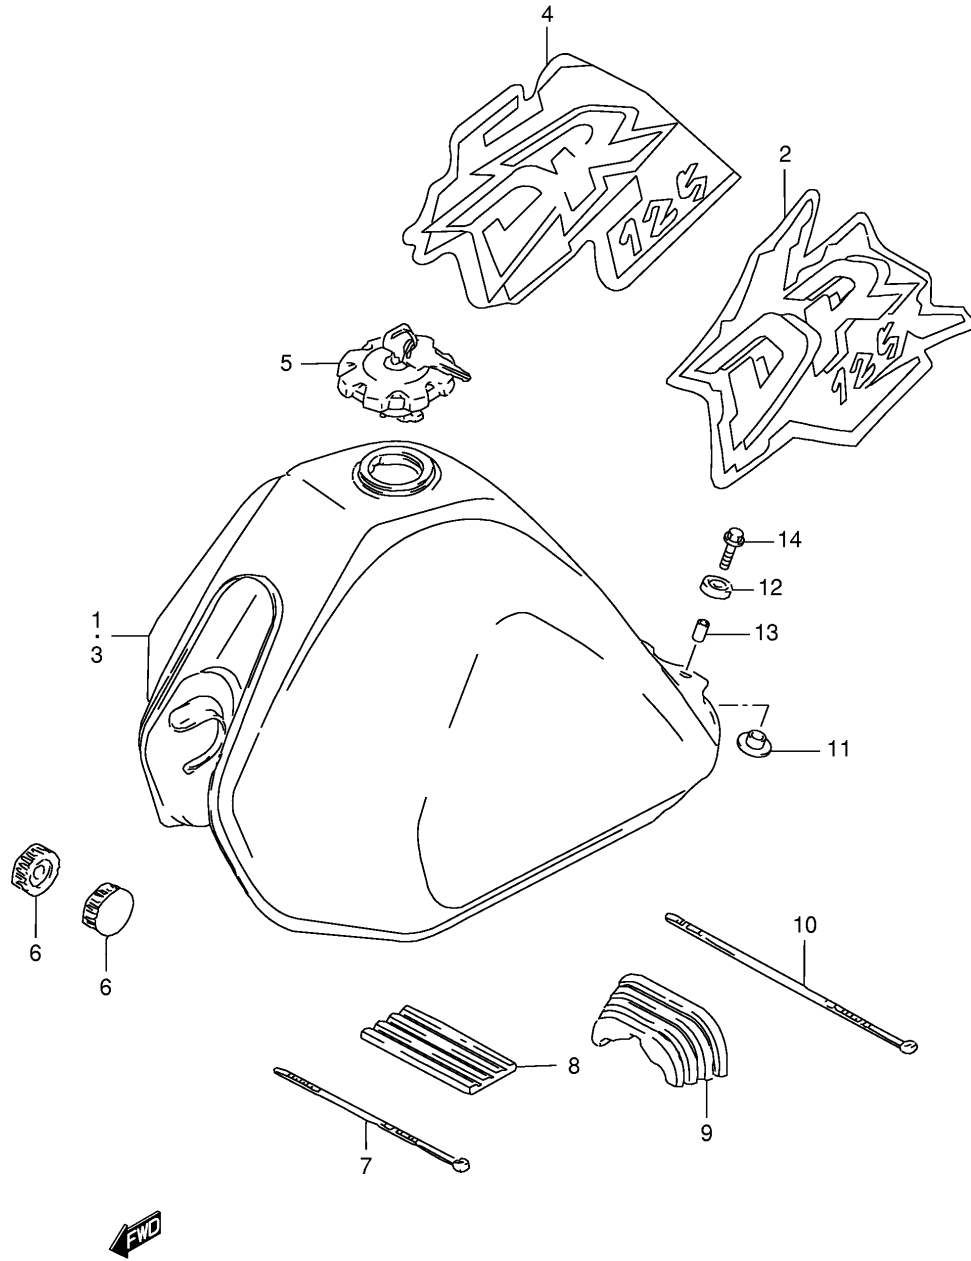

Ref No Part No Description

5	44200-12851	Cap Set, Fuel Tank
6	09329-10016	Cushion
7	09407-25402	Clamp
8	44541-14500	Cushion, Fuel Tank Upper
9	44542-14A00	Cushion, Fuel Tank Rear
10	09407-30402	Clamp
11	09320-10020	Cushion
12	09320-14013	Cushion
13	09180-06271	Spacer (6.5x9x18)
14	01570-06303	Bolt

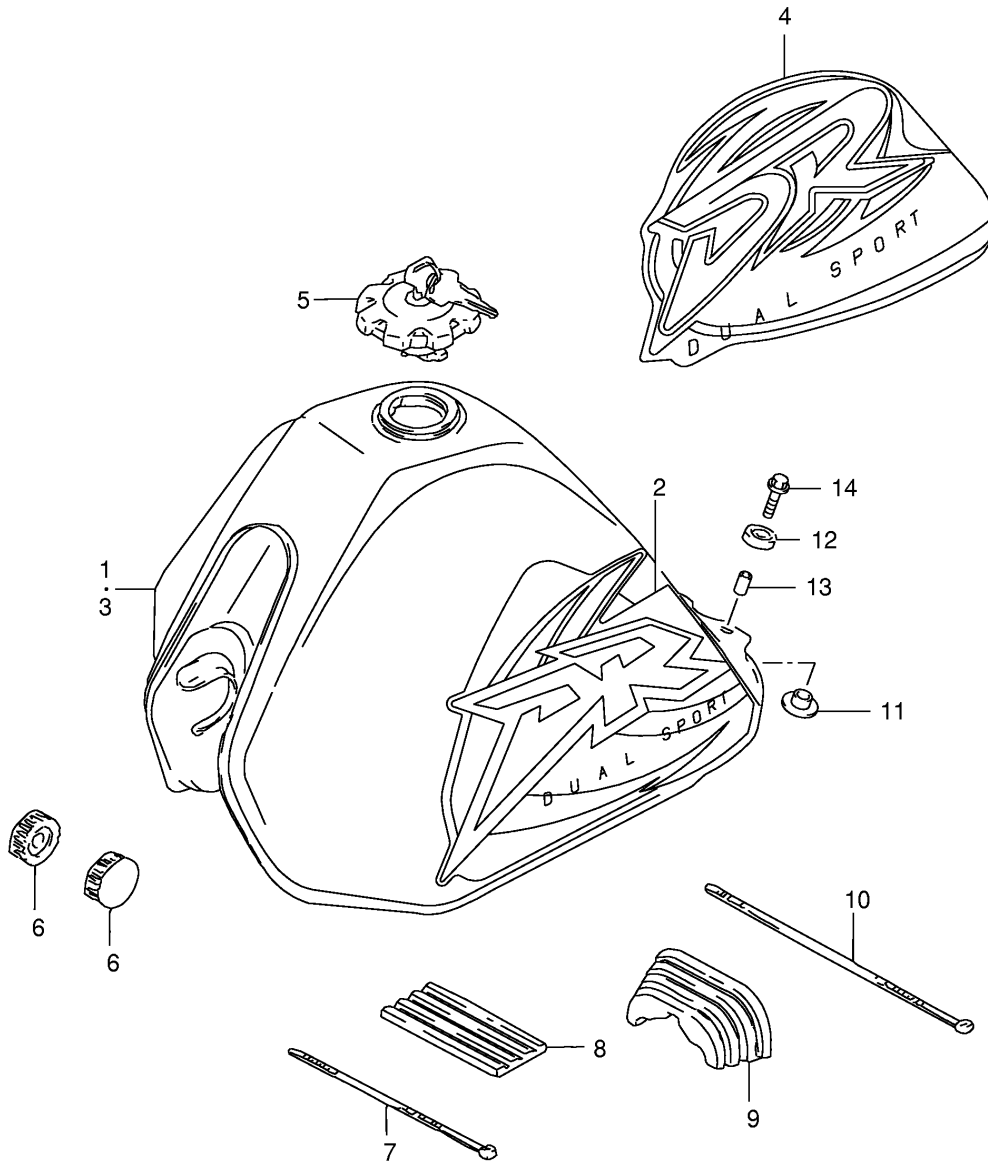


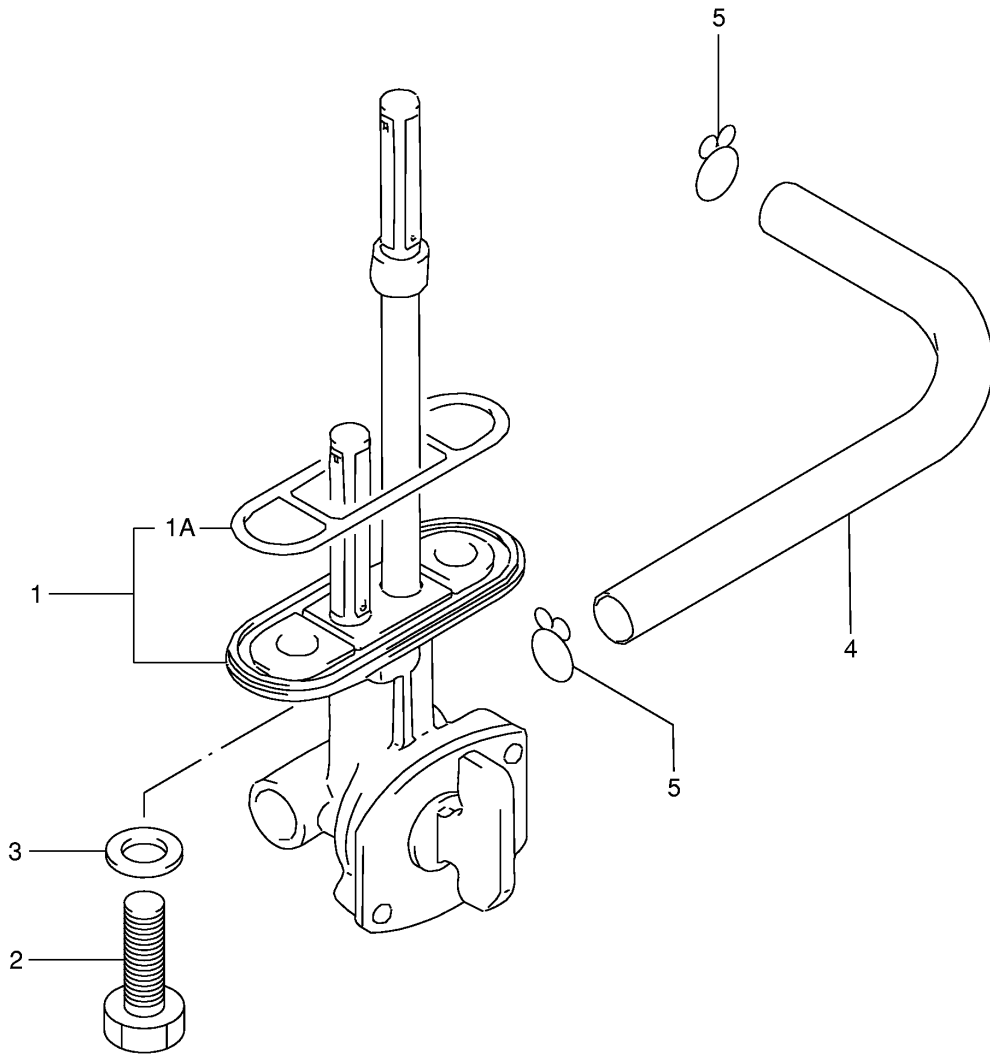


Ref No	Part No	Description
1	44300-44AA0	Cock Assy, Fuel
1a	44348-87420	• O Ring
2	09128-06057	Screw (6x20)
3	09168-06026	Gasket (6.4x11.5x0.8)
4	09352-50823-600	Hose (5x8.2x600)
5	09401-08401	Clip

Ref No	Part No	Description
1	47111-44AA0-30H	Cover, Frame Rh (white)
2	47166-44AA0	Shield, Frame Cover Rh
3	47211-44AA0-30H	Cover, Frame Lh (white)
6	68135-44A70-Z65	Tape, Rh
6	68145-44A70-Z65	Tape, Lh
7	09320-08018	Cushion
8	09320-08029	Cushion
9	09321-10027	Cushion
10	09136-06017	Screw (6x16)
11	09169-06028	Washer




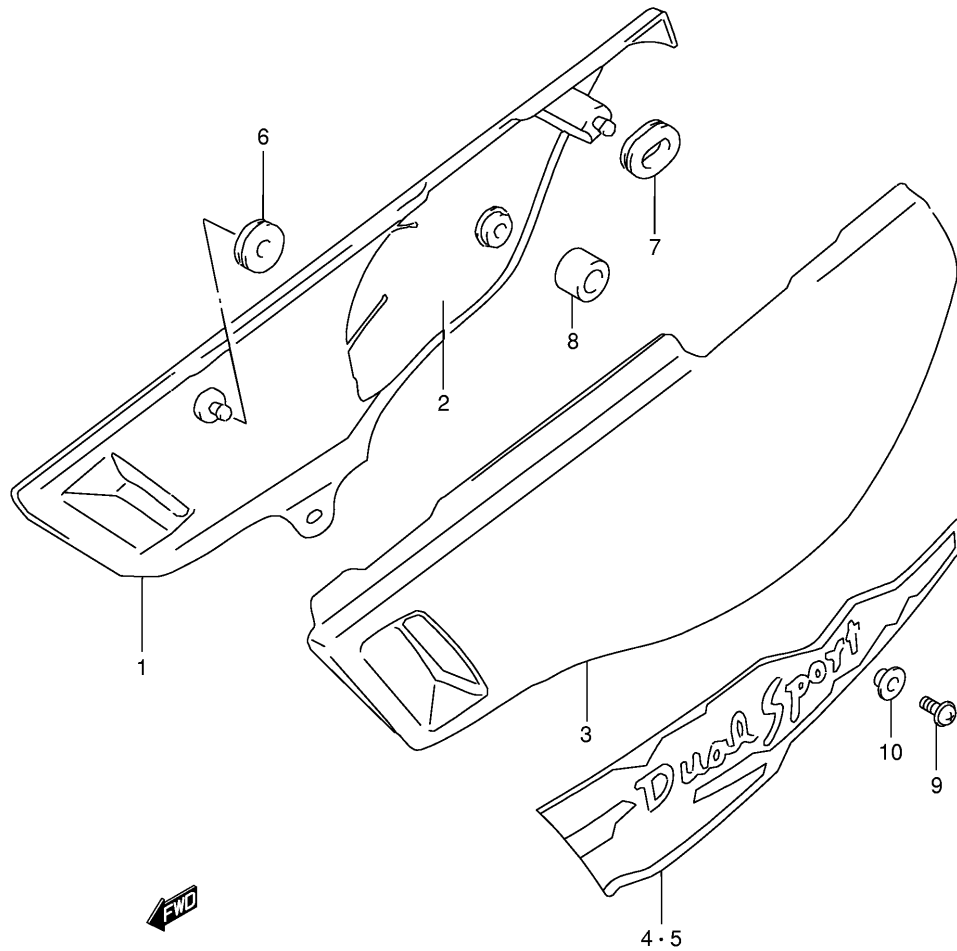

Ref No	Part No	Description
1	47111-44AA0-30H	Cover, Frame Rh (white)
1	47111-44AA0-019	Cover, Frame Rh (black)
2	47166-44AA0	Shield, Frame Cover Rh
3	47211-44AA0-30H	Cover, Frame Lh (white)
3	47211-44AA0-019	Cover, Frame Lh (black)
4	68135-44A80-G3M	Tape, Rh
4	68135-44A80-G3N	Tape, Rh
5	68145-44A80-G3M	Tape, Lh
5	68145-44A80-G3N	Tape, Lh
6	09320-08018	Cushion
7	09320-08029	Cushion
8	09321-10027	Cushion
9	09136-06017	Screw (6x16)
10	09169-06028	Washer

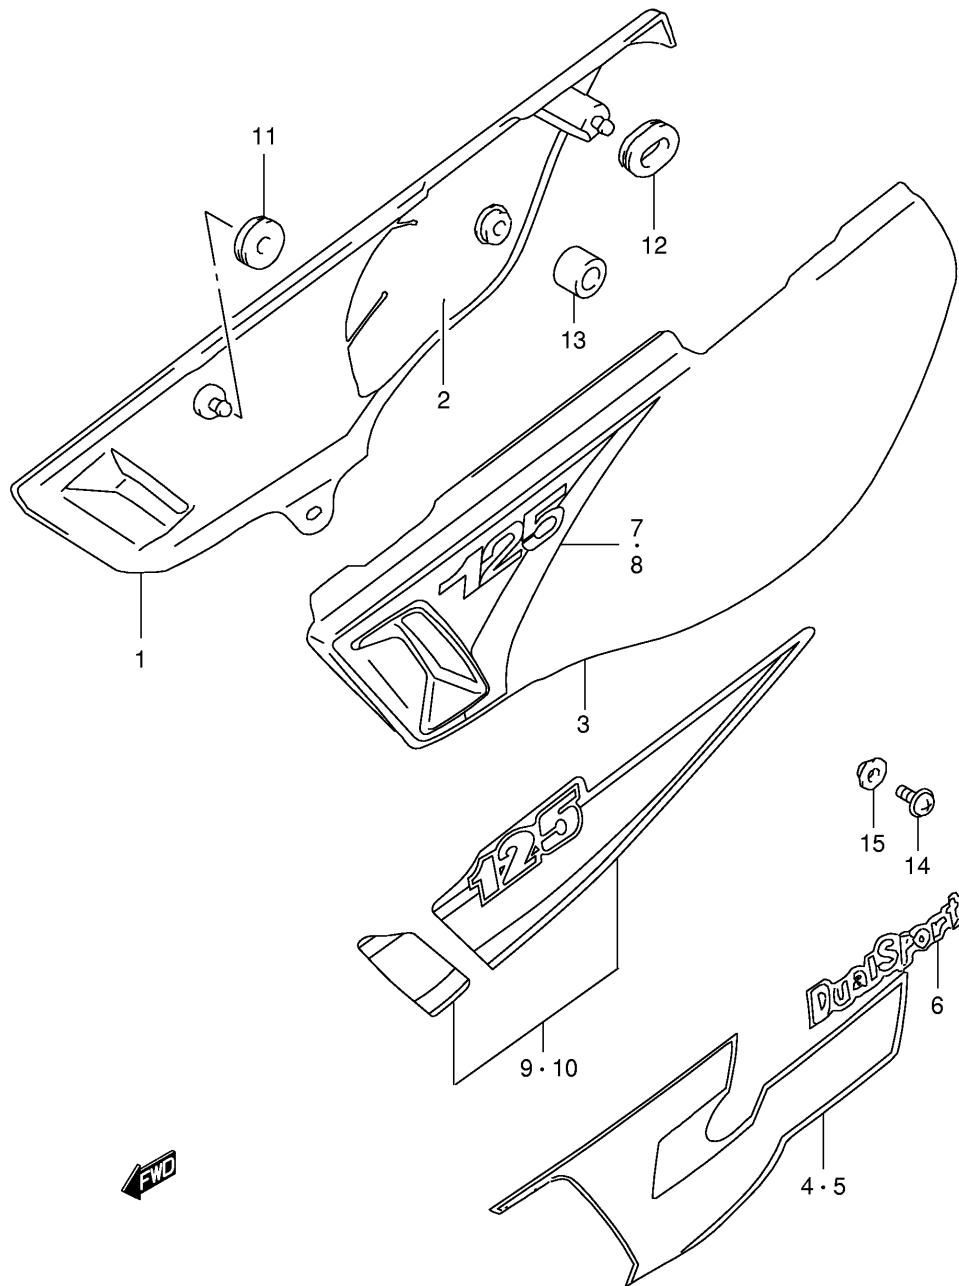


Ref No	Part No	Description
1	47111-44AA0-30H	Cover, Frame Rh (white)
1	47111-44AA0-019	Cover, Frame Rh (black)
2	47166-44AA0	Shield, Frame Cover Rh
3	47211-44AA0-30H	Cover, Frame Lh (white)
3	47211-44AA0-019	Cover, Frame Lh (black)
11	09320-08018	Cushion
12	09320-08029	Cushion
13	09321-10027	Cushion
14	09136-06017	Screw (6x16)
15	09169-06028	Washer

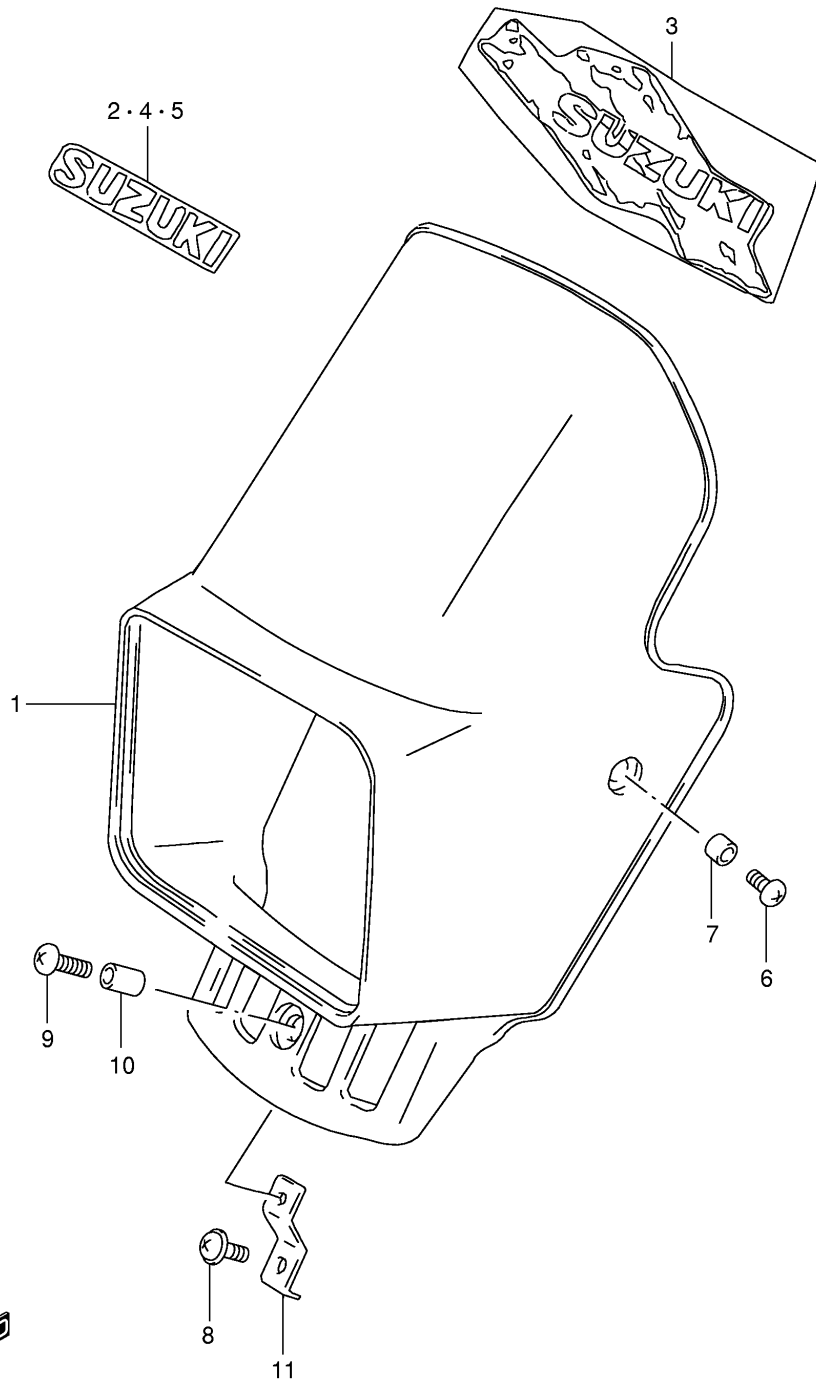


Ref No	Part No	Description
1	51811-14A20-30H	Cover, Headlamp (white)
4	68174-35B00-E9G	Emblem, Suzuki
6	02142-06123	Screw
7	09180-06098	Spacer (6.1x8x3.5)
8	02112-36127	Screw
9	02142-06203	Screw
10	09180-06035	Spacer (6.1x8x12)
11	51814-44A00	Brace, Cover Lower


Ref No	Part No	Description
1	51811-14A20-019	Cover, Headlamp (black)
1	51811-14A20-30H	Cover, Headlamp (white)
2	68171-44B00-87N	Emblem, Suzuki
2	68171-44B00-L5D	Emblem, Suzuki
2	68171-44B00-8YM	Emblem, Suzuki
3	02142-06123	Screw
4	09180-06245	Spacer (6.1x8x3.5)
5	02112-36127	Screw
6	02142-06203	Screw
7	09180-06249	Spacer (6.1x8x12)
8	51814-44A00	Brace, Cover Lower

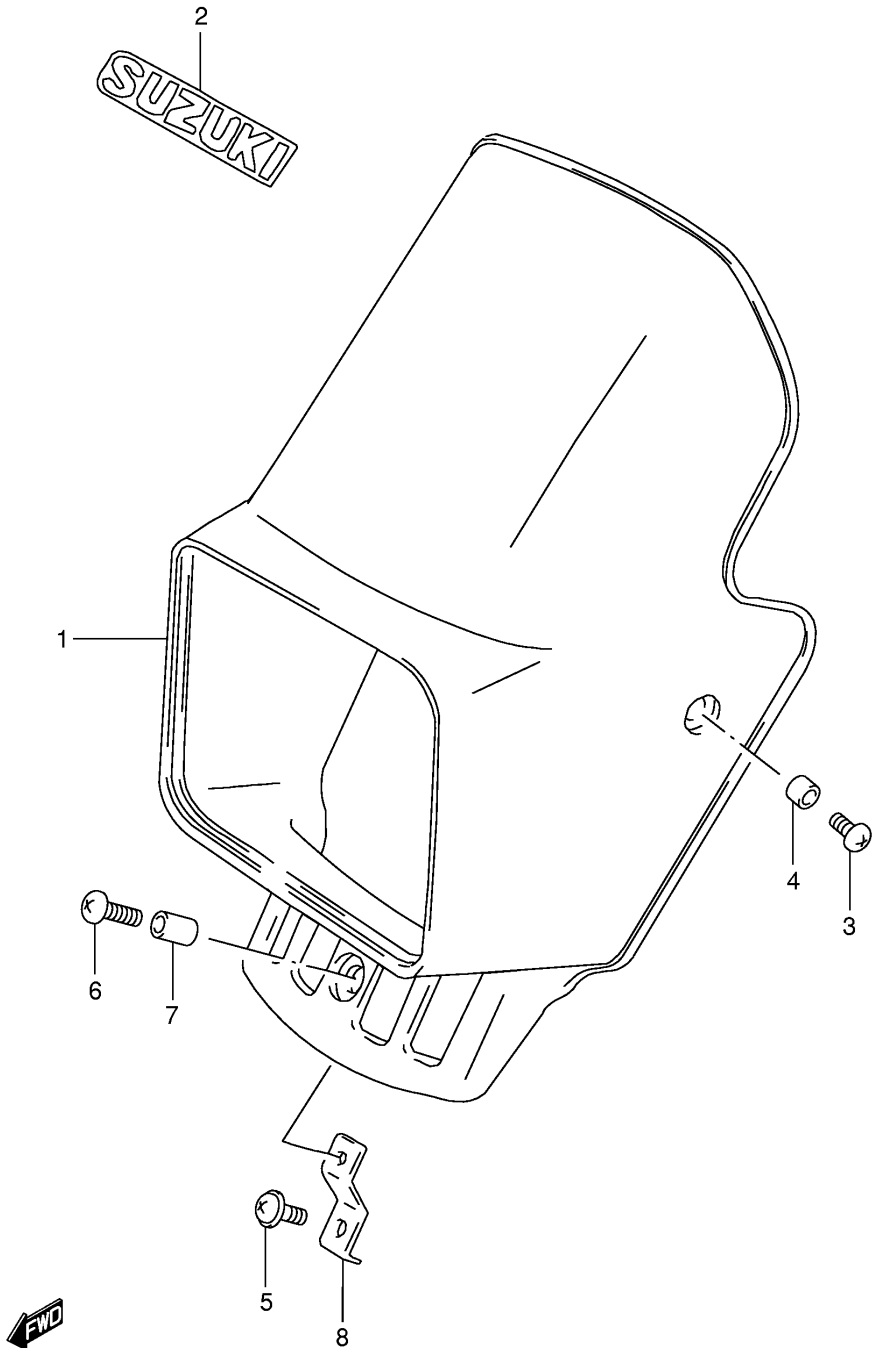


Ref No	Part No	Description
1	53111-44A00-30H	Fender, Front (white)
1	53111-44A10-30H	Fender, Front (white)
2	01550-06163	Bolt
3	09169-06054	Washer
4	53310-14A40	Mudflap, Front Fender
5	02142-06167	Screw (6x16)
6	02142-06207	Screw, Center (6x20)
7	09160-06129	Washer
8	08316-10063	Nut

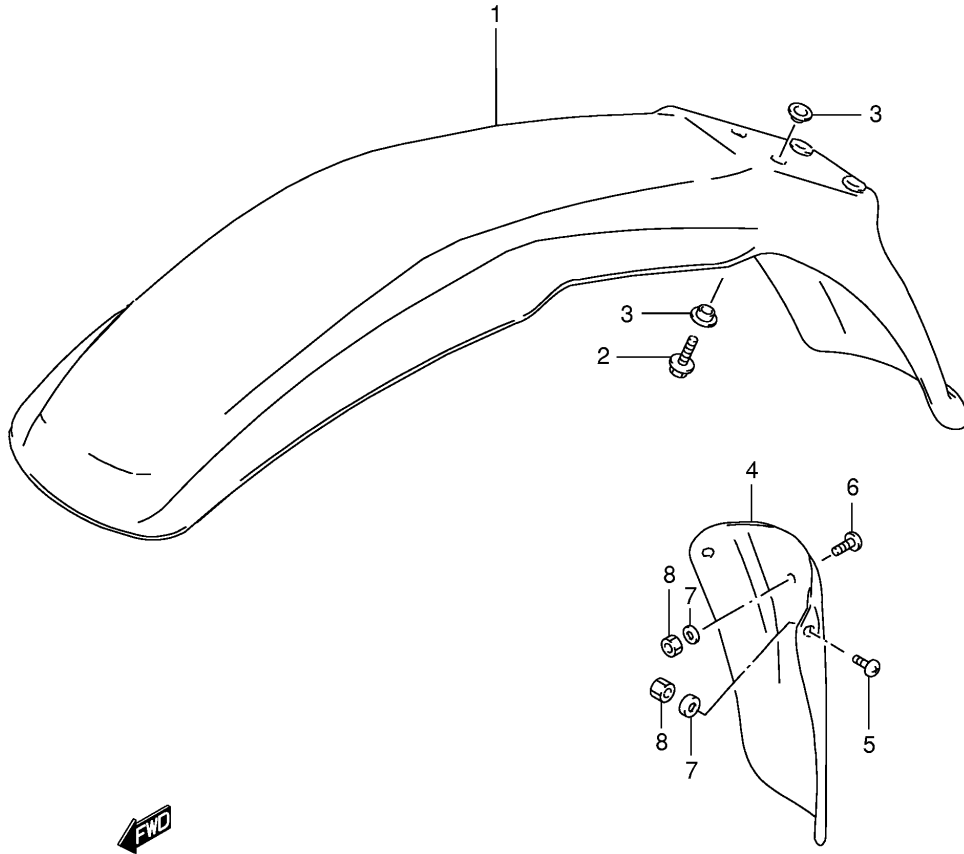


Ref No	Part No	Description
1	53111-44A00-019	Fender, Front (black)
1	53111-44A00-30H	Fender, Front (white)
1	53111-44A10-019	Fender, Front (black)
1	53111-44A10-30H	Fender, Front (white)
2	01550-06163	Bolt
3	09169-06054	Washer
4	53310-14A40	Mudflap, Front Fender
5	02142-06167	Screw (6x16)
6	02142-06207	Screw, Center (6x20)
7	09160-06129	Washer
8	08316-10063	Nut

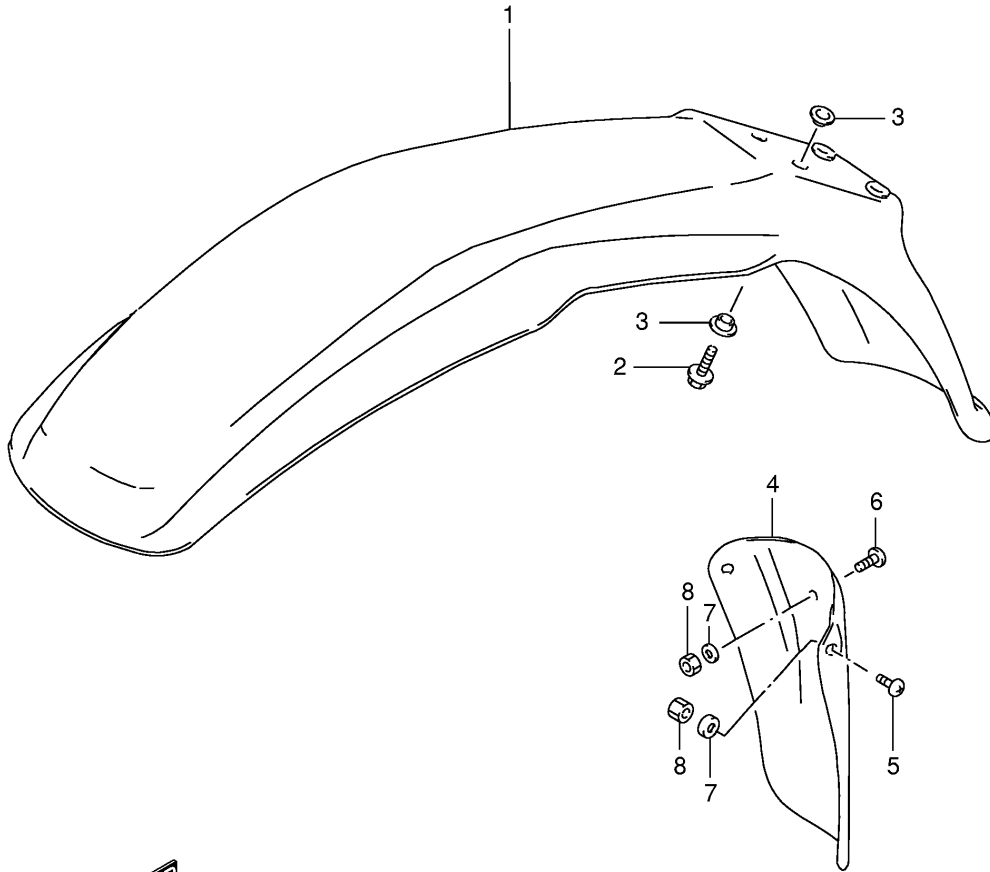


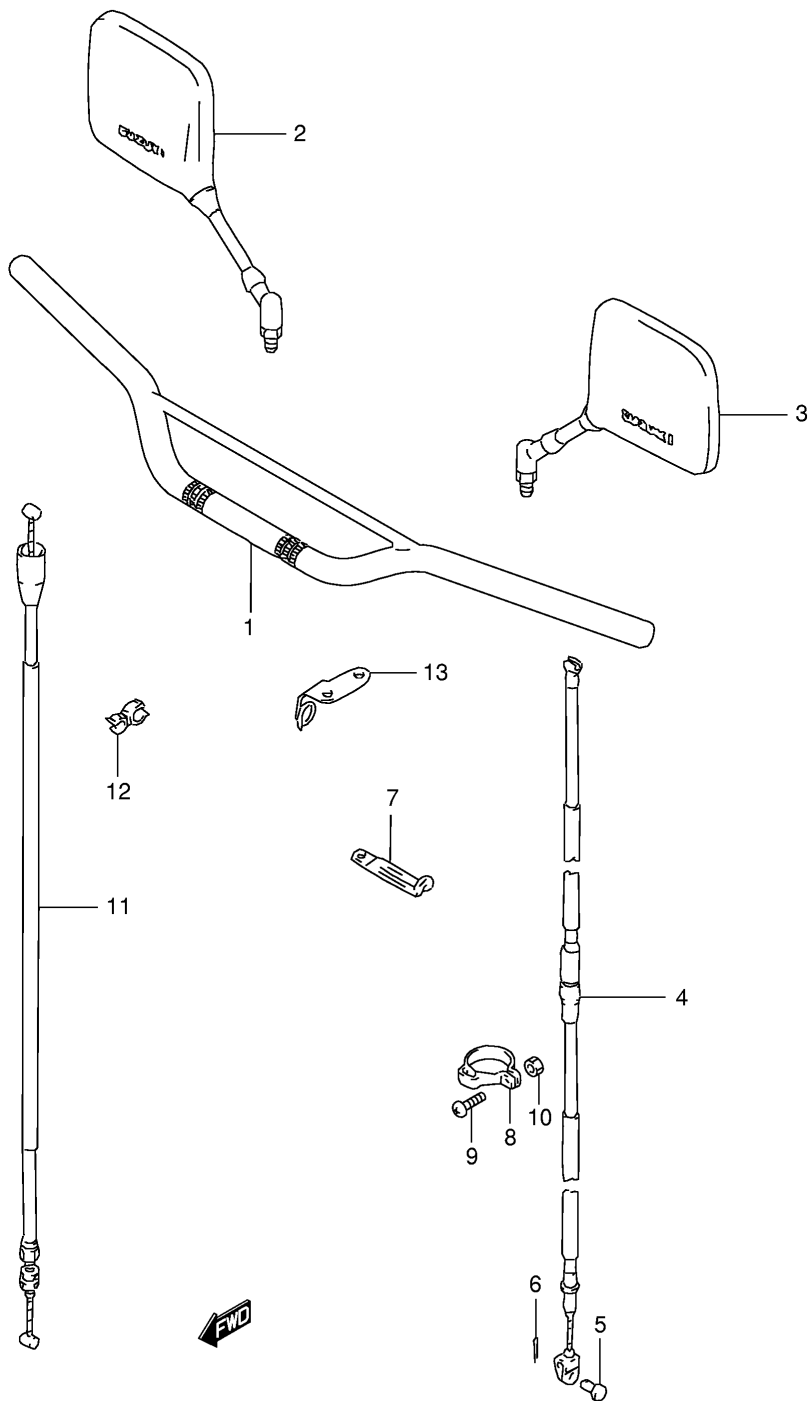


Ref No	Part No	Description
1	56110-44AA0-291	Handlebar (black)
2	56500-10041	Mirror Assy, Rear View Rh
3	56600-10041	Mirror Assy, Rear View Lh
4	58200-44AA0	Cable Assy, Clutch
5	09200-06004	Pin (l:13)
6	04111-20158	Cotter Pin
7	09407-25401	Clamp (l:235)
8	58285-05350	Clamp, Clutch Cable
9	02112-05163	Screw
10	09140-05006	Nut
11	58300-44AA0	Cable Assy, Throttle
12	09408-00078	Clip, Throttle Cable
13	58620-15D10	Guide, Clutch Cable

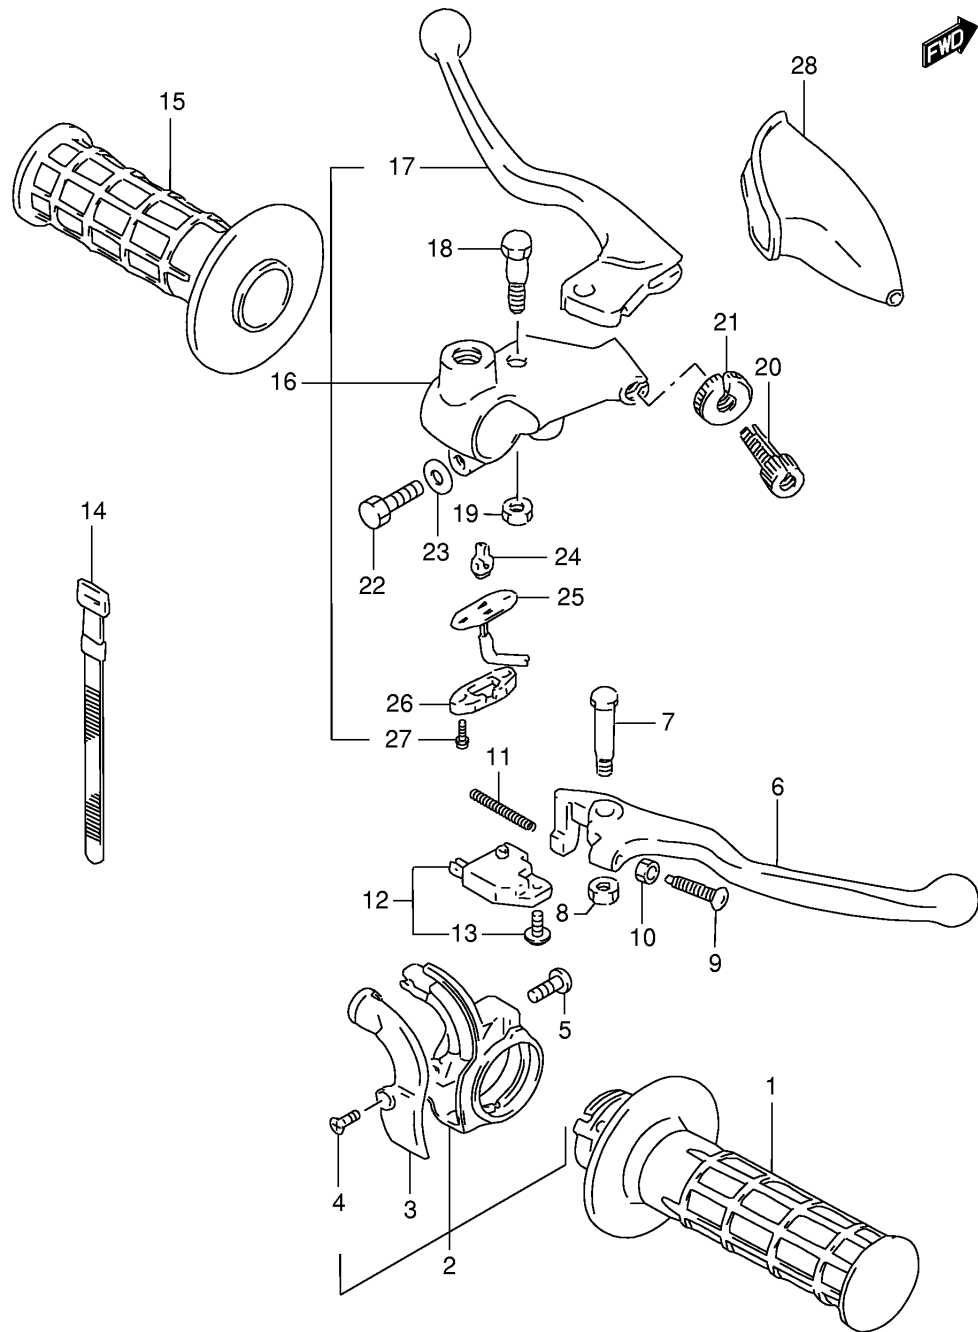



Ref No	Part No	Description
1	57110-14D00	Grip, Throttle
2	57100-28B00	Case Assy, Throttle
3	57129-13601	• . Cover
4	02122-04103	• . Screw
5	02112-05164	• . Screw
6	57421-03D00	Lever, Brake
7	57431-14500	Bolt, Brake Lever
8	08319-21068	Nut
9	57431-14511	Bolt, Adjust
10	08310-00053	Nut
11	57318-14502	Spring, Return
12	57460-17C00	Switch Assy, Stop
13	57465-17C00	• . Screw
14	09407-12402	Clamp (I:120)
15	57211-27C00	Grip, Lh
16	57500-44AA0	Lever Assy, Clutch
17	57620-15D11	• . Lever
18	57431-11013	• . Bolt
19	08319-21068	• . Nut
20	57441-11010	• . Adjuster
21	57442-44B00	• . Nut
22	01500-06207	• . Bolt
23	08322-01067	• . Washer
24	57465-18601	• . Contact
25	57541-49100	• . Wire Assy
26	57481-33010	• . Cover
27	57484-49110	• . Screw
28	57341-40001	Cover, Clutch Lever

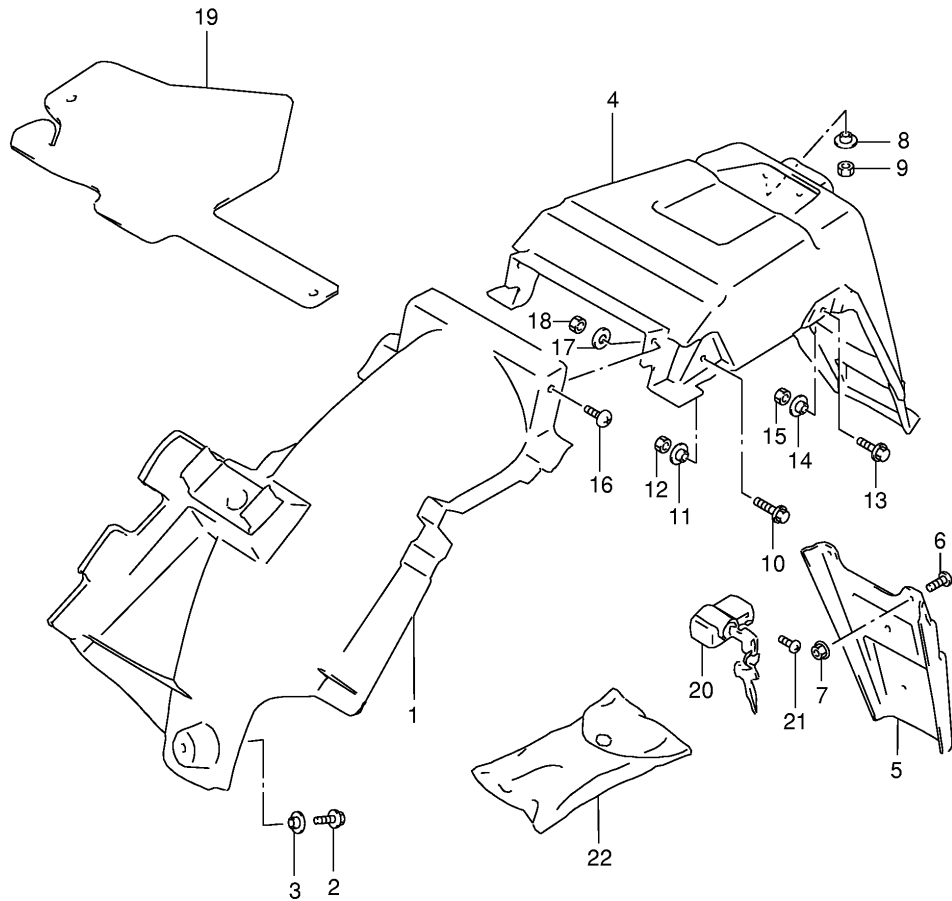

Ref No	Part No	Description
1	63110-44AA0	Body, Rear Fender Front
2	01550-06123	Bolt
3	09169-06010	Washer
4	63100-44AB0-30H	Body, Rear Fender Rear (white)
4	63113-44AD1-30H	Body, Rear Fender Rear (white)
5	63311-44AB1	Extention, Rear Fender
8	09169-06045	Washer
9	08319-31067	Nut
10	09106-08120	Bolt, Front
11	09169-08037	Washer
12	08310-00083	Nut
13	01550-06203	Bolt, Rear
14	09169-06045	Washer
15	08319-31067	Nut
16	02142-06163	Screw, Fr/r
17	09160-06132	Washer (6.5x18x1.6)
18	08319-31067	Nut
19	63411-44AA0	Mud Flap, Rear Fender Front
20	95700-44810	Lock Set, Helmet
21	09139-06089	Screw
22	09800-21022	Tool Set

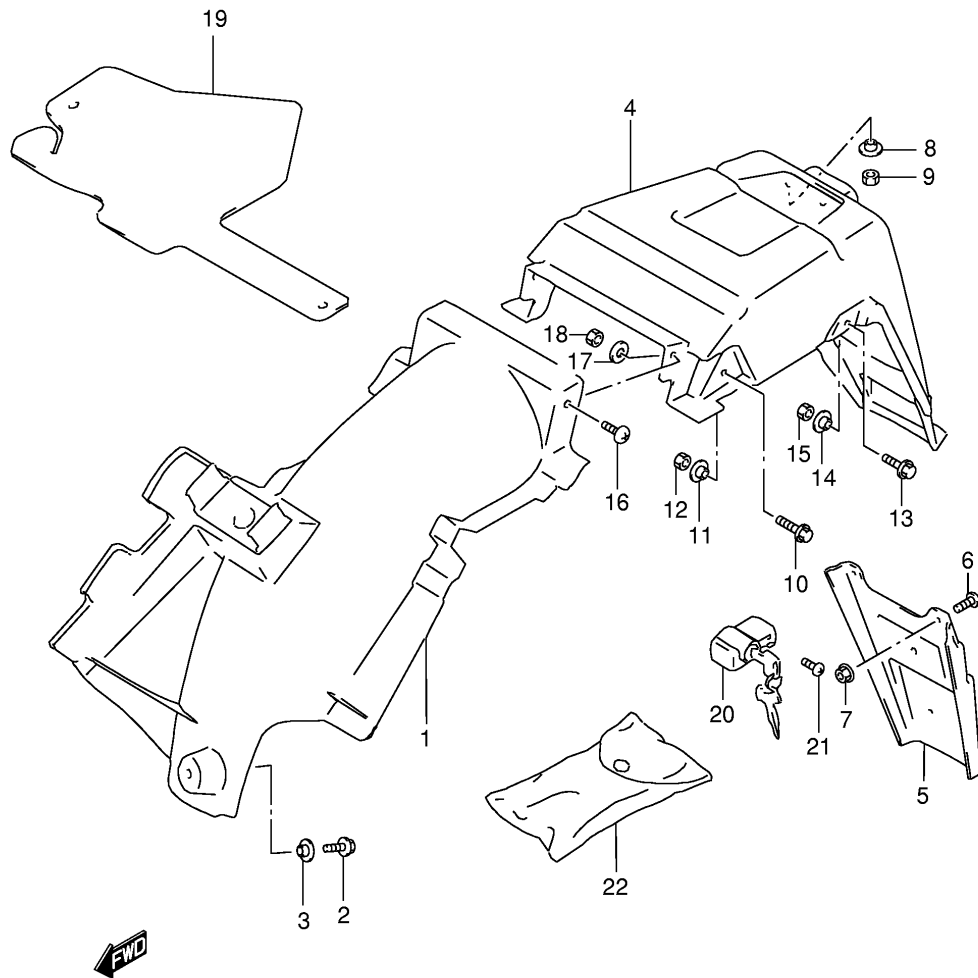


Ref No	Part No	Description
1	63110-44AA0	Body, Rear Fender Front
2	01550-06123	Bolt
3	09169-06010	Washer
4	63113-44AD1-019	Body, Rear Fender Rear (black)
4	63113-44AD1-30H	Body, Rear Fender Rear (white)
5	63311-44AD0	Extention, Rear Fender
5	63311-44AC0	Extention, Rear Fender
6	02142-05163	Screw
7	08319-31053	Nut
8	09169-06045	Washer
9	08319-31067	Nut
10	09106-08120	Bolt, Front
11	09169-08037	Washer
12	08310-00083	Nut
13	01550-06203	Bolt, Rear
14	09169-06045	Washer
15	08319-31067	Nut
16	02142-06163	Screw, Fr/rr
17	09160-06084	Washer (6.5x18x1.6)
18	08319-31067	Nut
19	63411-44AA0	Mud Flap, Rear Fender Front
20	95700-44810	Lock Set, Helmet
21	09139-06089	Screw
22	09800-21022	Tool Set

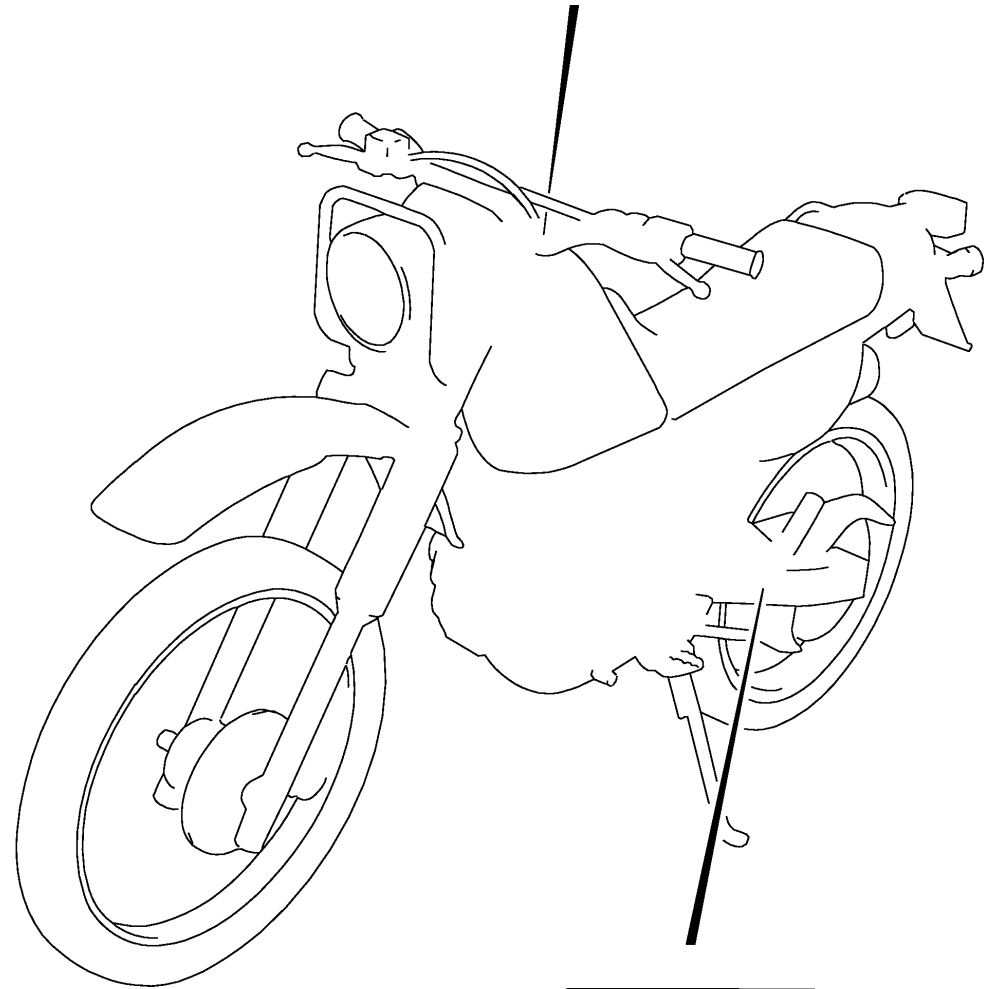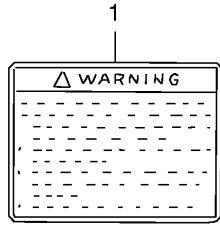

Ref No	Part No	Description
1	68319-15D00	Label, Safety (english)
1	68319-15D30	Label, Safety (french)
1	68319-15D20	Label, Safety (german)
2	68332-44AC0	Label, Tire Air Pressure
3	99011-44A27-01R	Manual, Owner's




2

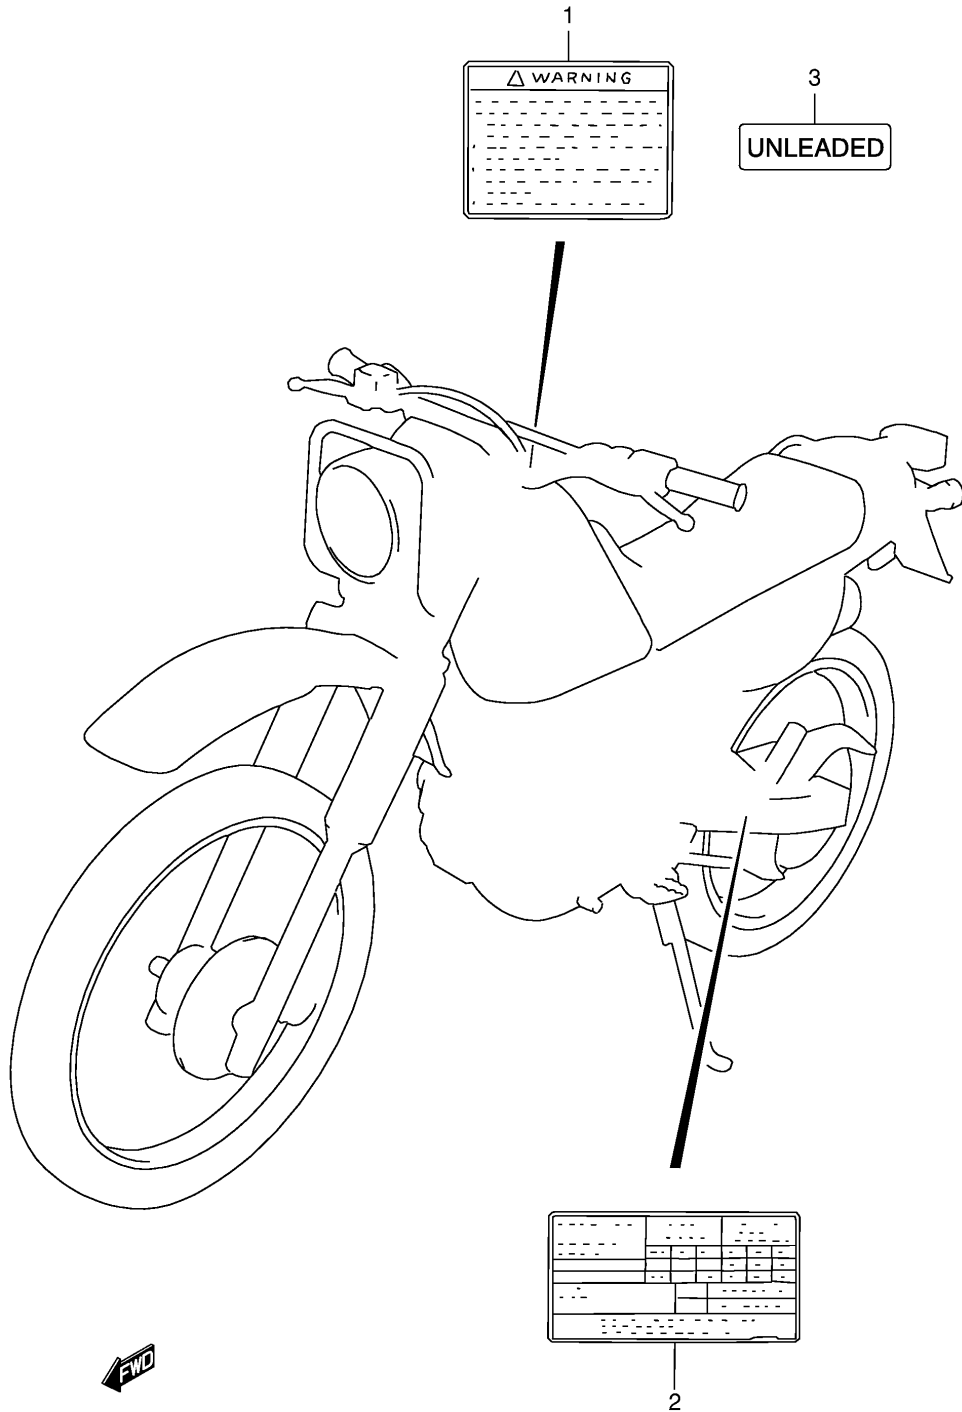


Block Title:
LABEL (MODEL X/Y)

Ref No	Part No	Description
1	68319-33E31	Label, Safety (franch)
1	68319-33E41	Label, Safety (italian)
1	68319-33E21	Label, Safety (german)
1	68319-33E01	Label, Safety (english)
1	68319-33E51	Label, Safety (spanish)
1	68319-33E71	Label, Safety (dutch)
2	68332-44AD0	Label, Tire Information
3	68623-17D00	Label, Fuel

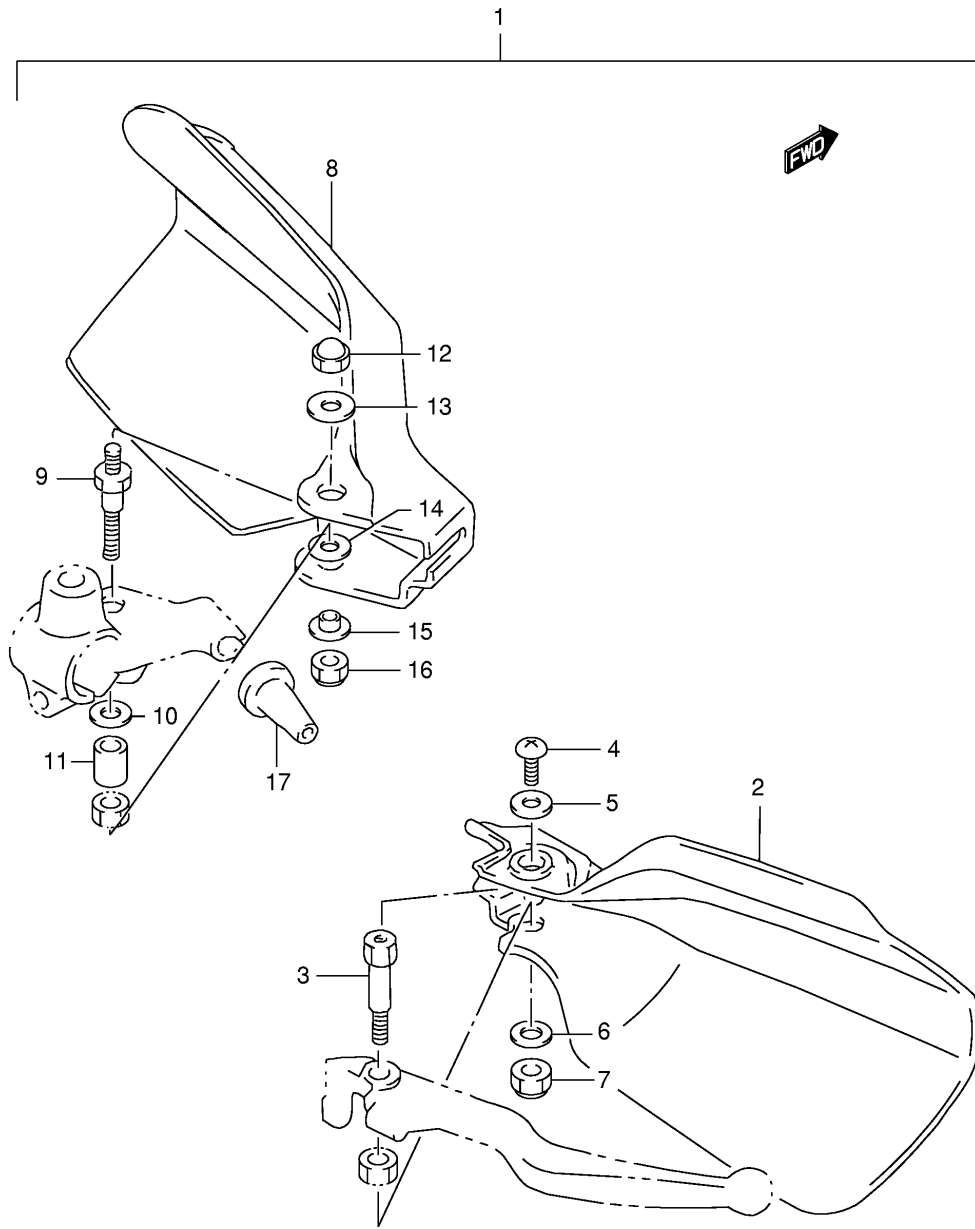


Ref No	Part No	Description
1	57300-05810-Z16	Cover Set, Knuckle (purple)
2	57341-05D00-Z16	. Cover, Knuckle Rh (purple)
3	57431-05D00	. Bolt
4	02142-05107	. Screw
5	09160-05017	. Washer (5.5x16x1.2)
6	09160-06042	. Washer (6.5x17x1.6)
7	08319-21068	. Nut
8	57541-31D00-Z16	. Cover, Knuckle Lh (purple)
9	57531-44B00	. Bolt
10	57533-44B00	. Washer
11	57532-44B00	. Spacer
12	08313-10067	. Nut
13	09160-06066	. Washer (6.5x20x1.6)
14	09160-06019	. Washer (6.5x16x1.2)
15	09169-06055	. Washer
16	08319-21068	. Nut
17	58273-31000	. Boot, Clutch Cable

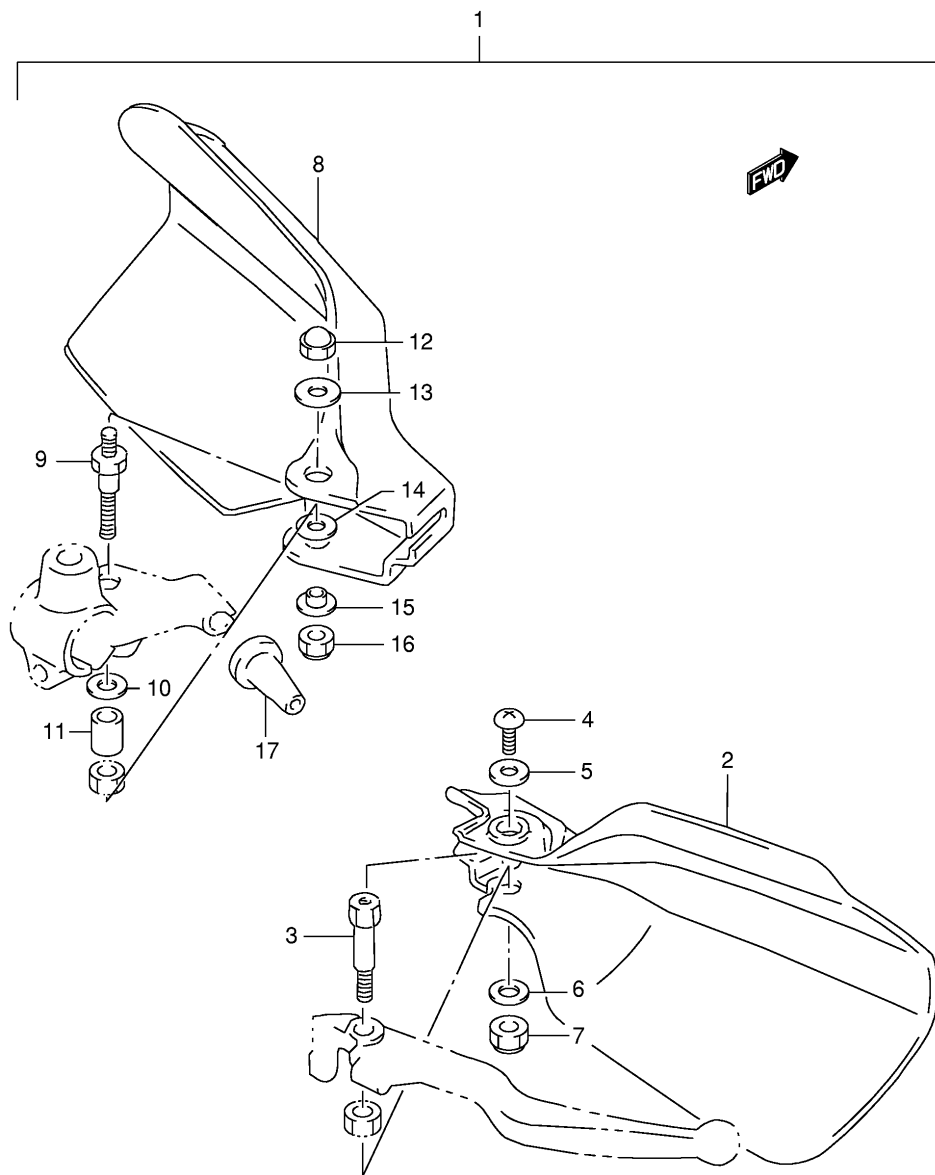



Ref No	Part No	Description
1	57300-05810-019	Cover Set, Knuckle (black)
1	57300-05810-30H	Cover Set, Knuckle (white)
2	57341-05D00-019	• Cover, Knuckle Rh (black)
2	57341-05D00-30H	• Cover, Knuckle Rh (white)
3	57431-05D00	• Bolt
4	02142-05107	• Screw
5	09160-05043	• Washer (5.5x16x1.2)
6	09160-06130	• Washer (6.5x16x1.6)
7	08319-21068	• Nut
8	57541-31D00-019	• Cover, Knuckle Lh (black)
8	57541-31D00-30H	• Cover, Knuckle Lh (white)
9	57531-44B01	• Bolt
10	57533-44B00	• Washer
11	57532-44B00	• Spacer
12	08313-10067	• Nut
13	09160-06066	• Washer (6.5x20x1.6)
14	09160-06019	• Washer (6.5x16x1.2)
15	09169-06055	• Washer
16	08319-21068	• Nut
17	58273-31000	• Boot, Clutch Cable

Ref No	Part No	Description
1	45100-42AA1-E5J	Seat Set (purple)
1	45100-44AA0-E5J	Seat Set (purple) (no Seat Band)
2	08322-01063	. Washer
3	45150-23450	. Cushion, Front Plate
4	45219-44B00	. Spacer, Seat Bracket
5	45117-42AA1	. Bracket, Seat
6	45147-23450	. Cushion, Seat Front
7	08212-06201	. Thrust Washer
8	08316-10063	. Nut
9	45180-42AA0-R32	. Band, Seat (purple)
10	09169-06071	. Washer
11	08212-06201	. Thrust Washer
12	08316-10063	. Nut
13	09329-10001	. Cushion
14	45149-31300	. Cushion
15	45149-43500	. Cushion
16	01550-08123	Bolt
17	45119-42A00	Plate, Seat Front Hook

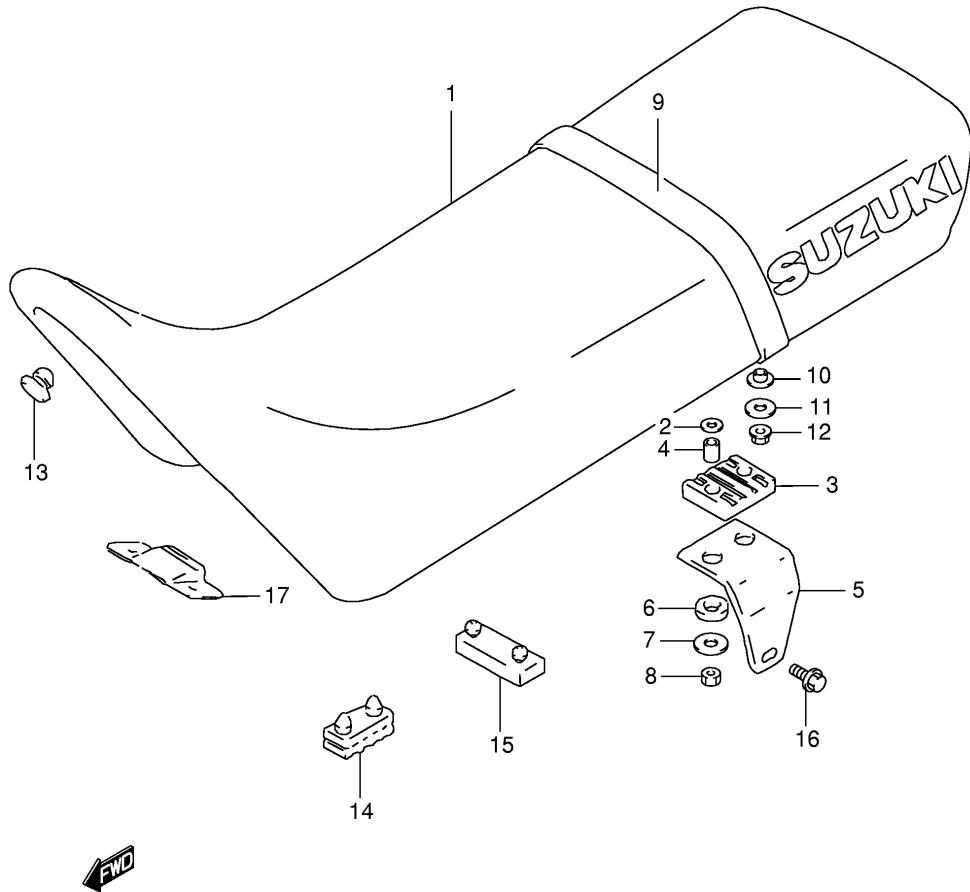


Ref No	Part No	Description
1	45100-44AC0-M0A	Seat Set (maroon/gray)
2	09329-10001	• . Cushion
3	45149-31300	• . Cushion
4	45149-43500	• . Cushion
6	45119-42A00	Plate, Seat Front Hook

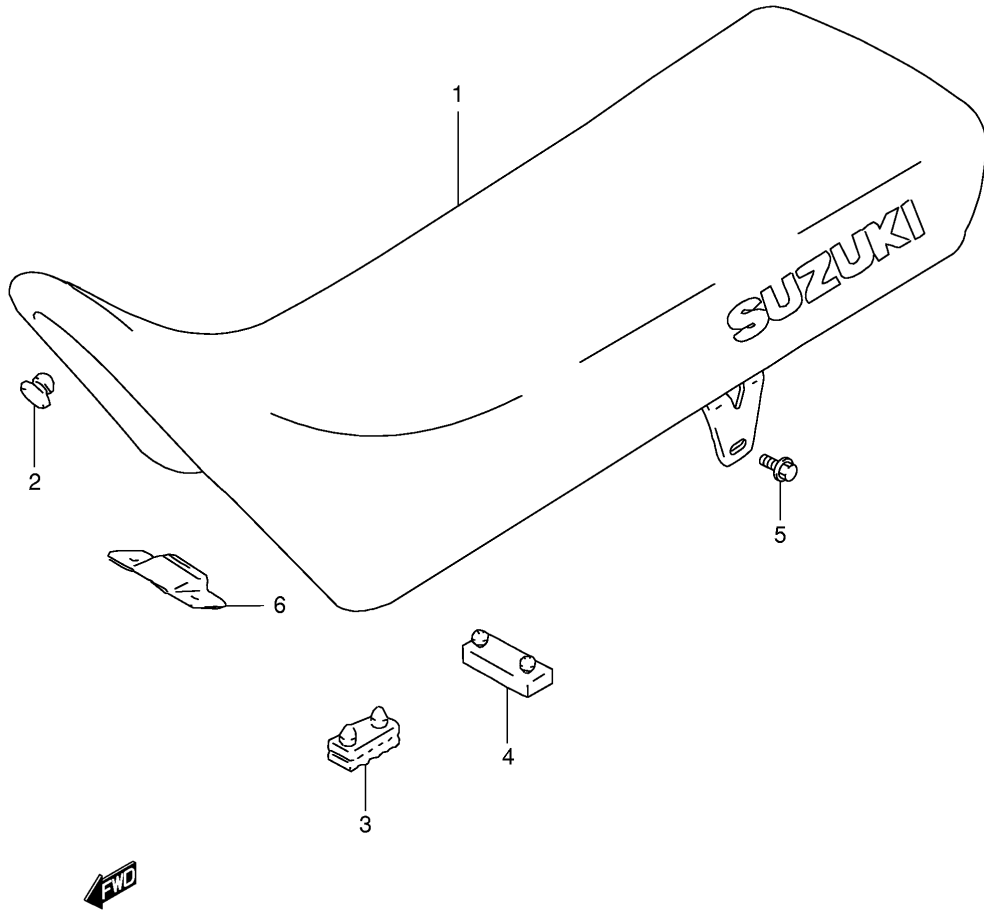


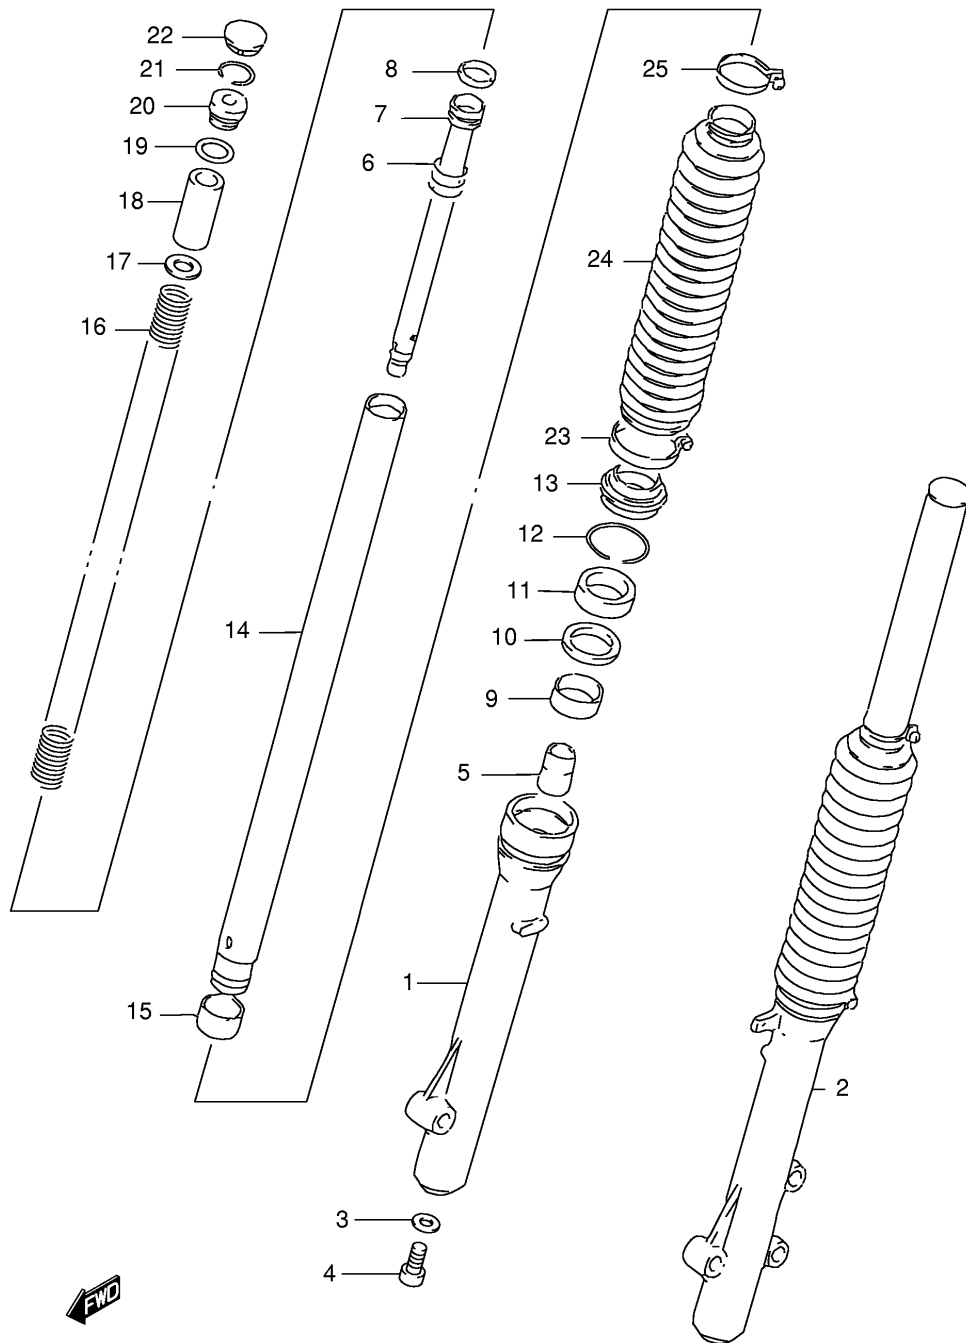


Ref No	Part No	Description
	51103-42AA0	Damper Assy, Front Fork Rh
	51104-42AA0	Damper Assy, Front Fork Lh
1	51131-01A01	. Tube, Outer Rh
2	51141-01A01	. Tube, Outer Lh
3	51148-36011	. Gasket
4	51147-42AA0	. Bolt, Center
5	51195-43530	. Piece, Oil Lock
6	51177-01A00	. Spring, Rebound
7	51146-42AA0	. Cylinder
8	51196-45200	. Ring, Piston
9	51152-33300	. Bush, Guide
10	51168-30B00	. Spacer, Seal
11	51153-19D10	. Seal, Oil
12	51156-01A00	. Ring, Oil Seal Stopper
13	51173-01A00	. Dust Seal
14	51110-01A30	. Tube, Inner
15	51121-33300	. Piston
16	51171-42AA0	. Spring, Main
17	51192-20510	. Seat, Spring
18	51176-42AA0	. Spacer, Spring
19	51181-31030	. O Ring
20	51175-47400	. Seat, Spring
21	51169-47400	. Ring, Stopper
22	51189-31230	. Cap
23	51576-42AA0	Band, Boot Lower
24	51571-01A00-163	Boot (yellow)
25	51575-01A00	Band, Boot Upper

Ref No	Part No	Description
1	51410-42AB0-291	Stem, Steering
2	09265-30009	• . Bearing (30x55x17)
3	51311-44AA0-291	Head, Steering Stem (black)
4	51353-24B00	Nut, Cap
5	51354-14D00	Washer
6	56211-27200-291	Holder, Handle Upper (black)
7	56221-42A00-291	Holder, Handle Lower (black)
8	01550-08353	Bolt
9	56240-42A00	Rubber, Handle Holder
11	56321-28C60	Bolt, Lower Holder
12	56243-42A00	Spacer
13	08319-31107	Nut
15	51452-42A00	Clip
16	01550-10403	Bolt
17	08321-01067	Lock Washer
18	51452-05130	Clip
19	02112-06087	Screw
20	01550-10403	Bolt
21	51452-48700	Clip
22	51530-42A00	Bracket, Headlamp Rh
22	51540-42A00	Bracket, Headlamp Lh
23	51553-34280	Cushion
24	09265-25019	Bearing (25x47x15)
25	51643-01B10	Seal, Steering Upper Dust
26	51631-08D30	Nut, Steering
27	51900-44810	Lock Set, Steering
28	02112-35123	Screw
29	51900-30901	Lock Assy, Steering (neiman)

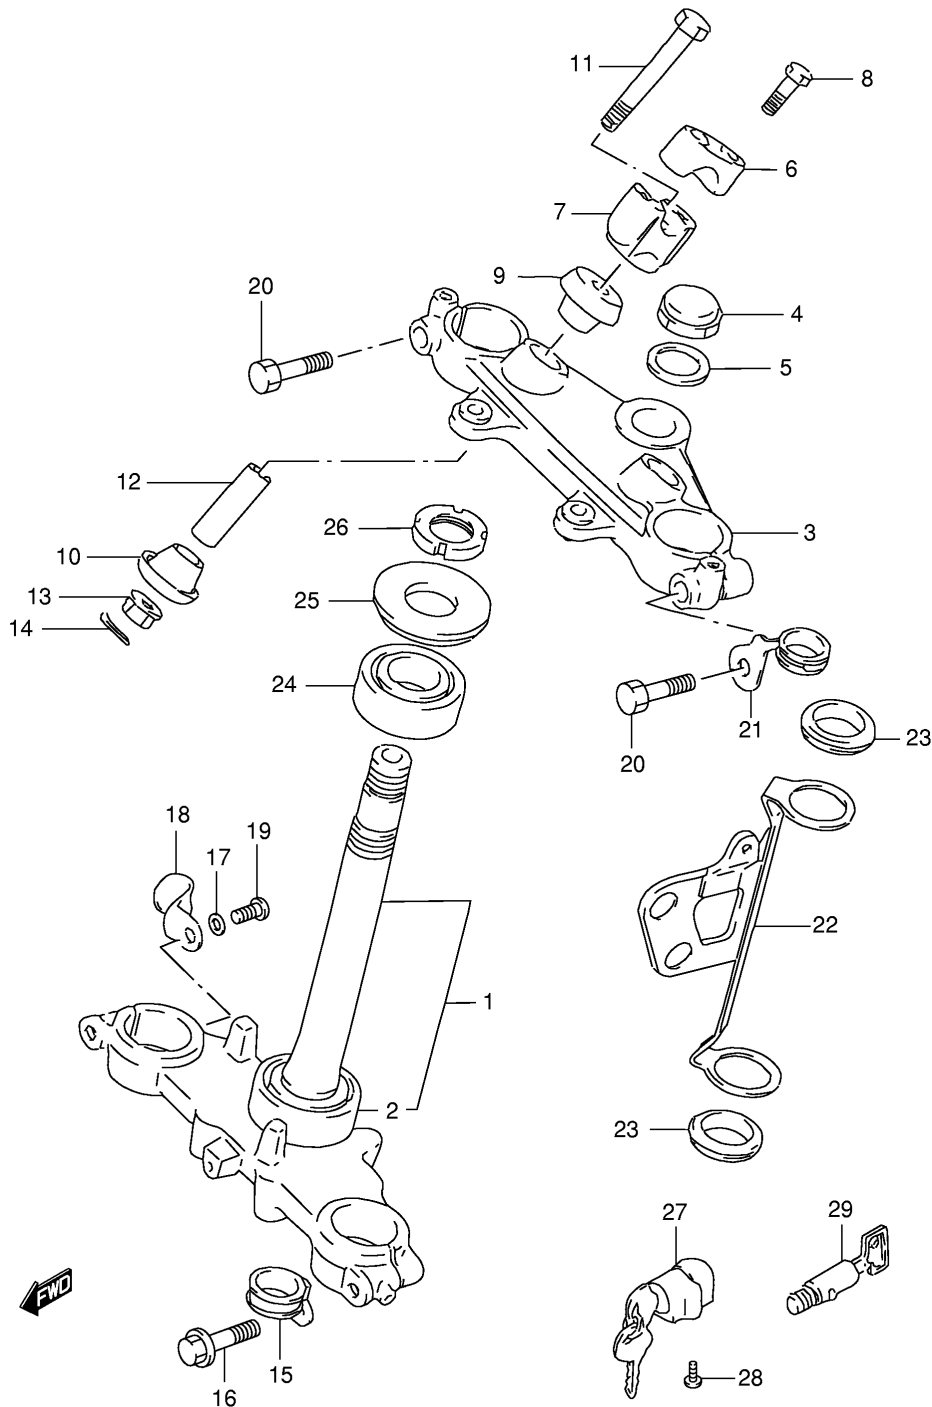


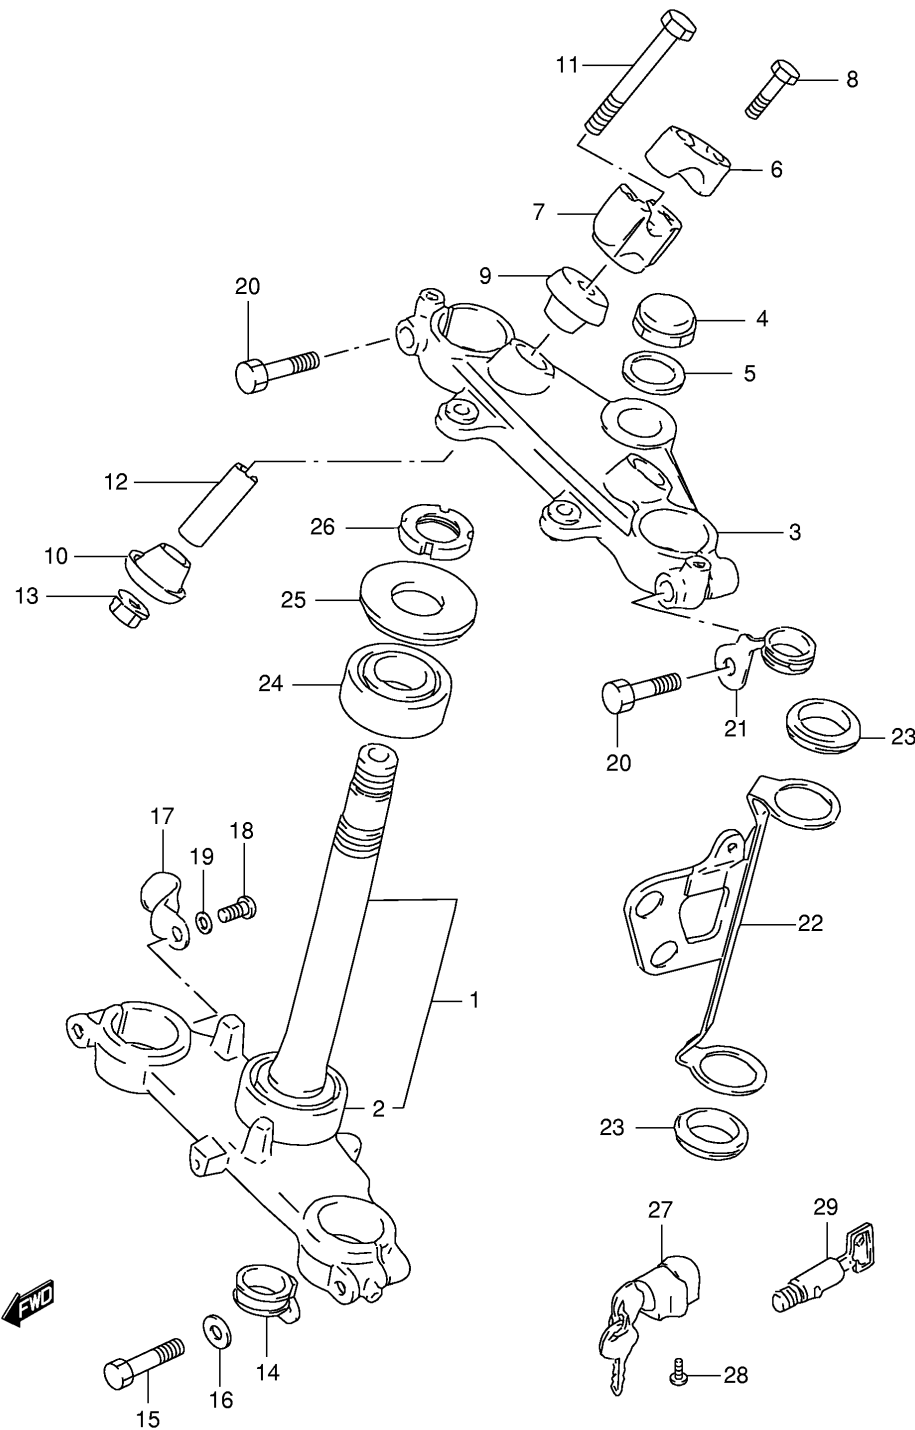

Ref No	Part No	Description
1	51410-42AB0	Stem, Steering (black)
2	09265-30009	• . Bearing (30x55x17)
3	51311-44AA0-291	Head, Steering Stem (black)
4	51353-24B00	Nut, Cap
5	51354-14D00	Washer
6	56211-27200-291	Holder, Handle Upper (black)
7	56221-42A00-291	Holder, Handle Lower (black)
8	01550-08353	Bolt
9	56240-42A00	Rubber, Handle Holder
10	56242-28C60	Rubber, Lower
11	56321-27E00	Bolt, Lower Holder
12	56243-42A00	Spacer
13	08319-31107	Nut
14	51452-42A00	Clip
15	51451-42A00	Bolt
16	08321-01103	Lock Washer
17	51452-05130	Clip
18	02112-06087	Screw
19	08321-01067	Lock Washer
20	01550-10403	Bolt
21	51452-48700	Clip
22	51530-42A00	Bracket, Headlamp Rh
22	51540-42A00	Bracket, Headlamp Lh
23	51553-34280	Cushion
24	09265-25019	Bearing (25x47x15)
25	51643-01B10	Seal, Steering Upper Dust
26	51631-08D30	Nut, Steering
29	51900-30901	Lock Assy, Steering (neiman)

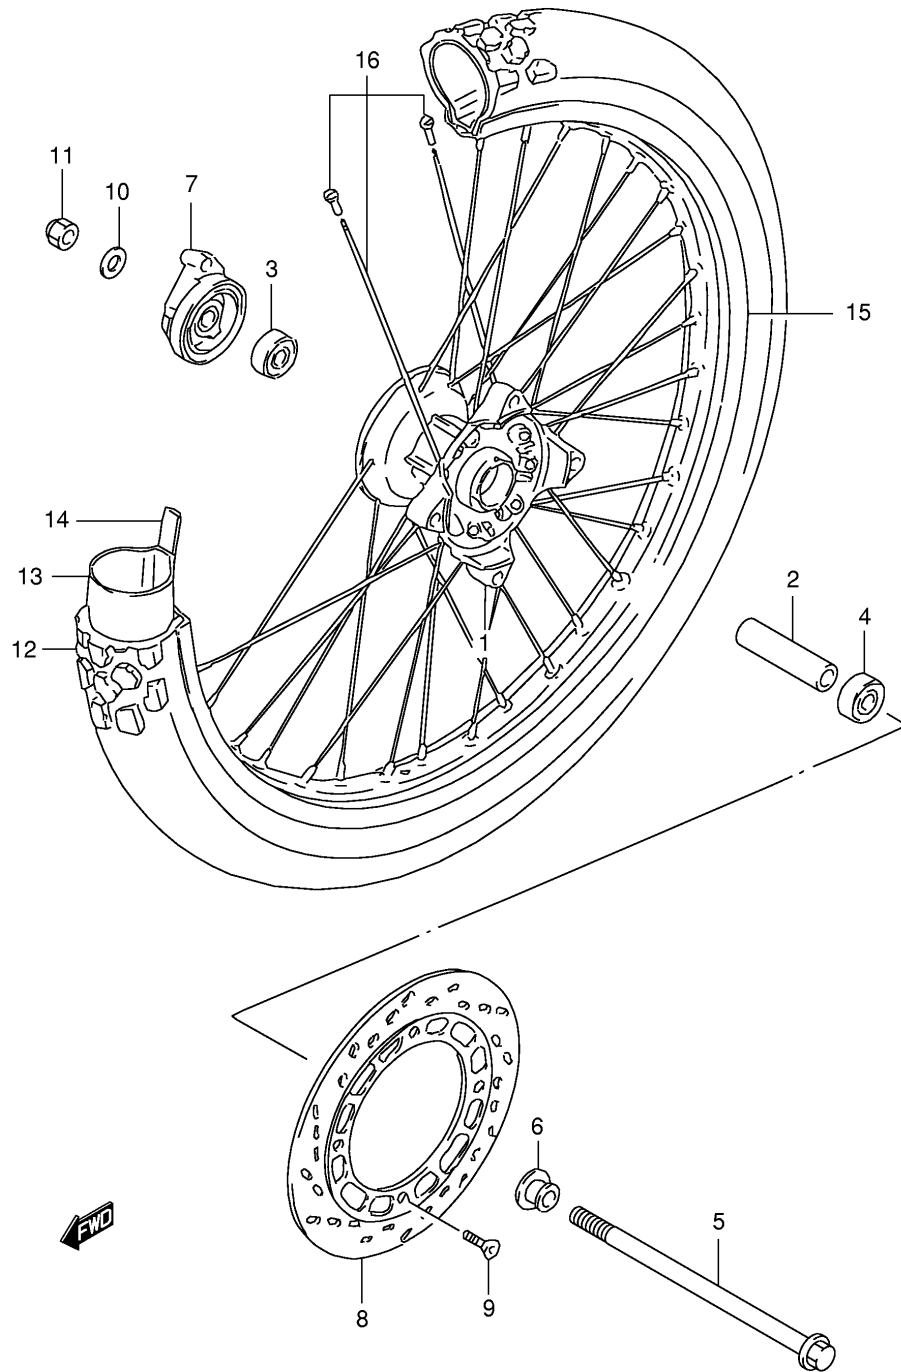


Ref No	Part No	Description
1	54111-44A10	Nub, Front Wheel (silver)
2	09180-12146	Spacer, Hub Bearing (12.5x19x60.50)
3	08113-62017	Bearing, Rh
4	08133-62017	Bearing, Lh
5	54711-44A01	Axle, Front
6	54740-02B40	Spacer, Axle Lh
7	54600-01A00	Box Assy, Speedometer Gear
8	59221-13A01	Disc, Front Brake
9	59421-03A10	Bolt, Disc (8x20)
10	08322-01123	Washer
11	09159-12006	Nut
12	55110-42AA0	Tire, Front (70/100-21 44p) (bridgestone)
13	55200-16510	Tube Assy, Wheel Inner
14	55261-14540	Protector, Inner Tube
15	55311-08D10	Rim, Front Wheel (21x1.60)
16	55320-44A01	Spoke Set, Front Wheel

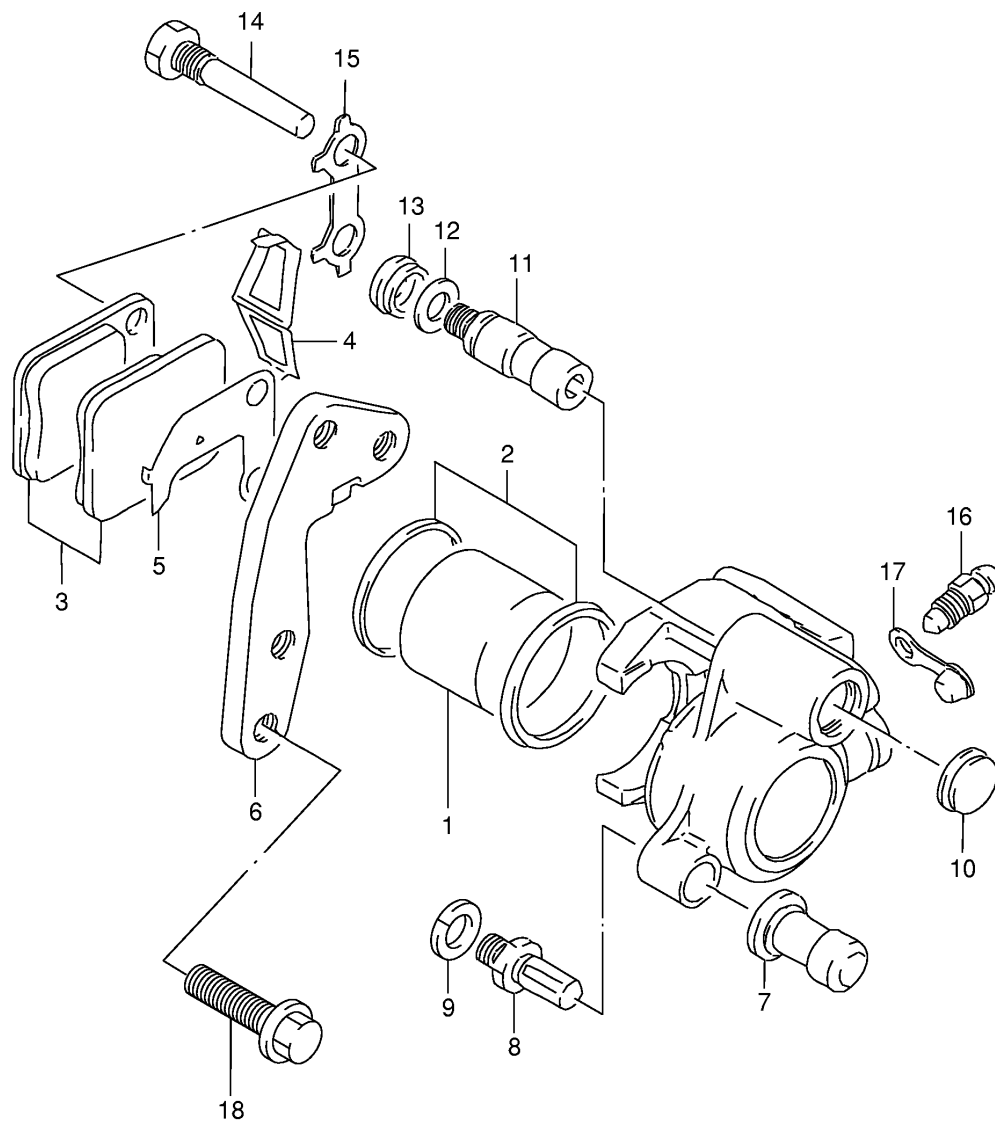


Ref No	Part No	Description
	59300-42A10	Caliper Assy, Front Lh
1	59300-13810	. Piston Set
2	69100-13820	.. Seal Set, Piston
3	59300-42810	. Pad Set
4	59315-13A00	. Spring
5	59371-13A00	. Shim
6	59351-13A01	. Bracket
7	59386-13A00	. Boot
8	59382-13A00	. Bolt
9	59314-13A00	. Washer
10	59384-13A00	. Dust Seal
11	59305-13A01	. Pin
12	59306-13A00	. Spring
13	59303-13A00	. Boot
14	59345-13A00	. Pin
15	59346-13A00	. Washer
16	59121-01A00	. Bleeder
17	59122-01A00	. Cap
18	09103-08269	Bolt (8x30)



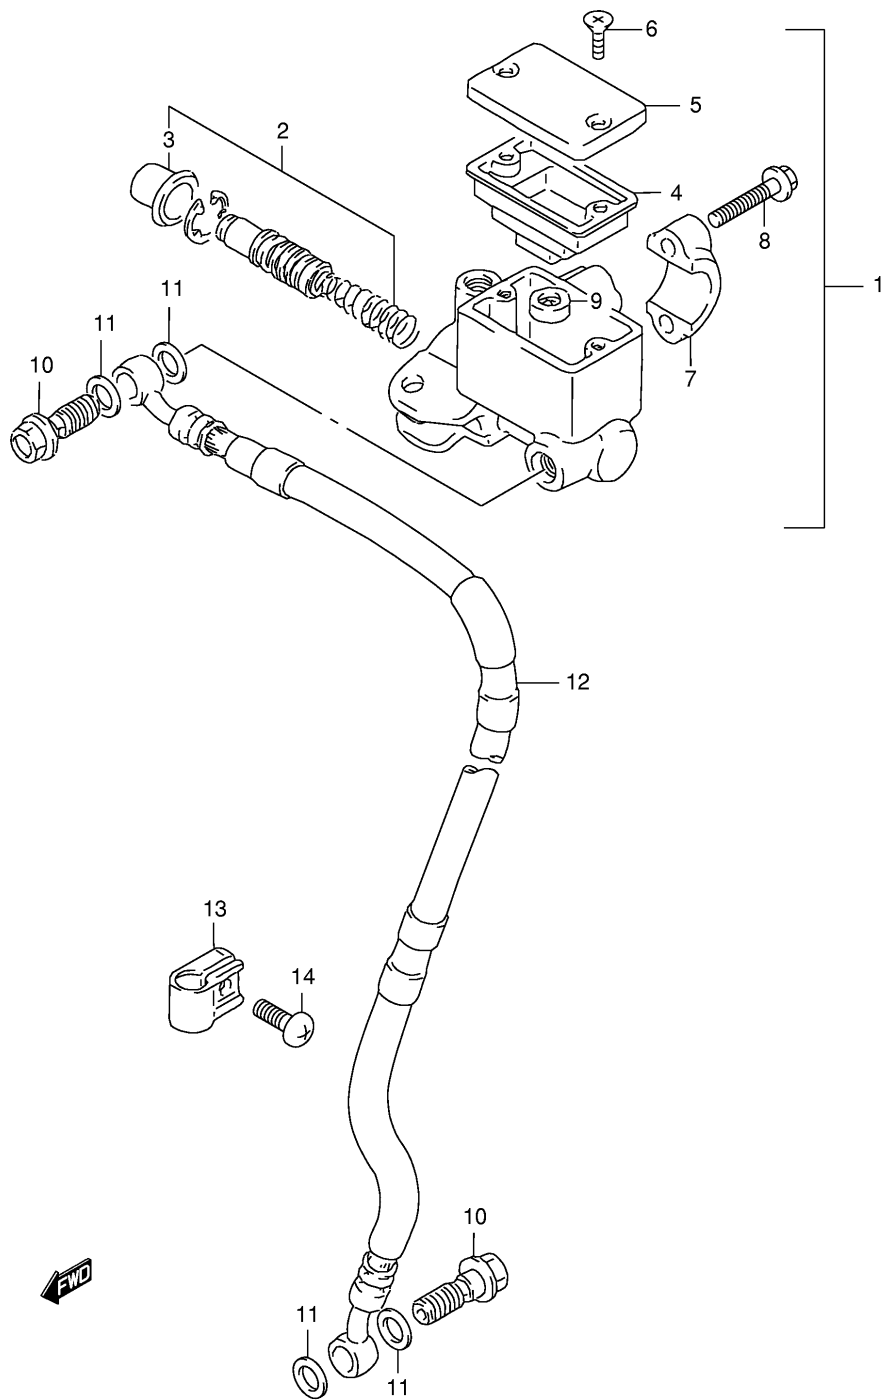


Ref No	Part No	Description
1	59600-03D00	Cylinder Assy, Front Master
2	69600-38810	• . Piston/cup Set
3	59666-44300	•• .. Boot
4	59667-44B00	• . Diaphragm
5	59669-03D00	• . Cap
6	02122-04123	• . Screw
7	59671-03D00	• . Holder
8	59675-27C00	• . Bolt
9	59748-14500	• . Separator
10	09360-10039	Bolt (10x1.00x22)
11	09161-10009	Washer (10x15x1.5)
12	59480-44AA0	Hose, Front Brake
13	58621-07A10	Clamp, Brake Hose
14	02142-06163	Screw


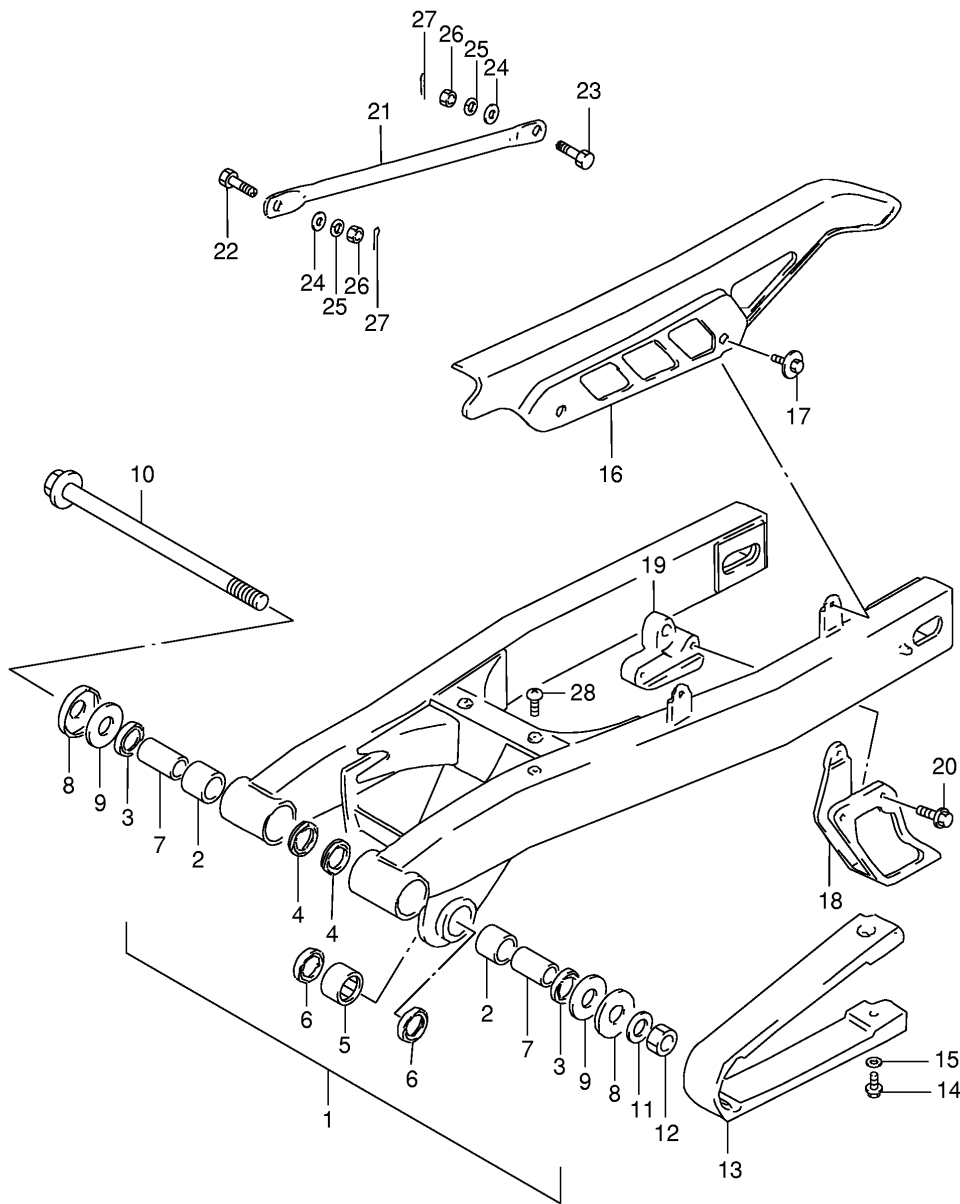


Ref No	Part No	Description
1	61000-44A30-13L	Swinging Arm Assy, Rear (silver)
2	61261-13700	. Bushing, Pivot
3	09283-20031	. Oil Seal (20x27x5)
4	09283-20031	. Oil Seal (20x27x5)
5	09263-20053	. Bearing (20x27x25)
6	62647-44A00	. Seal, Dust (20x27x4)
7	61251-42A00	Spacer, Pivot
8	61262-40400	Cover, Dust Seal
9	08211-14322	Thrust Washer
10	61211-26B01	Shaft, Pivot
11	09160-14027	Washer (14.2x24x2.3)
12	09159-14019	Nut
13	61273-44A00	Buffer, Chain Touch Defense
14	02142-05163	Screw
15	09169-05012	Washer
16	61311-01A03	Case, Chain
17	09116-06096	Bolt (6x10)
18	61341-13A00	Guide, Chain
19	61345-42A00	Rubber, Chain Guide
20	01550-06203	Bolt
21	64311-48700-13L	Torque Link, Rear (silver)
22	09111-08015	Bolt, Front (8x22)
23	09111-08013	Bolt, Rear (8x26.5)
24	08322-01083	Washer
25	09162-08008	Washer
26	09140-08008	Nut
27	04111-20208	Cotter Pin
28	02142-06203	Screw










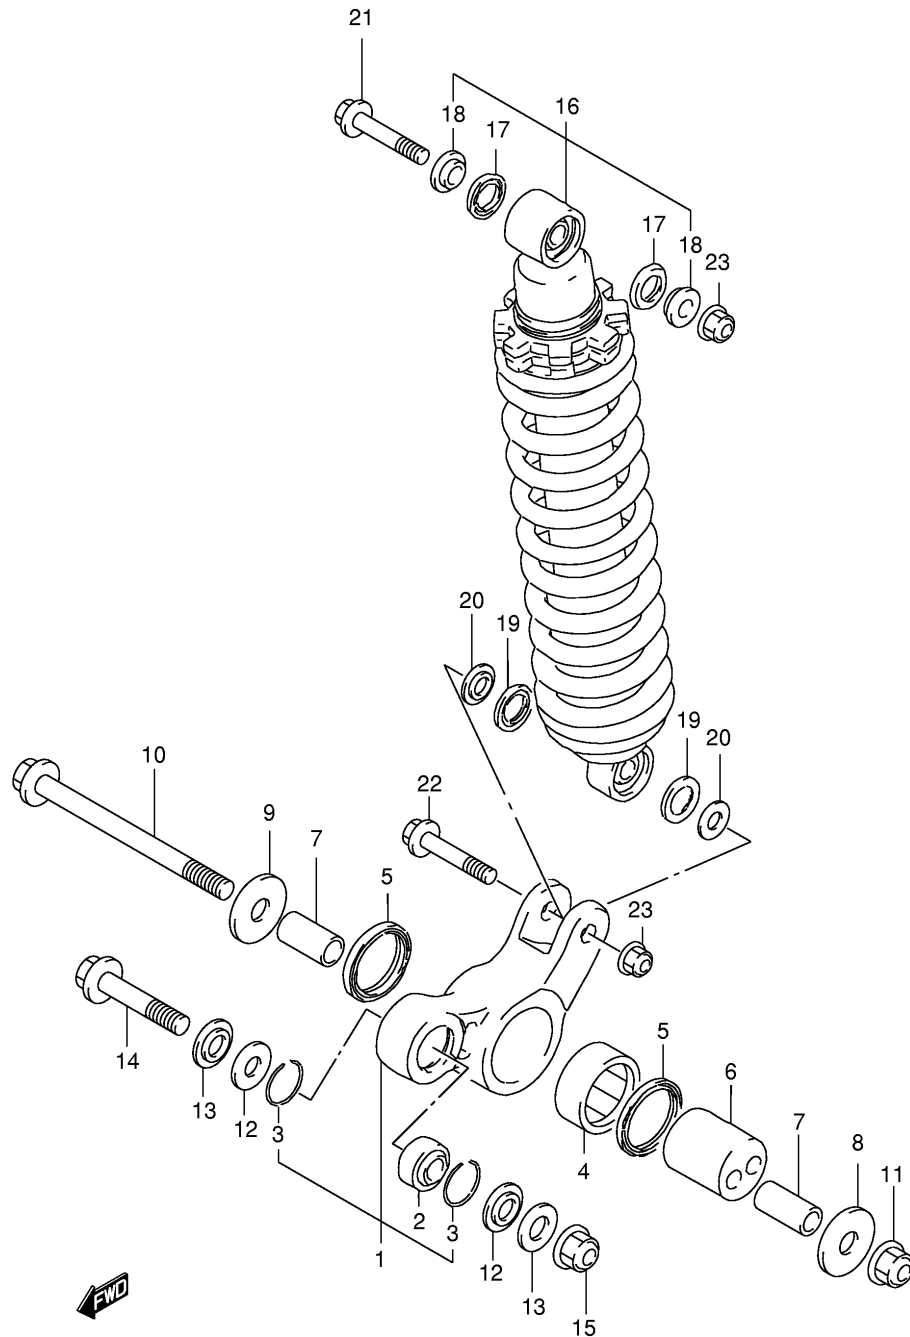

Ref No	Part No	Description
1	62600-42812	Lever Set, Rear Cushion
2	09269-12006	• . Bearing (12x26x16)
3	62277-27C20	• . Ring
4	09263-37003	• . Bearing (37x47x20)
5	62624-42A00	Seal, Dust Inner
6	62623-42A11	Spacer, Rear Suspension
7	62646-42A11	Spacer, Shaft
8	62628-42AA0	Washer, Center Lh (12x40x1)
9	62625-42AA0	Washer, Center Rh (14x40x1)
10	62621-42AA0	Shaft, Center
11	08319-21128	Nut
12	62647-05A00	Seat, Dust Front
13	62316-05A01	Spacer, Front
14	62668-42A02	Bolt, Front
15	08319-31128	Nut
16	62100-44AB1-1TS	Absorber Assy, Rear Shock (white)
17	62226-20900	• . Seal, Dust
18	62684-20900	• . Spacer
19	62226-02B00	• . Seal, Dust Lower
20	62684-31300	• . Collar, Lower
21	62311-14501	Bolt, Upper (10x58)
22	09103-10126	Bolt, Lower (10x48)
23	08319-31107	Nut

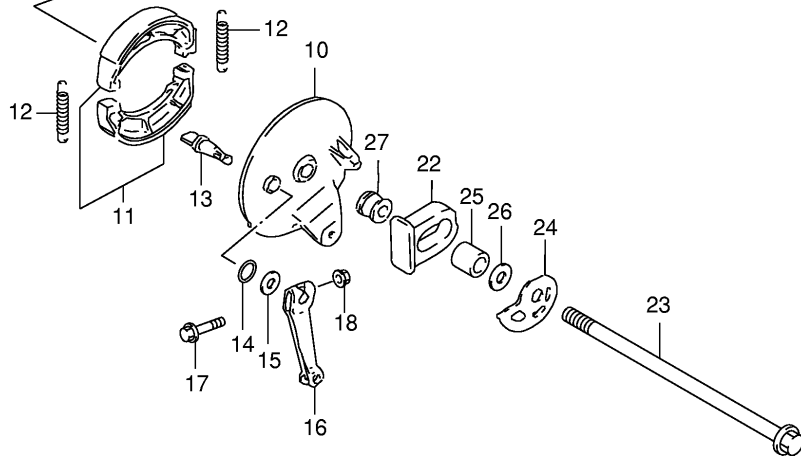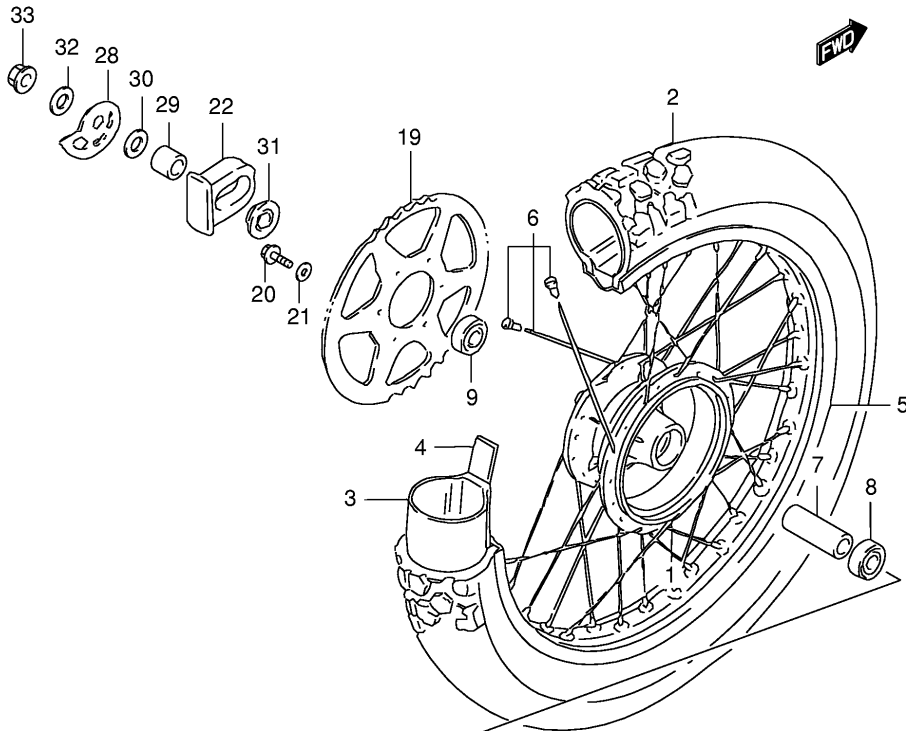

Ref No	Part No	Description
1	64110-44A10	Hub, Rear Wheel (silver)
2	65110-44AA0	Tire, Rear (90/90-18 51p) (bridgestone)
3	65200-44AA0	Tube Assy, Wheel Inner
4	65261-33030	Protector, Inner Tube
5	65311-44AA0	Rim, Rear Wheel (18x1.85)
6	65320-44AA0	Spoke Assy, Rear Wheel
7	09180-15013	Spacer (15.3x21.7x107.50)
8	08143-62027	Bearing, Rh
9	08123-63027	Bearing, Lh
10	64210-44A00	Panel, Rear Brake Anchor (silver)
11	54400-07870	Shoe Set, Brake
12	09443-07001	Spring
13	54441-29305	Cam, Brake
14	09280-14011	O Ring (d:2.5,id:13.8)
15	09160-14055	Washer (14.5x22x1.6)
16	64451-30501	Lever, Rear Brake Cam
17	01550-06403	Bolt
18	08316-10063	Nut
19	64511-44A02	Sprocket, Rear (nt:53)
20	09103-08048	Bolt (8x30)
21	09164-08020	Washer
22	61470-44A00	Cap, Swinging Arm
23	64711-44A11	Axle, Rear
24	61411-42A00	Adjuster, Chain Rh
25	61413-44A00	Spacer, Chain Adjuster
26	09160-15002	Washer (15.5x26x2.3)
27	64741-05200	Spacer, Rear Axle Rh
28	61421-42A00	Adjuster, Chain Lh
29	61413-44A00	Spacer, Chain Adjuster
30	09160-15002	Washer (15.5x26x2.3)
31	64750-05202	Spacer, Rear Axle Lh
32	09160-14033	Washer (14.5x30x3.2)
33	08319-31148	Nut

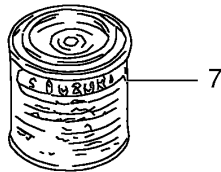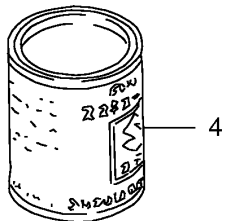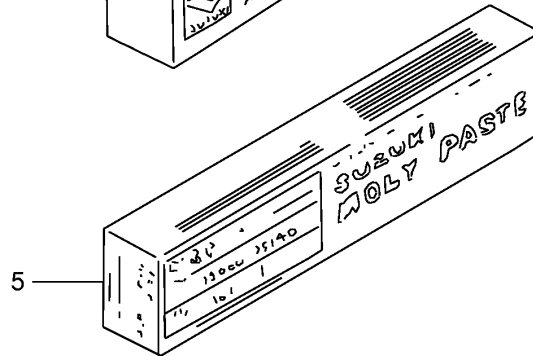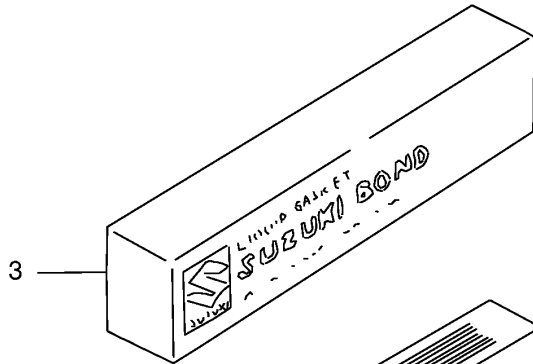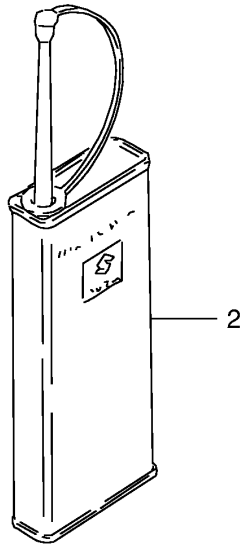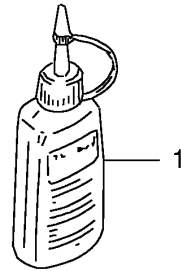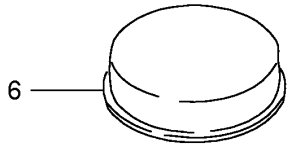

Ref No	Part No	Description
1	99000-32020	Thread Lock Super (1333b)
1	99000-32030	Thread Lock Super (1303b)
1	99000-32050	Thread Lock Super (1342)
1	99000-32100	Thread Lock Super (1305)
1	99000-32130	Thread Lock Super (1360)
2	99000-32040	Thread Lock Cement
3	99000-31110	Suzuki Bond (1215)
3	99000-31140	Suzuki Bond (1207b) Black
4	99000-25030	Suzuki Super Grease
5	99000-25140	Suzuki Moly Paste
6	99000-25110	Grease, Brake Pad (pbc)
7	99000-10109-019	Paint (black)
7	99000-10109-291	Paint (black Semi-gloss)
7	99000-10109-0NF	Paint (dynamic Blue)
7	99000-10209-13L	Paint (bright Silver Metallic)
7	99000-10109-1TS	Paint (special White)
7	99000-10109-Z16	Paint (iris Purple)
7	99000-10209-24K	Paint (light Charcoal Metallic)
7	99000-10209-YC2	Paint (grank Blue Metallic)
7	99000-10209-Y2D	Paint (flash Silver Metallic)
7	99000-10109-30H	Paint (special White)
7	99000-10209-22U	Paint (candy Academy Maroon)